Cable Guide

Part No. 114072-A Rev. C
January 1997

Bay Networks

Bay Networks

4401 Great America Parkway
Santa Clara, CA 95054

8 Federal Street
Billerica, MA 01821

Copyright © 1988–1997 Bay Networks, Inc.

All rights reserved. Printed in the USA. January 1997.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Bay Networks, Inc.

The software described in this document is furnished under a license agreement and may only be used in accordance with the terms of that license. A summary of the Software License is included in this document.

Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notice for All Other Executive Agencies

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Trademarks of Bay Networks, Inc.

ACE, AFN, AN, Bay Networks, BCN, BLN, BN, BNX, CN, FN, FRE, GAME, LN, Optivity, PPX, SynOptics, SynOptics Communications, Wellfleet and the Wellfleet logo are registered trademarks and ANH, ASN, Bay•SIS, BayStack, BCNX, BLNX, EZ Install, EZ Internetwork, EZ LAN, PathMan, PhonePlus, Quick2Config, RouterMan, SPEX, Bay Networks Press, the Bay Networks logo and the SynOptics logo are trademarks of Bay Networks, Inc.

Third-Party Trademarks

All other trademarks and registered trademarks are the property of their respective owners.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Bay Networks, Inc. reserves the right to make changes to the products described in this document without notice.

Bay Networks, Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product are Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Electromagnetic Emissions

Meets requirements of:

FCC Part 15, Class A
EN 55 022 (CISPR 22:1985), Class A <and Class B>
VCCI Class 1 ITE

Canada Requirements Only

Canada CS-03 Rules and Regulations

Note: The Canadian Department of Communications label identifies certified equipment. The certification means that the equipment meets certain telecommunications network protective operations and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent the degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

Canada CS-03 -- Règles et règlements

Note: L’étiquette du ministère des Communications du Canada indique que l’appareillage est certifié, c’est-à-dire qu’il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l’appareillage fonctionnera à la satisfaction de l’utilisateur.

Avant d’installer l’appareillage, s’assurer qu’il peut être branché aux installations du service de télécommunications local. L’appareillage doit aussi être raccordé selon des méthodes acceptées. Dans certains cas, le câblage interne du service de télécommunications utilisé pour une ligne individuelle peut être allongé au moyen d’un connecteur certifié (prolongateur téléphonique). Le client doit toutefois prendre note qu’une telle installation n’assure pas un service parfait en tout temps.

Les réparations de l’appareillage certifié devraient être confiées à un service d’entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l’utilisateur ou de mauvais fonctionnement de l’appareillage, le service de télécommunications peut demander le débranchment de l’appareillage.

Pour leur propre sécurité, les utilisateurs devraient s’assurer que les mises à la terre des lignes de distribution d’électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.

Attention: Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

Canada Requirements Only *(continued)*

D. O. C. Explanatory Notes: Equipment Attachment Limitations

The Canadian Department of Communications label identifies certified equipment. This certification meets certain telecommunication network protective, operational and safety requirements. The department does not guarantee the equipment will operate to the users satisfaction.

Before installing the equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above condition may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Notes explicatives du ministère des Communications: limites visant les accessoires

L'étiquette du ministère des Communications du Canada indique que l'appareillage est certifié, c'est-à-dire qu'il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l'appareillage fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer l'appareillage, s'assurer qu'il peut être branché aux installations du service de télécommunications local. L'appareillage doit aussi être raccordé selon des méthodes acceptées. Dans certains cas, le câblage interne du service de télécommunications utilisé pour une ligne individuelle peut être allongé au moyen d'un connecteur certifié (prolongateur téléphonique). Le client doit toutefois prendre note qu'une telle installation n'assure pas un service parfait en tout temps.

Les réparations de l'appareillage certifié devraient être confiées à un service d'entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l'utilisateur ou de mauvais fonctionnement de l'appareillage, le service de télécommunications peut demander le débranchment de l'appareillage.

Pour leur propre sécurité, les utilisateurs devraient s'assurer que les mises à la terre des lignes de distribution d'électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.

Attention: Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

Canada Requirements Only *(continued)*

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (Access Feeder Node, Access Link Node, Access Node, Access Stack Node, Backbone Concentrator Node, Backbone Concentrator Node Switch, Backbone Link Node, Backbone Link Node Switch, Concentrator Node, Feeder Node, Link Node) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Réglement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (Access Feeder Node, Access Link Node, Access Node, Access Stack Node, Backbone Concentrator Node, Backbone Concentrator Node Switch, Backbone Link Node, Backbone Link Node Switch, Concentrator Node, Feeder Node, Link Node) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Réglement sur le brouillage radioélectrique du ministère des Communications du Canada.

Bay Networks Software License

Note: This is Bay Networks basic license document. In the absence of a software license agreement specifying varying terms, this license -- or the license included with the particular product -- shall govern licensee's use of Bay Networks software.

This Software License shall govern the licensing of all software provided to licensee by Bay Networks ("Software"). Bay Networks will provide licensee with Software in machine-readable form and related documentation ("Documentation"). The Software provided under this license is proprietary to Bay Networks and to third parties from whom Bay Networks has acquired license rights. Bay Networks will not grant any Software license whatsoever, either explicitly or implicitly, except by acceptance of an order for either Software or for a Bay Networks product ("Equipment") that is packaged with Software. Each such license is subject to the following restrictions:

1. Upon delivery of the Software, Bay Networks grants to licensee a personal, nontransferable, nonexclusive license to use the Software with the Equipment with which or for which it was originally acquired, including use at any of licensee's facilities to which the Equipment may be transferred, for the useful life of the Equipment unless earlier terminated by default or cancellation. Use of the Software shall be limited to such Equipment and to such facility. Software which is licensed for use on hardware not offered by Bay Networks is not subject to restricted use on any Equipment, however, unless otherwise specified on the Documentation, each licensed copy of such Software may only be installed on one hardware item at any time.
2. Licensee may use the Software with backup Equipment only if the Equipment with which or for which it was acquired is inoperative.
3. Licensee may make a single copy of the Software (but not firmware) for safekeeping (archives) or backup purposes.
4. Licensee may modify Software (but not firmware), or combine it with other software, subject to the provision that those portions of the resulting software which incorporate Software are subject to the restrictions of this license. Licensee shall not make the resulting software available for use by any third party.
5. Neither title nor ownership to Software passes to licensee.
6. Licensee shall not provide, or otherwise make available, any Software, in whole or in part, in any form, to any third party. Third parties do not include consultants, subcontractors, or agents of licensee who have licensee's permission to use the Software at licensee's facility, and who have agreed in writing to use the Software only in accordance with the restrictions of this license.
7. Third-party owners from whom Bay Networks has acquired license rights to software that is incorporated into Bay Networks products shall have the right to enforce the provisions of this license against licensee.
8. Licensee shall not remove or obscure any copyright, patent, trademark, trade secret, or similar intellectual property or restricted rights notice within or affixed to any Software and shall reproduce and affix such notice on any backup copy of Software or copies of software resulting from modification or combination performed by licensee as permitted by this license.

Bay Networks Software License *(continued)*

9. Licensee shall not reverse assemble, reverse compile, or in any way reverse engineer the Software. [Note: For licensees in the European Community, the Software Directive dated 14 May 1991 (as may be amended from time to time) shall apply for interoperability purposes. Licensee must notify Bay Networks in writing of any such intended examination of the Software and Bay Networks may provide review and assistance.]
10. Notwithstanding any foregoing terms to the contrary, if licensee licenses the Bay Networks product "Site Manager," licensee may duplicate and install the Site Manager product as specified in the Documentation. This right is granted solely as necessary for use of Site Manager on hardware installed with licensee's network.
11. This license will automatically terminate upon improper handling of Software, such as by disclosure, or Bay Networks may terminate this license by written notice to licensee if licensee fails to comply with any of the material provisions of this license and fails to cure such failure within thirty (30) days after the receipt of written notice from Bay Networks. Upon termination of this license, licensee shall discontinue all use of the Software and return the Software and Documentation, including all copies, to Bay Networks.
12. Licensee's obligations under this license shall survive expiration or termination of this license.

Contents

About This Guide

Conventions xix
Acronyms xix
Ordering Bay Networks Publications xx

Technical Support and Online Services

Bay Networks Customer Service xxii
Bay Networks Information Services xxiii
World Wide Web xxiii
Customer Service FTP xxiii
Support Source CD xxiv
CompuServe xxiv
InfoFACTS xxv
How to Get Help xxv

•

Chapter 1
Cable Basics

Before You Begin 1-2
How to Use This Guide 1-2
Finding Cables by Category 1-3
Finding Cables by Order Number or Description 1-4
Cable Connector Basics 1-8
Connector Terminology 1-8
Connector Types 1-9
Building Your Own Cables 1-11

Chapter 2
Console/Modem Cables

Console Interface to ASCII Terminal (Order No. 7525) 2-3

AFN/AN Console Interface to ASCII Terminal (Order No. 7526) 2-4
AT Serial Console (Order No. 7527) 2-5
Console/Modem Interface to RS-232-C Modem
(Order No. 7825) 2-6
Backbone Console Interface to RS-232-C Modem
(Order No. 77850) 2-7

Chapter 3
LAN Cables

Ethernet Cable (Order No. 7115) 3-3
Token Ring MAU Cable (Order No. 7125) 3-4
Token Ring MAU Cable with Ferrite Bead (Order No. 7126) 3-5
Token Ring to RJ-11 Cable (Order No. 7128) 3-6
FDDI FSD to FSD (Order No. 7135) 3-7
FDDI FSD to Straight Tip (Order No. 7136) 3-7
FDDI-type SC Duplex to Straight Tip
(Order No. 7164 for Single-Mode Cable) 3-8
FDDI-type SC Duplex to SC Duplex
(Order No. 7163 for Multimode Cable)
(Order No. 7165 for Single-Mode Cable) 3-9
ATM Cable, SC to Straight Tip MMF (Order No. 7169) 3-10

Chapter 4
HSSI Cables

HSSI DCE to DTE
(10 Ft: Order No. 7830; 50 Ft: Order No. 7831) 4-3
HSSI Crossover (Order No. 7832) 4-5

Chapter 5
E1/T1 Cables

MCE1 DB9 to Mod Jack Cable (Order No. AA0018001) 5-4
MCE1 DB9 to Unterminated Cable (Order No. AA0018002) 5-5
Quad MCT1 Cable (Order No. AA0018006) 5-6
MCE1 RJ-45 to RJ-45 Cable (Order No. AA0018014) 5-7
MCE1 RJ-45 to Unterminated Cable (Order No. AA0018015) 5-8
Quad MCT1 15-Pin to 15-Pin Crossover Cable
(Order No. AA0018021) 5-9
Quad MCT1 15-Pin to 15-Pin Straight-through Cable
(Order No. AA0018022) 5-10

MCT1 Clock Cable (Order No. 7150) 5-11
MCT1 15-Pin Loopback Connector (Order No. 7151) 5-12
MCT1 RJ-48 Loopback Connector (Order No. 7152) 5-13
MCT1 Crossover Cable (Order No. 7153) 5-14
MCT1 Loopback Cable (Order No. 7154) 5-15
MCT1 Loopback Cable (Order No. 7155) 5-16
MCT1 Straight-through Cable (Order No. 7156) 5-17
MCT1 Straight-through Cable (Order No. 7157) 5-18
MCE1 Crossover Cable (Order No. 7160) 5-19
MCE1 Straight-through Cable (Order No. 7161) 5-20
MCE1 Coaxial Cable (Order No. 7162) 5-21
MCE1 DB9 to DB15 Straight-through Cable (Order No. 7167) 5-22
MCE1 DB9 to DB15 Crossover Cable (Order No. 7168) 5-23
T1 to CSU DTE (Order No. 7401) 5-24
T1 to Customer Premise Equipment (Order No. 7415) 5-25
CSU Network Receptacle to RJ-45 (Order No. 7650) 5-26
CSU Network Receptacle to Spade Terminals (Order No. 7750) 5-27

Chapter 6
Standard Synchronous Cables

15-Pin to F X.21 Synchronous Pass-through (Order No. AA0018003) 6-4
44-Pin F X.21 Synchronous Pass-through (Order No. AA0018004) 6-6
50-Pin to F X.21 Synchronous Pass-through (Order No. AA0018005) 6-8
15-Pin to RS-530 Straight-through (Order No. AA0018011) 6-10
44-Pin to RS-530 Straight-through (Order No. AA0018012) 6-12
50-Pin to RS-530 Straight-through (Order No. AA0018013) 6-14
50-Pin to V.28 Cable (Order No. AA0018023) 6-16
15-Pin to V.35M (Order No. 7158) 6-17
44-Pin to V.35M (Order No. 7159) 6-18
15-Pin D-Sub to V.35: No DTR, for WAN (Order No. 7215) 6-20
15-Pin D-Sub to V.35 with DTR (Order No. 7216) 6-22
RS-232 Pass-through: 15-Pin to RS-232 (Order No. 7218) 6-23
V.35 Pass-through: 15-Pin to V.35 (Order No. 7219) 6-24

44-Pin D-Sub to V.35: Leased Line or V.25bis (Order No. 7220) 6-26
15-Pin D-Sub to X.21 (Order No. 7221) 6-28
44-Pin D-Sub to X.21 (Order No. 7224) 6-29
15-Pin D-Sub to RS-232 (Order No. 7255) 6-30
15-Pin D-Sub to V.28 (Order No. 7256) 6-31
15-Pin Crossover (Order No. 7260) 6-32
15-Pin D-Sub to RS-422 (Order No. 7315) 6-34
44-Pin D-Sub to RS-422: Leased Line or V.25bis (Order No. 7318) 6-36
44-Pin D-Sub to RS-232: Leased Line or V.25bis (Order No. 7826) 6-38
RS-232 Pass-through: 44-Pin to RS-232 (Order No. 7833) 6-39
V.35 Pass-through: 44-Pin to V.35 (Order No. 7834) 6-40
V.35 Crossover: 44-Pin to 44-Pin (Order No. 7835) 6-42
V.35 Crossover: 44-Pin to 15-Pin (Order No. 7836) 6-44
44-Pin D-Sub to V.28 (Order No. 7837) 6-46
50-Pin to V.35 (Order No. 7932) 6-48
50-Pin to RS-232 (Order No. 7934) 6-50
50-Pin to X.21 (Order No. 7936) 6-51
50-Pin to RS-422 (Order No. 7937) 6-52
50-Pin to 50-Pin Crossover (Order No. 7938) 6-54
50-Pin to 15-Pin Crossover (Order No. 7939) 6-56
50-Pin to 44-Pin Crossover (Order No. 7940) 6-58
15-Pin to F RS-232 Synchronous Pass-through (Order No. 7941) 6-60
15-Pin to F V.35 Synchronous Pass-through (Order No. 7942) 6-61
44-Pin to F RS-232 Synchronous Pass-through (Order No. 7943) 6-62
44-Pin to F V.35 Synchronous Pass-through (Order No. 7944) 6-63
50-Pin to F RS-232 Synchronous Pass-through (Order No. 7945) 6-65
50-Pin to F V.35 Synchronous Pass-through (Order No. 7946) 6-66

Chapter 7
Dialup Services Cables

15-Pin D-Sub to RS-422: V.25bis (Order No. 7116) 7-3
15-Pin D-Sub to RS-422: Raise DTR (Order No. 7117) 7-5

15-Pin D-Sub to RS-232: Raise DTR (Order No. 7118) 7-7
15-Pin D-Sub to RS-232: V.25bis (Order No. 7119) 7-8
15-Pin D-Sub to V.35: V.25bis (Order No. 7120) 7-9
15-Pin D-Sub to V.35: Raise DTR (Order No. 7121) 7-10
44-Pin D-Sub to V.35: Raise DTR (Order No. 7137) 7-11
44-Pin D-Sub to RS-232: Raise DTR (Order No. 7138) 7-13
44-Pin D-Sub to RS-422: Raise DTR (Order No. 7139) 7-15
50-Pin to V.35 with Raise DTR (Order No. 7933) 7-17
50-Pin to RS-232 with Raise DTR (Order No. 7935) 7-19

Chapter 8
Cable Adapters

44-Pin to 15-Pin RS-232 Cable Adapter (Order No. 7122) 8-3
44-Pin to 15-Pin X.21 Cable Adapter (Order No. 7123) 8-5
44-Pin to 15-Pin V.35 Cable Adapter (Order No. 7124) 8-7
44-Pin to 15-Pin RS-422 Cable Adapter (Order No. 7131) 8-9
50-Pin to 44-Pin Cable Adapter (Order No. 7947) 8-11
50-Pin to 15-Pin V.35 Cable Adapter (Order No. 7948) 8-14
50-Pin to 15-Pin RS-422 Cable Adapter (Order No. AA0018024) 8-16

Index

Figures

Figure 1-1. Connector Types 1-10

Tables

Table 1-1. Cable Category Locations 1-3
Table 1-2. Cables Listed by Order Number 1-4
Table 1-3. Connector Terms 1-8
Table 2-1. Console/Modem Cables 2-1
Table 3-1. Local Area Network Cables 3-1
Table 4-1. HSSI Cables 4-1
Table 5-1. E1/T1 Cables 5-1
Table 6-1. Standard Synchronous Cables 6-1
Table 7-1. Dialup Services Cables 7-1
Table 8-1. Console/Modem Cables 8-1

About This Guide

If you are responsible for installing Bay Networks® router hardware platforms, read this guide to discover how to attach the correct cables to the router you are installing. This guide provides

- Cable connector diagrams
- Pin/socket wiring configurations

Conventions

italic text	Indicates variable values in command syntax descriptions, new terms, file and directory names, and book titles.
separator (>)	Separates menu and option names in instructions and internal pin-to-pin wire connections. Example: Protocols > AppleTalk identifies the AppleTalk option in the Protocols menu. Example: Pin 7 > 19 > 20

Acronyms

ATM	asynchronous transfer mode
AUI	Attachment Unit Interface
CCITT	International Telegraph and Telephone Consultative Committee (now ITU-T)
CPE	Customer Premise Equipment
CSMA/CD	carrier sense multiple access with collision detection
CSU	channel service unit
DCE	data communications equipment

DSU	digital service unit
DTE	data terminal equipment
DTR	data terminal ready
EIA	Electronic Industries Association
FC	Fiber Channel
FDDI	Fiber Distributed Data Interface
FSD	fixed shroud duplex
HSSI	High-Speed Serial Interface
IEEE	Institute of Electrical and Electronic Engineers
LAN	local area network
MAU	media access unit/multistation access unit
PMD	Physical Medium Dependent
SC	Subscriber Connector
STP	shielded twisted pair
WAN	wide area network

Ordering Bay Networks Publications

To purchase additional copies of this document or other Bay Networks publications, order by part number from the Bay Networks Press™ at the following telephone or fax numbers:

- Telephone - U.S./Canada 1-888-4BAYPRESS
- Telephone - International 1-510-490-4752
- Fax 1-510-498-2609

You can also use these numbers to request a free catalog of Bay Networks Press product publications.

Technical Support and Online Services

To ensure comprehensive network support to our customers and partners worldwide, Bay Networks Customer Service has Technical Response Centers in key locations around the globe:

- Billerica, Massachusetts
- Santa Clara, California
- Sydney, Australia
- Tokyo, Japan
- Valbonne, France

The Technical Response Centers are connected via a redundant Frame Relay Network to a Common Problem Resolution system, enabling them to transmit and share information, and to provide live, around-the-clock support 365 days a year.

Bay Networks Information Services complement the Bay Networks Service program portfolio by giving customers and partners access to the most current technical and support information through a choice of access/retrieval means. These include the World Wide Web, CompuServe, Support Source CD, Customer Service FTP, and InfoFACTS document fax service.

Bay Networks Customer Service

If you purchased your Bay Networks product from a distributor or authorized reseller, contact that distributor's or reseller's technical support staff for assistance with installation, configuration, troubleshooting, or integration issues.

Customers can also purchase direct support from Bay Networks through a variety of service programs. As part of our PhonePlus™ program, Bay Networks Service sets the industry standard, with 24-hour, 7-days-a-week telephone support available worldwide at no extra cost. Our complete range of contract and noncontract services also includes equipment staging and integration, installation support, on-site services, and replacement parts delivery -- with response times ranging to 4 hours, depending on local country conditions.

To purchase any of the Bay Networks support programs, or if you have questions on program features, use the following numbers:

Region	Telephone Number	Fax Number
United States and Canada	1-800-2LANWAN; enter Express Routing Code (ERC) 290 when prompted (508) 916-8880 (direct)	(508) 670-8766
Europe	(33) 92-4-968-300	(33) 92-4-968-301
Asia/Pacific	(612) 9927-8800	(612) 9927-8811
Latin America	(561) 988-7661	(561) 988-7750

In addition, you can receive information on support programs from your local Bay Networks field sales office, or purchase Bay Networks support directly from your authorized partner.

Bay Networks Information Services

Bay Networks Information Services provide up-to-date support information as a first-line resource for network administration, expansion, and maintenance. This information is available from a variety of sources.

World Wide Web

The Bay Networks Customer Support Web Server offers a diverse library of technical documents, software agents, and other important technical information to Bay Networks customers and partners.

A special benefit for contracted customers and resellers is the ability to access the Web Server to perform Case Management. This feature enables your support staff to interact directly with the network experts in our worldwide Technical Response Centers. A registered contact with a valid Site ID can

- View a listing of support cases and determine the current status of any open case. Case history data includes severity designation, and telephone, e-mail, or other logs associated with the case.
- Customize the listing of cases according to a variety of criteria, including date, severity, status, and case ID.
- Log notes to existing open cases.
- Create new cases for rapid, efficient handling of noncritical network situations.
- Communicate directly via e-mail with the specific technical resources assigned to your case.

The Bay Networks URL is *http://www.baynetworks.com*. Customer Service is a menu item on that home page.

Customer Service FTP

Accessible via URL *ftp://support.baynetworks.com* (134.177.3.26), this site combines and organizes support files and documentation for the entire Bay Networks product suite. Central management and sponsorship of this FTP site lets you quickly locate information on any of your Bay Networks products.

Support Source CD

This CD-ROM -- sent quarterly to all contracted customers -- is a complete Bay Networks Service troubleshooting knowledge database with an intelligent text search engine.

The Support Source CD contains extracts from our problem-tracking database; information from the Bay Networks Forum on CompuServe; comprehensive technical documentation, such as Customer Support Bulletins, Release Notes, software patches and fixes; and complete information on all Bay Networks Service programs.

You can run a single version on Macintosh, Windows 3.1, Windows 95, Windows NT, DOS, or UNIX computing platforms. A Web links feature enables you to go directly from the CD to various Bay Networks Web pages.

CompuServe

For assistance with noncritical network support issues, Bay Networks Information Services maintain an active forum on CompuServe, a global bulletin-board system. This forum provides file services, technology conferences, and a message section to get assistance from other users.

The message section is monitored by Bay Networks engineers, who provide assistance wherever possible. Customers and resellers holding Bay Networks service contracts also have access to special libraries for advanced levels of support documentation and software. To take advantage of CompuServe's recently enhanced menu options, the Bay Networks Forum has been redesigned to allow links to our Web sites and FTP sites.

We recommend the use of CompuServe Information Manager software to access these Bay Networks Information Services resources. To open an account and receive a local dial-up number in the United States, call CompuServe at 1-800-524-3388. Outside the United States, call 1-614-529-1349, or your nearest CompuServe office. Ask for Representative No. 591. When you are online with your CompuServe account, you can reach us with the command **GO BAYNET**.

InfoFACTS

InfoFACTS is the Bay Networks free 24-hour fax-on-demand service. This automated system has libraries of technical and product documents designed to help you manage and troubleshoot your Bay Networks products. The system responds to a fax from the caller or to a third party within minutes of being accessed.

To use InfoFACTS in the United States or Canada, call toll-free 1-800-786-3228. Outside North America, toll calls can be made to 1-408-495-1002. In Europe, toll-free numbers are also available for contacting both InfoFACTS and CompuServe. Please check our Web page for the listing in your country.

How to Get Help

Use the following numbers to reach your Bay Networks Technical Response Center:

Technical Response Center	Telephone Number	Fax Number
Billerica, MA	1-800-2LANWAN	(508) 670-8765
Santa Clara, CA	1-800-2LANWAN	(408) 764-1188
Valbonne, France	(33) 92-4-968-968	(33) 92-4-966-998
Sydney, Australia	(612) 9927-8800	(612) 9927-8811
Tokyo, Japan	(81) 3-5402-0180	(81) 3-5402-0173

Chapter 1
Cable Basics

This guide provides all the information you need to find a specific cable for your Bay Networks router hardware platform. This chapter explains

- What you need to know
- How to use this guide
  - -- How to find cables by category
  - -- How to find cables by order number or description
- Some basics about cable connectors, including
  - -- Connector terminology
  - -- Basic connector types
- How to build your own cables

If you want to build a cable to meet special requirements, this guide also provides pinout information and references to the appropriate industry specification, standard, or recommendation documents. Recommended documents typically contain technical information to help you determine your requirements for cable installation path, cable type, maximum cable length, and so on.

Before You Begin

To ensure that you order, make, or use the appropriate cable for your router hardware platform, first answer the following questions:

- What is the connection category, order number, or physical description of the cable I want to find?
- What type of physical interface am I connecting to, and what type of cable connector (plug or receptacle) do I need to make this connection?

Note: Determining the connector type you need can significantly decrease the time it takes to locate the appropriate cable. For example, if you want to connect to a 44-position synchronous interface, look only for synchronous cables with 44-pin plugs.

- What type of device do I want to connect to the router hardware platform's physical interface? For example, do you want to connect a modem or a console to the router hardware platform? Each function requires a different cable, even though you connect to the same physical interface on the router hardware platform.
- What version of software is my router hardware platform using? For example, newer features such as dialup services may require special cable pin configurations to interoperate with earlier versions of Bay Networks software.

How to Use This Guide

You can find the Bay Networks cable you want by

- Cable connection category
- Cable order number or description

Finding Cables by Category

This guide separates Bay Networks cables into seven connection categories. Table 1-1 shows the chapter that contains each category.

Table 1-1. Cable Category Locations

Category	Chapter No.
Console/Modem	2
Local Area Network (LAN) - Ethernet - Token Ring - Fiber Distributed Data Interface (FDDI) - Asynchronous Transfer Mode (ATM)	3
High-Speed Serial Interface (HSSI)	4
Multichannel E1, T1, T1 Framer, and Channel Service Unit (CSU)	5
Standard Synchronous - Coaxial - Crossover and Loopback - Straight-through - Pass-through	6
Dialup Services	7
Cable Adapters	8

After determining the connection category and type of connector that you need, go to the appropriate chapter. The table at the beginning of each chapter provides additional information about each cable in that category.

Finding Cables by Order Number or Description

Table 1-2 lists the order number, a brief description, and the page number of each cable in this guide.

Table 1-2. Cables Listed by Order Number

Order No.	Physical Cable Description	Page
AA0018001	MCE1 DB9 to mod jack cable (9-pin to RJ-45)	5-4
AA0018002	MCE1 DB9 to unterminated end cable (9-pin to unterminated end)	5-5
AA0018003	X.21 synchronous pass-through (15-pin plug to X.21 receptacle)	6-4
AA0018004	X.21 synchronous pass-through (44-pin plug to X.21 receptacle)	6-6
AA0018005	X.21 synchronous pass-through (50-pin plug to X.21 receptacle)	6-8
AA0018006	Quad MCT1 clock cable	5-6
AA0018011	RS-530 straight-through cable (15-pin to RS-530 plug)	6-10
AA0018012	RS-530 straight-through cable (44-pin to RS-530 plug)	6-12
AA0018013	RS-530 straight-through cable (50-pin to RS-530 plug)	6-14
AA0018014	MCE1 RJ-45 to RJ-45	5-7
AA0018015	MCE1 RJ-45 to unterminated end cable	5-8
AA0018021	Quad MCT1 crossover cable (15-pin D-sub plug to 15-pin D-sub plug)	5-9
AA0018022	Quad MCT1 straight-through cable (15-pin D-sub plug to 15-pin D-sub plug)	5-10
AA0018023	50-pin to V.28 cable	6-16
AA0018024	50-pin to 15-pin RS-422 cable adapter	8-16
7115	15-pin Ethernet/802.3 AUI plug to 15-position Ethernet/802.3 AUI receptacle	3-3
7116	15-pin D-sub plug to RS-422 plug (V.25bis for Series 7 software)	7-3
7117	15-pin D-sub plug to RS-422 plug (raise DTR for Series 7 software)	7-5
7118	15-pin D-sub plug to RS-232-C plug (raise DTR for Series 7 software)	7-7
7119	15-pin D-sub plug to RS-232-C plug (V.25bis for Series 7 software)	7-8
7120	15-pin D-sub plug to V.35 plug (V.25bis for Series 7 software)	7-9
7121	15-pin D-sub plug to V.35 plug (raise DTR for Series 7 software)	7-10
7122	44-pin to 15-pin RS-232-C cable adapter	8-3
7123	44-pin to 15-pin X.21 cable adapter	8-5
7124	44-pin to 15-pin V.35 cable adapter	8-7

(continued)

Table 1-2. Cables Listed by Order Number *(continued)*

Order No.	Physical Cable Description	Page
7125	9-pin D-sub plug to Token Ring/802.5 MAU data connector (no ferrite bead); STP cable	3-4
7126	9-pin D-sub plug to Token Ring/802.5 MAU data connector (with ferrite bead); STP cable	3-5
7128	9-pin D-sub plug to Token Ring/802.5 RJ-11 receptacle	3-6
7131	44-pin to 15-pin RS-422 cable adapter	8-9
7135	FDDI/X3T9.5 FSD to FSD; multimode fiber cable; dual attachment to FDDI ring requires two cables	3-7
7136	FDDI FSD to bayonet (ST) connectors; multimode fiber cable; dual attachment to FDDI ring requires two cables	3-7
7137	44-pin D-sub plug to V.35 plug (raise DTR for Series 7 software)	7-11
7138	44-pin D-sub plug to RS-232-Cplug (raise DTR for Series 7 software)	7-13
7139	44-pin D-sub plug to RS-422 plug (raise DTR for Series 7 software)	7-15
7150	MCT1 clock cable (9-pin D-sub plug to 15-pin D-sub plug)	5-11
7151	MCT1 loopback plug (15-pin D-sub plug)	5-12
7152	MCT1 loopback plug (RJ-48)	5-13
7153	MCT1 crossover cable (15-pin D-sub plug to RJ-48)	5-14
7154	MCT1 loopback cable (RJ-48 to RJ-48)	5-15
7155	MCT1 loopback cable (15-pin D-sub plug to 15-pin D-sub plug)	5-16
7156	MCT1 straight-through cable RJ-48 to RJ-48	5-17
7157	MCT1 straight-through cable (15-pin D-sub plug to RJ-48)	5-18
7158	15-pin synchronous plug to V.35 plug	6-17
7159	44-pin D-sub plug to V.35 plug	6-18
7160	MCE1 crossover cable (9-pin)	5-19
7161	MCE1 straight-through cable (9-pin)	5-20
7162	MCE1 cable, 75Ω coaxial	5-21
7163	FDDI SC duplex to SC duplex connectors; multimode fiber cable; dual attachment to FDDI ring requires two cables	3-9
7164	FDDI SC duplex to bayonet (ST) connectors; single-mode fiber cable; dual attachment to FDDI ring requires two cables	3-8
7165	FDDI SC duplex to SC duplex connectors; single-mode fiber cable; dual attachment to FDDI ring requires two cables	3-9

(continued)

Table 1-2. Cables Listed by Order Number *(continued)*

Order No.	Physical Cable Description	Page
7167	MCE1 DB9 to DB15 straight-through cable	5-22
7168	MCE1 DB9 to DB15 crossover cable	5-23
7169	ATM cable, SC to ST MMF	3-10
7215	15-pin D-sub plug to V.35 plug (no DTR; for WAN connection)	6-20
7216	15-pin D-sub plug to V.35 plug (with DTR)	6-22
7218	RS-232 synchronous pass-through (15-pin synchronous plug to RS-232 plug; for DTE connection)	6-23
7219	V.35 synchronous pass-through (15-pin synchronous plug to V.35 plug; for DTE connection)	6-24
7220	44-pin D-sub plug to V.35 plug (leased line or V.25bis; for WAN connection)	6-26
7221	15-pin D-sub plug to X.21 plug (for WAN connection)	6-28
7224	44-pin D-sub plug to X.21 plug (for WAN connection)	6-29
7255	15-pin D-sub plug to RS-232-Cplug (for WAN connection)	6-30
7256	15-pin D-sub plug to V.28 plug (for WAN connection)	6-31
7260	15-pin to 15-pin synchronous crossover (for back-to-back node operation)	6-32
7315	15-pin D-sub plug to RS-422 plug (for WAN connection)	6-34
7318	44-pin D-sub plug to RS-422 plug (leased line or V.25bis; for WAN connection)	6-36
7401	15-pin T1 Framer plug (labeled DSX-1 or DSX-2) to 15-pin DTE plug (for CSU connection)	5-24
7415	15-pin T1 Framer plug (labeled DSX-1 or DSX-2) to 15-pin Customer Premise Equipment (CPE) plug	5-25
7525	25-pin D-sub plug to RS-232-C receptacle (for console interface to ASCII terminal connection)	2-3
7526	AFN/AN console cable; 9-pin D-sub plug to RS-232-C receptacle (for console interface to ASCII terminal connection)	2-4
7527	9-pin D-sub plug to RS-232-C receptacle (for console/modem connection to a console using a modem cable and a null-modem adapter)	2-5
7650	15-position CSU network receptacle to RJ-45 (for T-carrier line connection)	5-26
7750	15-position CSU network receptacle to spade terminals (for T-carrier line connection)	5-27
7825	9-pin D-sub plug to RS-232-C modem plug (for console/modem interface to dial modem connection)	2-6

(continued)

Table 1-2. Cables Listed by Order Number *(continued)*

Order No.	Physical Cable Description	Page
7826	44-pin D-sub plug to RS-232 plug (leased line or V.25bis; for WAN connection)	6-38
7830	HSSI DCE plug to DTE plug (10 ft)	4-3
7831	HSSI DCE plug to DTE plug (50 ft)	4-3
7832	HSSI crossover cable; HSSI plug to HSSI plug	4-5
7833	RS-232 synchronous pass-through (44-pin plug to RS-232 plug)	6-39
7834	V.35 synchronous pass-through (44-pin plug to V.35 plug)	6-40
7835	V.35 crossover cable (44-pin plug to 44-pin plug)	6-42
7836	V.35 crossover cable (44-pin plug to 15-pin plug)	6-44
7837	44-pin to V.28 plug (for WAN connection)	6-46
7932	50-pin to V.35 plug	6-48
7933	50-pin to V.35 with raise DTR	7-17
7934	50-pin to RS-232	6-50
7935	50-pin to RS-232-C with raise DTR	7-19
7936	50-pin to X.21	6-51
7937	50-pin to RS-422	6-52
7938	50-pin to 50-pin crossover	6-54
7939	50-pin to 15-pin crossover	6-56
7940	50-pin to 44-pin crossover	6-58
7941	15-pin to female RS-232-C synchronous pass-through	6-60
7942	15-pin to female V.35 synchronous pass-through	6-61
7943	44-pin to female RS-232-C synchronous pass-through	6-62
7944	44-pin to female V.35 synchronous pass-through	6-63
7945	50-pin to female RS-232-C synchronous pass-through	6-65
7946	50-pin to female V.35 synchronous pass-through	6-66
7947	50-pin to 44-pin cable adapter	8-11
7948	50-pin to 15-pin V.35 cable adapter	8-14
77850	25-pin D-sub plug to RS-232-C modem plug (for BLN/BCN console/modem interface to dial modem connection)	2-7

Cable Connector Basics

Before using this guide, you should be familiar with its terminology and the connector types Bay Networks provides.

Connector Terminology

This guide uses several terms to describe generically the various types of connectors and their physical/electrical attributes. Table 1-3 lists these terms and their definitions.

Table 1-3. Connector Terms

Term	Description
Pins	These are the short, rigid, lead wires protruding from a **plug**-type connector. The **pins** of a **plug** connector penetrate and make electrical contact with counterpart **sockets,** or holes, in a **receptacle**-type connector.
Sockets	These are the holes in a **receptacle**-type connector. Each hole - Accepts one counterpart **pin** of a **plug**-type connector - Completes an electrical connection to its counterpart **pin**
Plug	This type of connector provides a number of **pins** and attaches to a **receptacle**-type connector.
Receptacle	This type of connector provides a number of **sockets,** or holes, that accept the **pins** of a **plug**-type connector.
Physical interface	This is a **plug-** or **receptacle**-type connector located on the router hardware platform or on a device such as an Ethernet transceiver. The physical interface accepts an appropriate (counterpart) cable connector.
Termination	This is the connector at one end of a cable; a termination can be either a **plug-** or **receptacle**-type connector.

Connector Types

Bay Networks provides the following connector types:

- Attachment Unit Interface (AUI): A 15-pin D-type connector that connects equipment to the Ethernet network through a transceiver
- CCITT Series (V.28, V.35): CCITT-recommended V.10 (unbalanced) and V.11 (balanced) standard connectors
- DTE to DCE interface (X.21): CCITT-recommended DTE to DCE synchronous/public switched network connector
- Fiber Channel (FC): Threaded, straight-tip, coaxial or fiber optic connectors
- Fixed shroud duplex (FSD): Jack-type, dual fiber optic connector for use in FDDI networks
- Media access unit/multistation access unit (MAU): LAN wiring concentrator used in token ring networks
- Recommended Standard (RS-232-C, RS-449/RS-422): EIA standard connectors for use with DTE and DCE devices
- Registered Jack Series (RJ-45; RJ-48): 8-position, FCC-registered data plugs
- Subscriber Connector (SC) duplex: Jack-type, dual fiber optic connector for use in FDDI networks
- Spade terminals: Flat, U-shaped connectors typically used for T-carrier line connection
- Straight-tip (ST): Bayonet coaxial or fiber optic connectors

Note: Many types of fiber optic connectors include a dust cover. (Dust obstructs or attenuates optical signals entering or leaving the cable through the connector.) Be careful not to lose the dust cover when you attach a fiber optic cable connector to its counterpart connector. Replace dust covers when you detach a fiber optic cable from any local device.

Figure 1-1 shows a sample of connectors in cable assemblies for Bay Networks router hardware platforms.

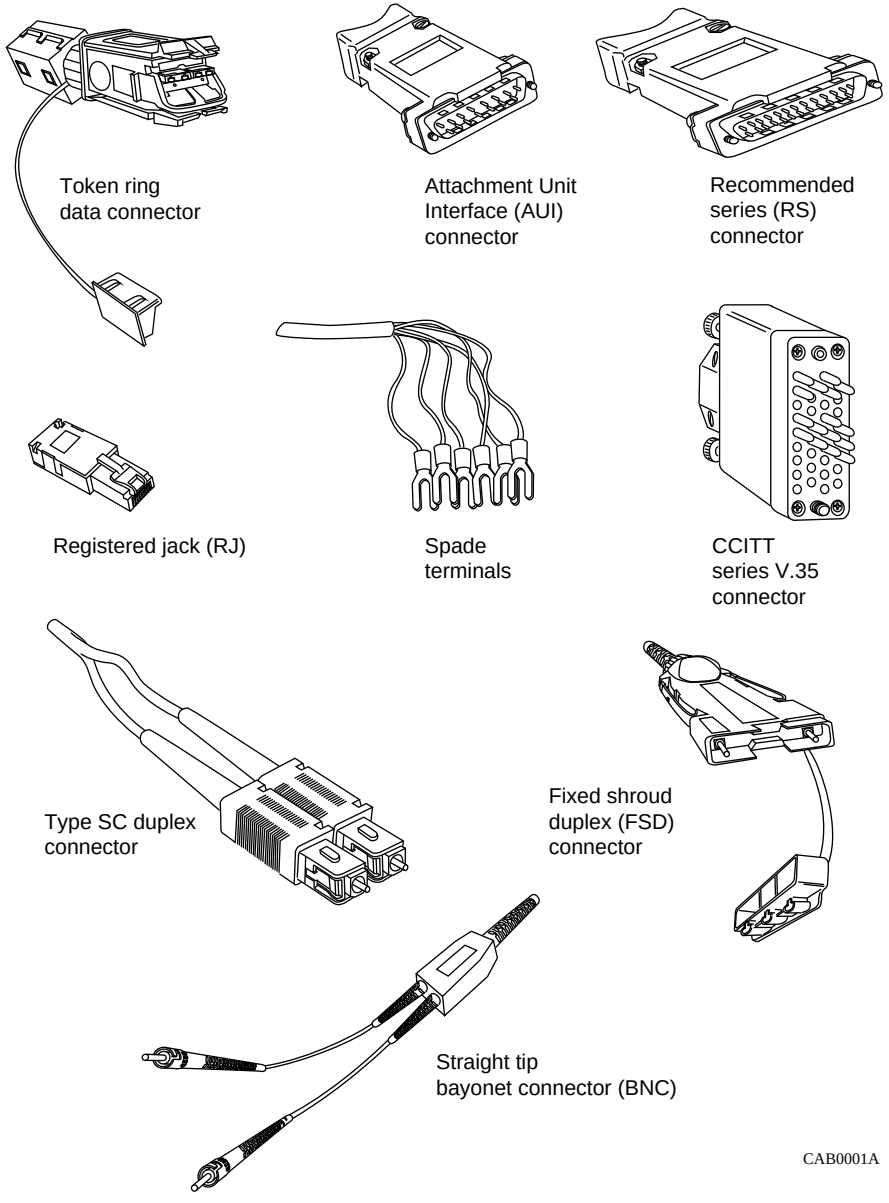

Figure 1-1. Connector Types

Building Your Own Cables

Cables that you build must comply with standard cable specifications and network requirements. Cable length, cable type, cable and connector attenuation, and other factors affect the overall performance and reliability of your network.

For example, using a cable length longer than that recommended in industry standards or interface specifications, or using a cable type that is unsuitable, considering the cable environment (temperature, electrical noise, radio-frequency [rf] emissions, and other factors) may degrade network performance and reliability.

For additional information about maximum cable length and other factors, consult the appropriate EIA, IEEE, CCITT, or ISO specification, standard, or recommendation. Some examples include

- IEEE 802.3 10BaseT Specification (10 Mb/s CSMA/CD over twisted pair)
- IEEE 802.5 Specification (Token Ring)
- X3T9.5 Single-Mode Fiber PMD Specification (FDDI)
- EIA RS-449/RS-422A Standard
- EIA RS-232-C Standard
- CCITT V.10/V.11/V.28/V.35 Recommendations
- CCITT X.21 Recommendation

See also the manufacturer's specifications for any cables or connectors you want to use. Specifications for attenuation per unit length of cable, and for connector insertion loss, are useful in helping you to determine the maximum amount of signal loss (and, therefore, the maximum distance) allowable between two directly connected network devices.

The physical interface on each device (for example, the connector on an Ethernet Link Module in a Bay Networks router hardware platform) determines which industry specification, standard, or recommendation you need to consult for guidelines on how to customize your cables.

To assist you in determining which industry document you need to consult, the description for each cable in this guide includes an "Industry Interface Type" description.

Chapter 2
Console/Modem Cables

This chapter identifies the console/modem cables that link Bay Networks router hardware platforms to DTE and DCE devices.

Table 2-1 summarizes the cables. Detailed cable illustrations and pinouts follow.

Table 2-1. Console/Modem Cables

Order No.	Length	Physical Cable Description	Connection	Page
7525	25 ft (7.63 m)	25-pin D-sub plug to RS-232-C receptacle	Console/modem interface to any ASCII terminal (for all devices except AFN and AN)	2-3
7526	25 ft (7.63 m)	AFN/AN console cable; 9-pin D-sub plug to RS-232-C receptacle	Console/modem interface to any ASCII terminal (for AFN and AN only)	2-4
7527	10 ft (3.05 m)	AT serial console cable; 9-pin D-sub plug to RS-232-C modem plug	Console/modem interface (kit contains a modem cable and a null-modem adapter) to a console	2-5
7825	25 ft (7.63 m)	9-pin D-sub plug to RS-232-C modem plug	Console/modem interface to a dial modem (for all devices except BLN, BLN-2, and BCN)	2-6
77850	15 ft (4.57 m)	25-pin D-sub plug to RS-232-C modem plug	Console/modem interface to a dial modem (for BLN, BLN-2, and BCN only)	2-7

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for that interconnection requirement, you should

  -- Identify in this chapter a cable that satisfies your interconnection requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)
- Pinouts for each connector and all associated signals
- Internal wire connections for each termination (when applicable)

  For example, the console port to ASCII terminal cable (Order No. 7525) lists internal wire connections such as “Pin 6 > 20” in the Remote Termination column. This indicates that you must connect pin 6 to pin 20 inside the remote termination.
- Grounding arrangements that isolate the chassis from the DC ground within the cable (when applicable)

Console Interface to ASCII Terminal (Order No. 7525)

Caution: Do not use this cable to attach a modem to any Bay Networks router hardware platform. Use this cable only to attach an ASCII terminal to any Bay Networks router hardware platform except a model AN® or AFN®.

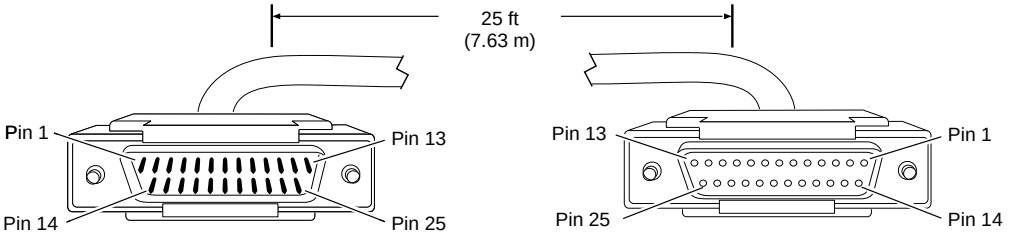

25-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub receptacle with screw locks
(ground shield connected to backshell)

CAB0054A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Data	2	3	Receive Data
Receive Data	3	2	Transmit Data
Request to Send	4	5	Clear to Send
Clear to Send	5	4	Request to Send
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
		Pin 6 > 20	

AFN/AN Console Interface to ASCII Terminal (Order No. 7526)

Caution: Do not use this cable to attach a modem to any Bay Networks router hardware platform. Use this cable only to attach an ASCII terminal to a Bay Networks model AN or AFN platform.

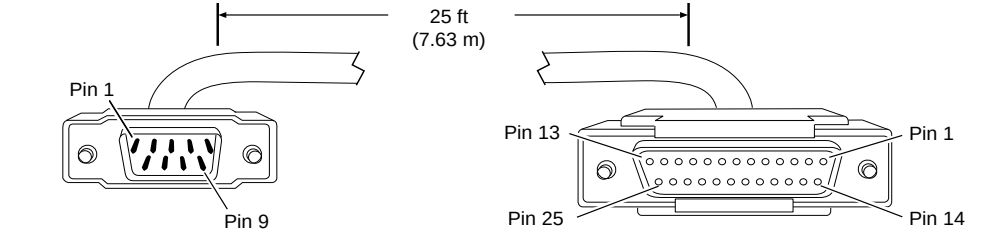

9-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub receptacle with screw locks
(ground shield connected to backshell)

CAB0055A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Data	2	3	Receive Data
Receive Data	3	2	Transmit Data
Request to Send	4	5	Clear to Send
Clear to Send	5	4	Request to Send
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
		Pin 6 > 8 > 20	

AT Serial Console (Order No. 7527)

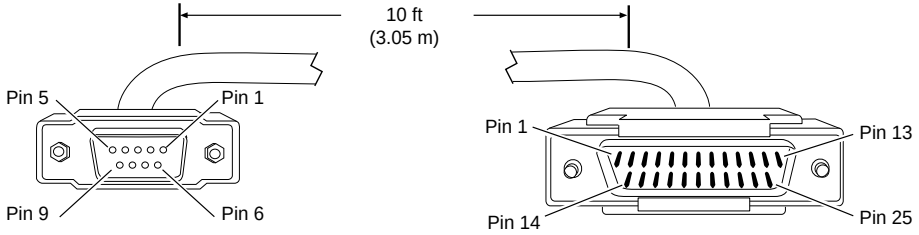

9-position D-sub receptacle with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0056A

Industry Interface Type: RS-232-C

Bay Networks Termination		Modem Termination	
Signal	**Pin # to Pin #**		**Signal**
Data Carrier Detect	1	8	Data Carrier Detect
Transmit Data (TXD)	2	2	Transmit Data (TXD)
Receive Data (RXD)	3	3	Receive Data (RXD)
Data Set Ready	4	6	Data Set Ready
Data Terminal Ready	6	20	Data Terminal Ready
Clear to Send	7	5	Clear to Send
Request to Send	8	4	Request to Send

Console/Modem Interface to RS-232-C Modem (Order No. 7825)

Caution: This is a modem cable. Do not use this cable to attach an ASCII terminal to a Bay Networks router hardware platform. Use this cable to attach a modem to any Bay Networks router hardware platform except a model BLN®, BLN-2, or BCN®.

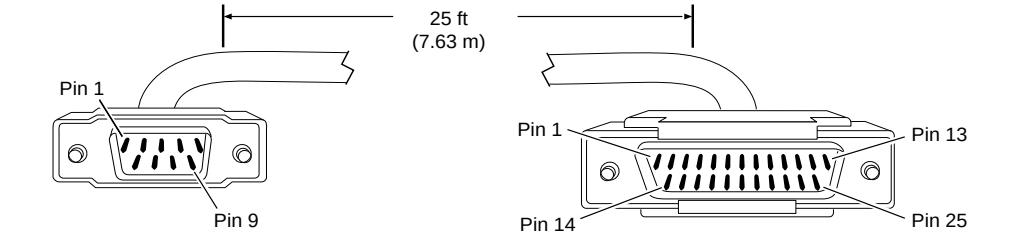

9-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0060A

Industry Interface Type: RS-232-C

Bay Networks Termination		Modem Termination	
Signal	**Pin # to Pin #**		**Signal**
Transmit Data	2	2	Transmit Data
Receive Data	3	3	Receive Data
Request to Send	4	4	Request to Send
Clear to Send	5	5	Clear to Send
Data Set Ready	6	6	Data Set Ready
Signal Ground	7	7	Signal Ground
Carrier Detect	8	8	Carrier Detect
Data Terminal Ready	9	20	Data Terminal Ready

Backbone Console Interface to RS-232-C Modem (Order No. 77850)

Caution: This is a modem cable. Do not use this cable to attach an ASCII terminal to a Bay Networks router hardware platform. Use this cable only to attach a modem to a Bay Networks model BLN, BLN-2, or BCN platform.

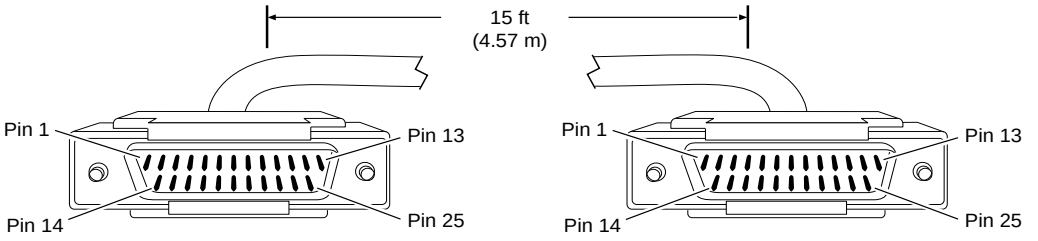

25-position D-sub plug with screw locks (ground shield connected to backshell)

25-position D-sub plug with screw locks (ground shield connected to backshell)

CAB0061A

Industry Interface Type: RS-232-C

Bay Networks Termination		Modem Termination	
Signal	**Pin # to Pin #**		**Signal**
Chassis Ground	1	1	Chassis Ground
Transmit Data	2	2	Transmit Data
Receive Data	3	3	Receive Data
Request to Send	4	4	Request to Send
Clear to Send	5	5	Clear to Send
Data Set Ready	6	6	Data Set Ready
Signal Ground	7	7	Signal Ground
Data Carrier Detect	8	8	Data Carrier Detect
Data Terminal Ready	20	20	Data Terminal Ready

Chapter 3
LAN Cables

This chapter identifies the local area network (LAN) cables that link Bay Networks router hardware platforms to other LAN devices.

Table 3-1 summarizes the cables. Detailed cable illustrations and pinouts follow.

Table 3-1. Local Area Network Cables

Order No.	Length	Physical Cable Description	Connection	Page
7115	15 ft (4.57 m)	15-pin AUI plug to 15-position AUI receptacle	Bay Networks Ethernet/802.3 XCVR interface to an Ethernet AUI network connection	3-3
7125	15 ft (4.57 m)	9-pin D-sub plug to Token Ring/802.5 MAU data connector; STP cable	Bay Networks Token Ring/802.5 MAU interface to a Token Ring network connection	3-4
7126	15 ft (4.57 m)	9-pin D-sub plug to Token Ring/802.5 MAU data connector with ferrite bead; STP cable	Bay Networks Token Ring/802.5 MAU interface to a Token Ring network connection	3-5
7128	1 ft (0.3 m)	9-pin D-sub plug to RJ-11 receptacle	Bay Networks Token Ring/802.5 MAU interface to a Token Ring network connection	3-6
7135	32.81 ft (10 m)	FSD to FSD connectors; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to an FDDI FSD network connection	3-7
7136	32.81 ft (10 m)	FSD to ST connectors; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to a bayonet-type FDDI network connection	3-7

(continued)

Table 3-1. Local Area Network Cables *(continued)*

Order No.	Length	Physical Cable Description	Connection	Page
7163	9 ft (2.7 m)	FDDI SC duplex to SC duplex connectors; multimode fiber cable; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to a type SC FDDI network connection	3-9
7164	9 ft (2.7 m)	FDDI SC duplex to bayonet (ST) connectors; single-mode fiber cable; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to a type ST FDDI network connection	3-8
7165	9 ft (2.7 m)	FDDI SC duplex to SC duplex connectors; single-mode fiber cable; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to a type SC FDDI network connection	3-9
7169	9 ft (2.7 m)	ATM SC duplex to bayonet (ST) connectors; single-mode fiber cable; dual attachment to FDDI ring requires two cables	Bay Networks PHY A or PHY B interface to a type ST FDDI network connection	3-10

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front of this book.) The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for that interconnection requirement, you should

  -- Identify in this chapter a cable that satisfies your interconnection requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)
- Pinouts for each connector and all associated signals (except for the FDDI cables, which have no wire connections)
- Grounding arrangements that isolate the chassis of an attached device from the DC ground within the cable (when applicable)

Ethernet Cable (Order No. 7115)

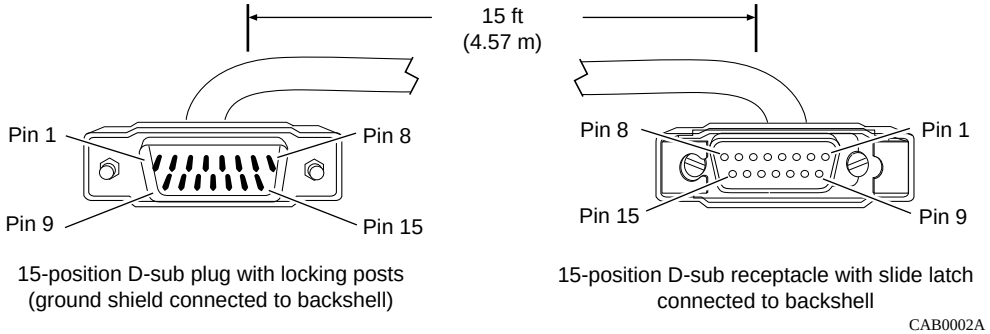

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub receptacle with slide latch connected to backshell

CAB0002A

Industry Interface Type: Ethernet/802.3

Bay Networks Termination		**Transceiver Termination**
Signal	**Pin # to Pin #**	**Signal**
Collision+	2	2 Collision+ (802.3 Circuit CI-A)
Transmit+	3	3 Transmit+ (802.3 Circuit DO-A)
Receive+	5	5 Receive+ (802.3 Circuit DI-A)
Voltage Common	6	6 Voltage Common (802.3 Circuit VC)
Collision-	9	9 Collision- (802.3 Circuit CI-B)
Transmit-	10	10 Transmit- (802.3 Circuit DO-B)
Receive-	12	12 Receive- (802.3 Circuit DI-B)
+12 V	13	13 +12 V (802.3 Circuit VP)

Token Ring MAU Cable (Order No. 7125)

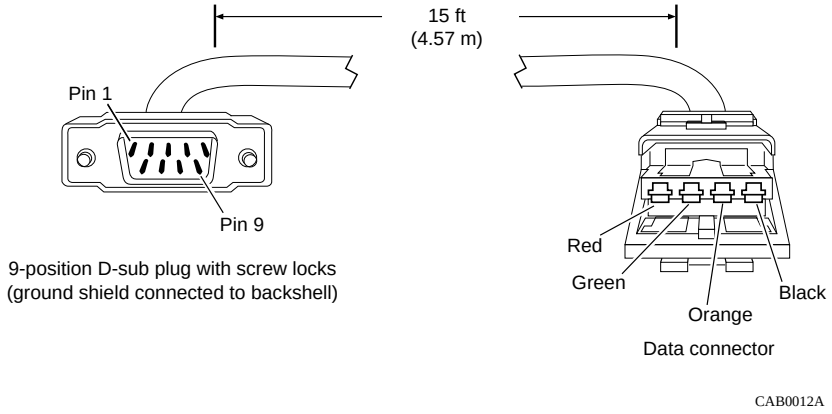

Industry Interface Type: Token Ring/802.5

Bay Networks Termination		Token Ring MAU
Signal	**Pin #**	**Contact (by Wire Color)**
Receive A	1	Red
Transmit A	5	Black
Receive B	6	Green
Transmit B	9	Orange

Token Ring MAU Cable with Ferrite Bead (Order No. 7126)

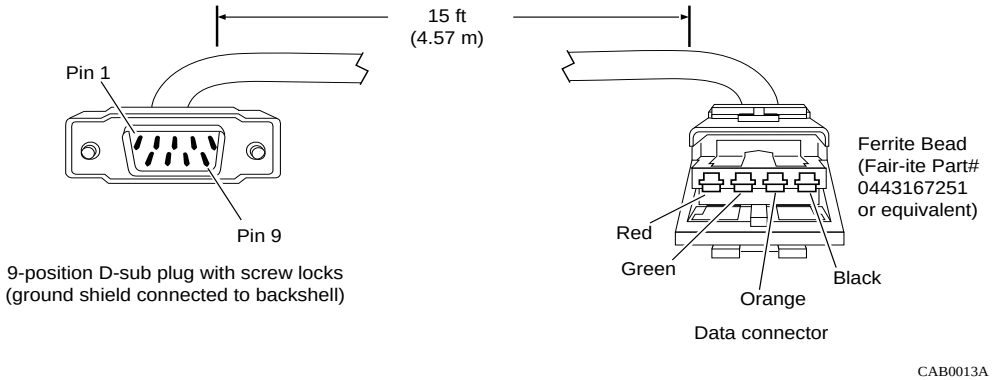

Industry Interface Type: Token Ring/802.5

Bay Networks Termination		**Token Ring MAU**
Signal	**Pin #**	**Contact (by Wire Color)**
Receive A	1	Red
Transmit A	5	Black
Receive B	6	Green
Transmit B	9	Orange

Token Ring to RJ-11 Cable (Order No. 7128)

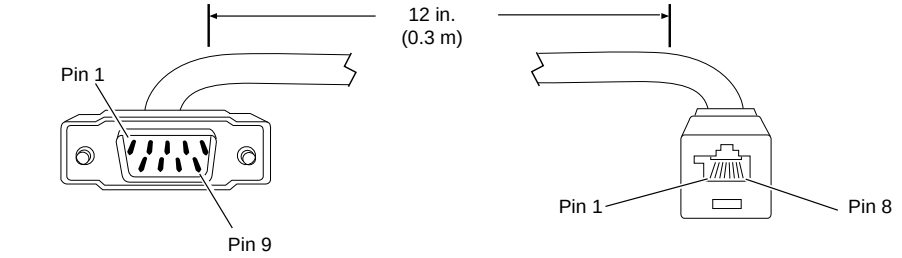

9-position D-sub plug with screw locks
(ground shield connected to backshell)

RJ-11 compatible socket

CAB0014A

Industry Interface Type: Token Ring/802.5

Bay Networks Termination			**RJ-11 Receptacle**
Signal	**Pin # to Pin #**		**Signal**
Receive A	1	4	Receive Data+
Transmit A	5	3	Transmit Data+
Receive B	6	5	Receive Data-
Transmit B	9	6	Transmit Data-

FDDI FSD to FSD (Order No. 7135)

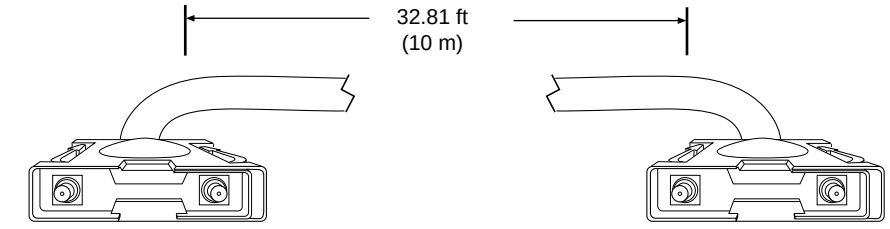

Industry Interface Type: X3T9.5 PMD/FDDI

FDDI FSD to Straight Tip (Order No. 7136)

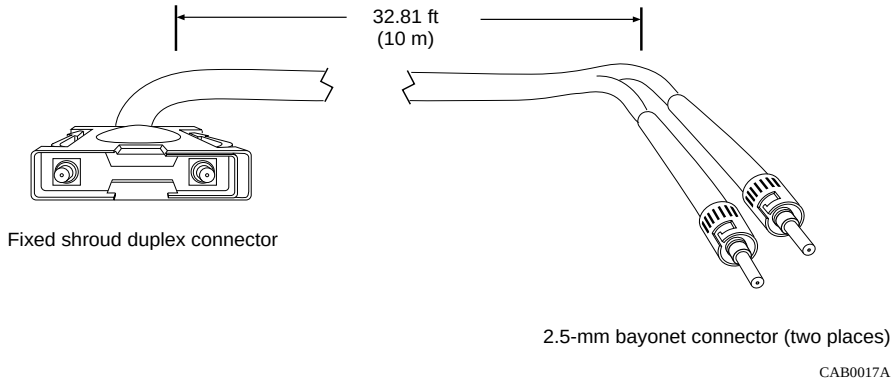

Industry Interface Type: X3T9.5 PMD/FDDI

FDDI-type SC Duplex to Straight Tip (Order No. 7164 for Single-Mode Cable)

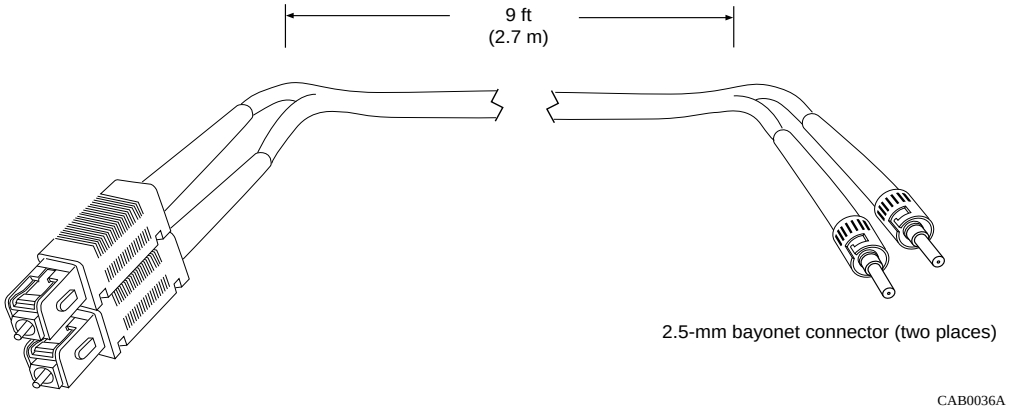

Industry Interface Type: X3T9.5 PMD/FDDI

FDDI-type SC Duplex to SC Duplex (Order No. 7163 for Multimode Cable) (Order No. 7165 for Single-Mode Cable)

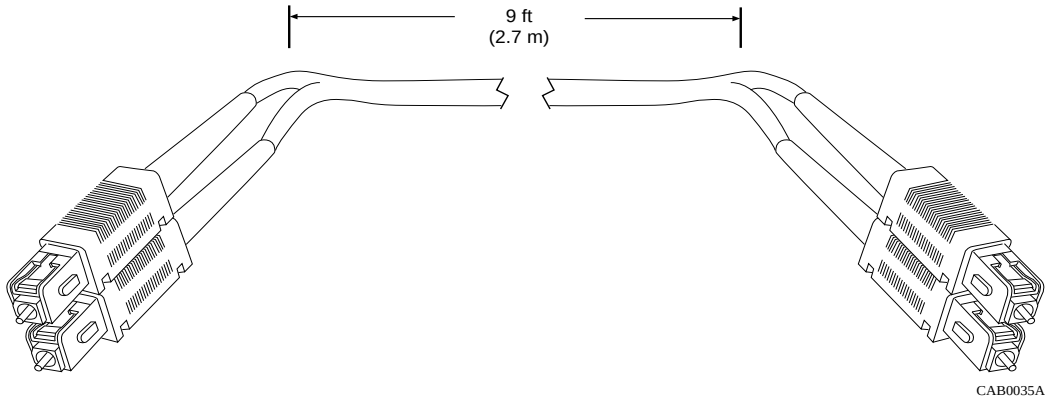

Industry Interface Type: X3T9.5 PMD/FDDI

ATM Cable, SC to Straight Tip MMF (Order No. 7169)

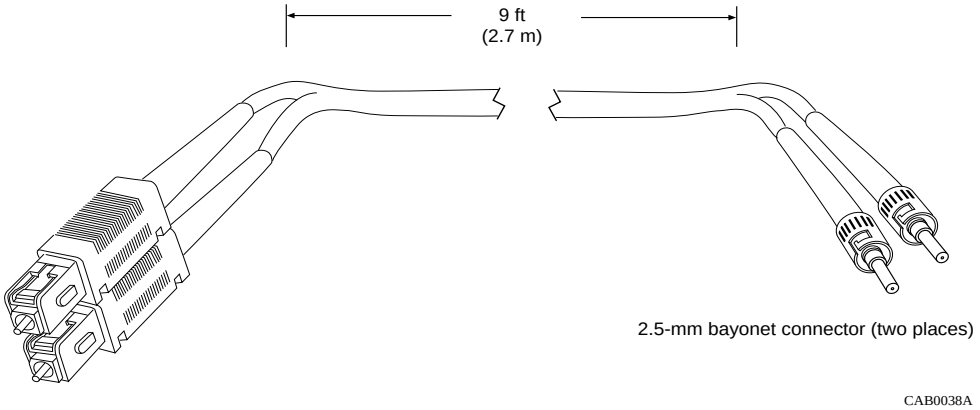

Industry Interface Type: X3T9.5 PMD/FDDI

Chapter 4
HSSI Cables

This chapter identifies the High-Speed Serial Interface (HSSI) cables that link Bay Networks router hardware platforms to LAN and WAN devices.

Table 4-1 summarizes the cables. Detailed cable illustrations and pinouts follow.

Table 4-1. HSSI Cables

Order No.	Length	Physical Cable Description	Page
7830	10 ft (3.05 m)	HSSI DCE plug to DTE plug	4-3
7831	50 ft (15.24 m)	HSSI DCE plug to DTE plug	4-3
7832	20 ft (6.10 m)	HSSI crossover; HSSI plug to HSSI plug (This cable is intended for test environments only.)	4-5

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build your own cables, and you want to determine the maximum cable length appropriate for each of your interconnection requirements, you should

  -- Identify in this chapter a cable that satisfies your wiring requirement (with the exception of total cable length)

  -- Consult the HSSI specification for cable length data
- Pinouts for each connector and all associated signals
- Grounding arrangements that isolate the chassis from the DC ground within the cable

HSSI DCE to DTE
(10 Ft: Order No. 7830; 50 Ft: Order No. 7831)

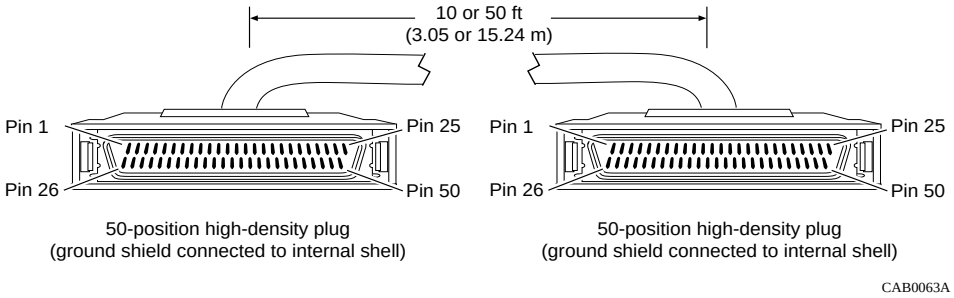

Industry Interface Type: High-Speed Serial Interface (HSSI)

Bay Networks Termination		**Remote Termination**
Signal	**Pin # to Pin #**	**Signal**
Signal Ground	1	1 Signal Ground
Signal Ground	26	26 Signal Ground
Receive Timing +	2	2 Receive Timing +
Receive Timing -	27	27 Receive Timing -
DCE Available +	3	3 DCE Available +
DCE Available -	28	28 DCE Available -
Received Data +	4	4 Received Data +
Received Data -	29	29 Received Data -
Send Timing +	6	6 Send Timing +
Send Timing -	31	31 Send Timing -
Signal Ground	7	7 Signal Ground
Signal Ground	32	32 Signal Ground
DTE Available +	8	8 DTE Available +

(continued)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
DTE Available -	33	33	DTE Available -
Terminal Timing +	9	9	Terminal Timing +
Terminal Timing -	34	34	Terminal Timing -
Loopback CKT A +	10	10	Loopback CKT A +
Loopback CKT A -	35	35	Loopback CKT A -
Send Data +	11	11	Send Data +
Send Data -	36	36	Send Data -
Loopback CKT B +	12	12	Loopback CKT B +
Loopback CKT B -	37	37	Loopback CKT B -
Signal Ground	13	13	Signal Ground
Signal Ground	38	38	Signal Ground
Signal	14	14	Signal
Signal Ground	19	19	Signal Ground
Signal Ground	44	44	Signal Ground
Signal Ground	25	25	Signal Ground
Signal Ground	50	50	Signal Ground

HSSI Crossover (Order No. 7832)

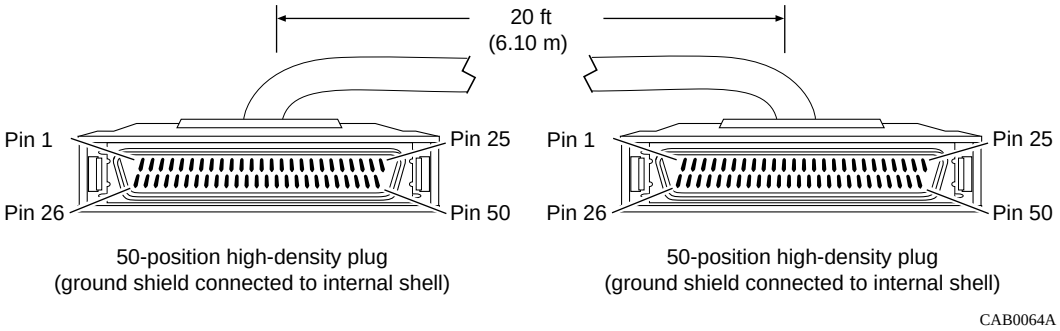

Industry Interface Type: High-Speed Serial Interface (HSSI)

This cable is intended solely for test environments; you cannot use it in production applications.Within such test environments, this cable provides a proprietary, nonstandard, back-to-back connection of Bay Networks router hardware platforms (through their HSSI ports) without intervening digital service unit (DSU) equipment.

When using the Bay Networks HSSI crossover cable, you must set the HSSI interfaces to clock internally. The data rate under internal clocking conditions must not exceed 25 megabits per second (Mb/s). (HSSI operation in a production environment allows for a DSU configuration from 300 Kb/s to 52 Mb/s.)

For additional information about enabling internal clocking, refer to *Using Technician Interface Software* (router software) or *Administration Guide* (BayStream software).

Bay Networks Termination A		Bay Networks Termination B	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	1	Signal Ground
Signal Ground	26	26	Signal Ground
Receive Timing +	2	9	Terminal Timing +
Receive Timing -	27	34	Terminal Timing -
DCE Available +	3	8	DTE Available +
DCE Available -	28	33	DTE Available -
Receive Data +	4	11	Send Data +
Receive Data -	29	36	Send Data -
Signal Ground	7	7	Signal Ground
Signal Ground	32	32	Signal Ground
DTE Available +	8	3	DCE Available +
DTE Available -	33	28	DCE Available -
Terminal Timing +	9	2	Receive Timing +
Terminal Timing -	34	27	Receive Timing -
Send Data +	11	4	Receive Data +
Send Data-	36	29	Receive Data -
Signal Ground	13	13	Signal Ground
Signal Ground	38	38	Signal Ground
Signal Ground	19	19	Signal Ground
Signal Ground	44	44	Signal Ground
Signal Ground	25	25	Signal Ground
Signal Ground	50	50	Signal Ground

Chapter 5
E1/T1 Cables

This chapter identfies the cables that interconnect a T1 Framer or MCT1 link module with a channel service unit (CSU) or T1 Digital Signal Cross-Connect switch (DSX-1 or DSX-2), an E1/T1 line, or an external T1 clock source.

Table 5-1 summarizes the cables. Detailed cable illustrations and pinout specifications follow.

Table 5-1. E1/T1 Cables

Order No.	Length	Physical Cable Description	Page
AA0018001	10 ft (3.05 m)	MCE1 DB9 to mod jack cable; 9-pin to RJ-45	5-4
AA0018002	10 ft (3.05 m)	MCE1 DB9 to unterminated end cable; 9-pin to unterminated end	5-5
AA0018006	6 in (0.15 m)	Quad MCT1 clock cable (15-pin D-sub plug and 9-position D-sub receptacle to 15-pin D-sub receptacle)	5-6
AA0018014	10 ft (3.05 m)	MCE1 RJ-45 to RJ-45	5-7
AA0018015	10 ft (3.05 m)	MCE1 RJ-45 to unterminated end cable	5-8
AA0018021	15 ft (4.57 m)	Quad MCT1 crossover cable (15-pin D-sub plug to 15-pin D-sub plug)	5-9
AA0018022	15 ft (4.57 m)	Quad MCT1 straight-through cable (15-pin D-sub plug to 15-pin D-sub plug)	5-10
7150	15 ft (4.57 m)	MCT1 clock cable; 9-pin D-sub plug to 15-pin D-sub plug	5-11
7151	N/A	MCT1 loopback connector; 15-pin D-sub plug	5-12
7152	N/A	MCT1 loopback connector, RJ-48	5-13
7153	15 ft (4.57 m)	MCT1 crossover cable; 15-pin D-sub plug to RJ-48	5-14
7154	15 ft (4.57 m)	MCT1 loopback cable; RJ-48 to RJ-48	5-15

(continued)

Table 5-1. E1/T1 Cables *(continued)*

Order No.	Length	Physical Cable Description	Page
7155	15 ft (4.57 m)	MCT1 loopback cable; 15-pin D-sub plug to 15-pin D-sub plug	5-16
7156	15 ft (4.57 m)	MCT1 straight-through cable; RJ-48 to RJ-48	5-17
7157	15 ft (4.57 m)	MCT1 straight-through cable; 15-pin D-sub plug to 15-pin D-sub plug	5-18
7160	10 ft (3.05 m)	MCE1 DB9 to DB9 crossover cable	5-19
7161	10 ft (3.05 m)	MCE1 DB9 to DB9 straight-through cable	5-20
7162	10 ft (3.05 m)	MCE1 cable, 75Ω coaxial	5-21
7167	10 ft (3.05 m)	MCE1 DB9 to DB15 straight-through cable	5-22
7168	10 ft (3.05 m)	MCE1 DB9 to DB15 crossover cable	5-23
7401	1 ft (0.3 m)	15-pin T1 Framer plug (labeled DSX-1 or DSX-2) to 15-pin DTE plug (for CSU connection)	5-24
7415	15 ft (4.57 m)	15-pin T1 Framer plug (labeled DSX-1 or DSX-2) to 15-pin external Customer Premise Equipment (CPE) plug	5-25
7650	50 ft (15.24 m)	15-position CSU network receptacle to RJ-45 (for T-carrier line connection)	5-26
7750	50 ft (15.24 m)	15-position CSU network receptacle to spade terminals (for T-carrier line connection)	5-27

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for each of your interconnection requirements, you should

  -- Identify in this chapter a cable that satisfies your wiring requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)

- Pinouts for each connector and all associated signals
- Grounding arrangements that isolate the chassis from the DC ground within the cable

MCE1 DB9 to Mod Jack Cable (Order No. AA0018001)

Note: This cable assembly uses a 120-ohm wire.

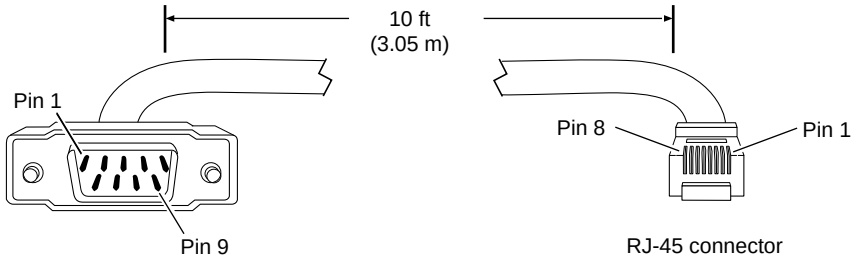

9-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0087A

Industry Interface Type: E1

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Receive Tip	1	1	Receive Tip
Receive Ring	6	2	Receive Ring
Transmit Tip	5	4	Transmit Tip
Transmit Ring	9	5	Transmit Ring
Ground	3	3	Ground

MCE1 DB9 to Unterminated Cable (Order No. AA0018002)

Note: This cable assembly uses a 120-ohm wire.

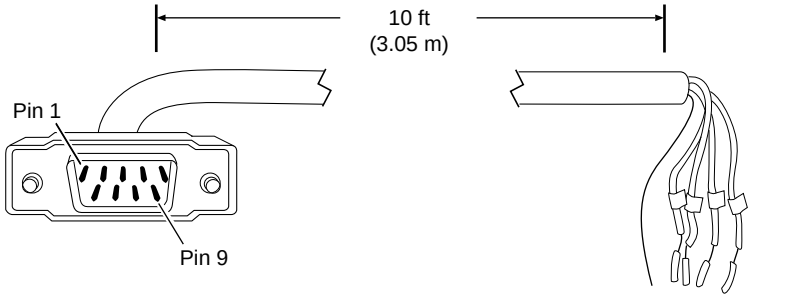

9-position D-sub plug with screw locks
(ground shield connected to backshell)

Unterminated cable

CAB0088A

Industry Interface Type: E1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Wire Color**		**Signal**
Receive Tip	1	White/Blue	Receive Tip
Receive Ring	6	Blue/White	Receive Ring
Transmit Tip	5	White/Orange	Transmit Tip
Transmit Ring	9	Orange/White	Transmit Ring
Ground	3	Bare	Ground

Quad MCT1 Cable (Order No. AA0018006)

Note: You can use this cable assembly with COM 1 ports only.

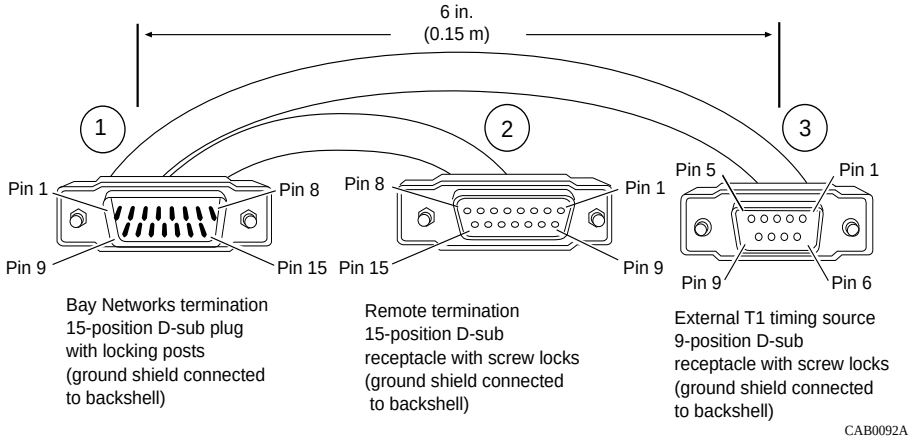

Industry Interface Type: T1/DS1 with External Clock (Input from an External T1 Timing Source)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1-1	2-1	Transmit Tip
Transmit Ring	1-9	2-9	Transmit Ring
Receive Tip	1-3	2-3	Receive Tip
Receive Ring	1-11	2-11	Receive Ring
EXT Tip	1-7	3-2	EXT Tip
EXT Ring	1-15	3-3	EXT Ring
Ground	1-2	1-4	Ground*
Ground	2-2	2-4	Ground*

*. You must configure onboard jumpers to complete this connection. Refer to the table called QMCT1 Link Module Settings in *Installing T1 Link Modules in BN Platforms*.

MCE1 RJ-45 to RJ-45 Cable (Order No. AA0018014)

Note: This cable assembly uses a 120-ohm wire.

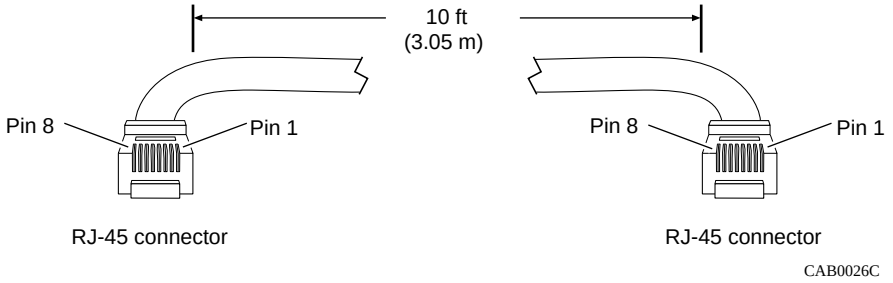

Industry Interface Type: E1

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Receive Tip	1	1	Receive Tip
Receive Ring	2	2	Receive Ring
Transmit Tip	4	4	Transmit Tip
Transmit Ring	5	5	Transmit Ring

MCE1 RJ-45 to Unterminated Cable (Order No. AA0018015)

Note: This cable assembly uses a 120-ohm wire.

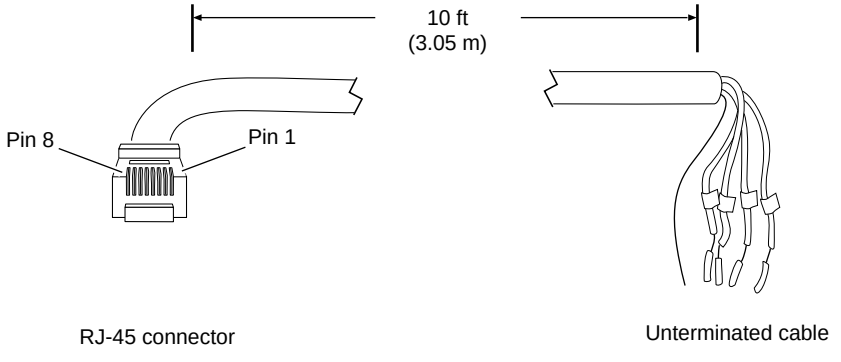

Industry Interface Type: E1

Bay Networks Termination		
Signal	**Pin #**	**Signal**
Receive Tip	1	Transmit Tip
Receive Ring	2	Transmit Ring
Transmit Tip	4	Transmit Tip
Transmit Ring	5	Transmit Ring

Quad MCT1 15-Pin to 15-Pin Crossover Cable (Order No. AA0018021)

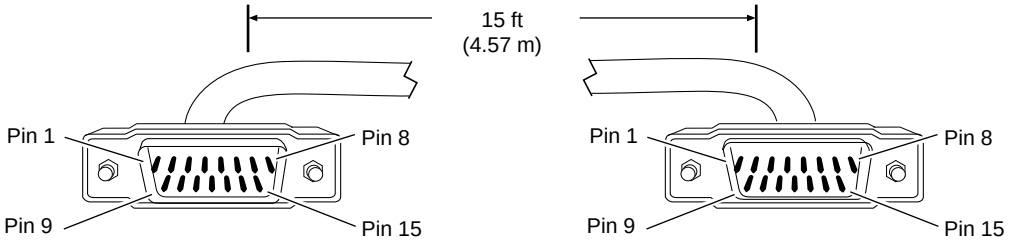

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub plug with locking posts (ground shield connected to backshell)

CAB0098A

Industry Interface Type: T1/DS1

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	3	Receive Tip
Transmit Ring	9	11	Receive Ring
Receive Tip	3	1	Transmit Tip
Receive Ring	11	9	Transmit Ring
Ground	2	4	Ground*
Ground	2	4	Ground*

*. You must configure onboard jumpers to complete this connection. Refer to the table called QMCT1 Link Module Settings in *Installing T1 Link Modules in BN Platforms*.

Quad MCT1 15-Pin to 15-Pin Straight-through Cable (Order No. AA0018022)

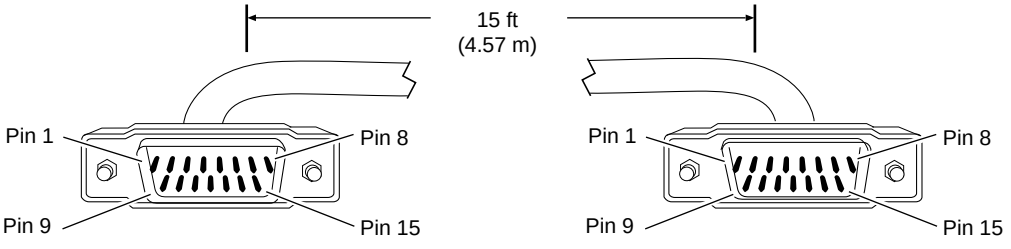

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub plug with locking posts (ground shield connected to backshell)

CAB0099A

Industry Interface Type: T1/DS1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	1	Transmit Tip
Transmit Ring	9	9	Transmit Ring
Receive Tip	3	3	Receive Tip
Receive Ring	11	11	Receive Ring
Ground	2	4	Ground*
Ground	2	4	Ground*

*. You must configure onboard jumpers to complete this connection. Refer to the table called QMCT1 Link Module Settings in *Installing T1 Link Modules in BN Platforms*.

MCT1 Clock Cable (Order No. 7150)

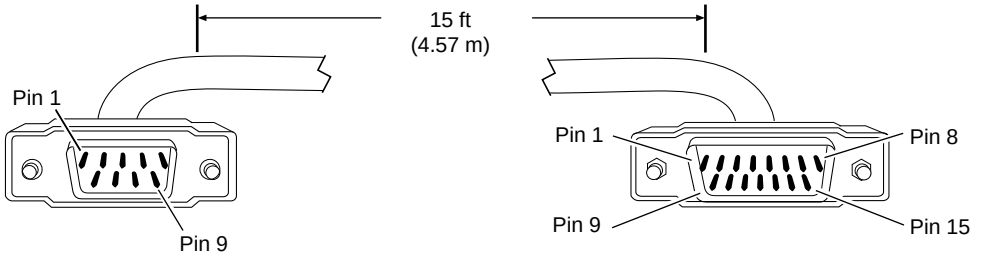

9-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0022A

Industry Interface Type: T1/DS1 External Clock (Input from an External T1 Timing Source)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Receive Tip	2	1	Transmit Tip
Receive Ring	3	9	Transmit Ring

MCT1 15-Pin Loopback Connector (Order No. 7151)

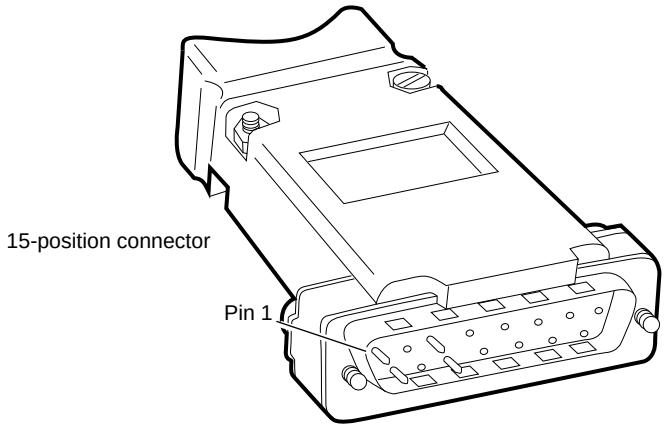

CAB0023A

Bay Networks Termination			Remote Termination
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	3	Receive Tip
Transmit Ring	9	11	Receive Ring

MCT1 RJ-48 Loopback Connector (Order No. 7152)

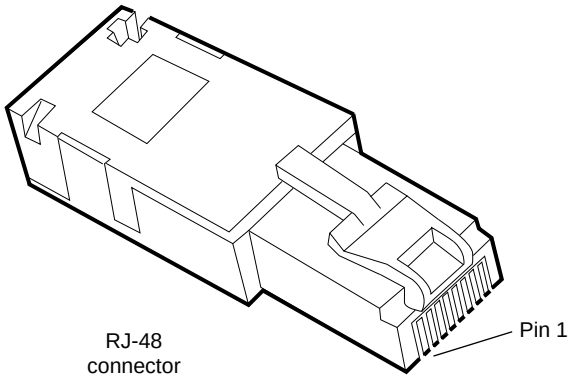

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Receive Ring	1	4	Transmit Ring
Receive Tip	2	5	Transmit Tip

MCT1 Crossover Cable (Order No. 7153)

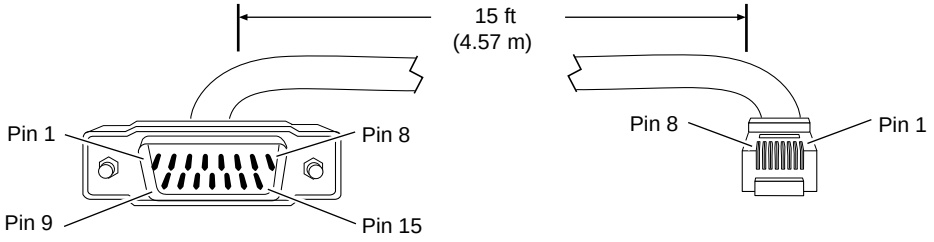

15-position D-sub plug with locking posts
(ground shield connected to backshell)

RJ-48 connector

CAB0025A

Industry Interface Type: T1/DS1

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	2	Receive Tip
Receive Tip	3	5	Transmit Tip
Transmit Ring	9	1	Receive Ring
Receive Ring	11	4	Transmit Ring

MCT1 Loopback Cable (Order No. 7154)

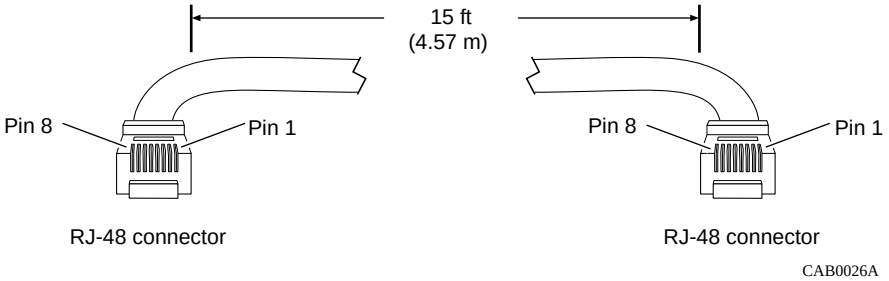

Industry Interface Type: T1/DS1

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Receive Ring	1	4	Transmit Ring
Receive Tip	2	5	Transmit Tip
Transmit Ring	4	1	Receive Ring
Transmit Tip	5	2	Receive Tip

MCT1 Loopback Cable (Order No. 7155)

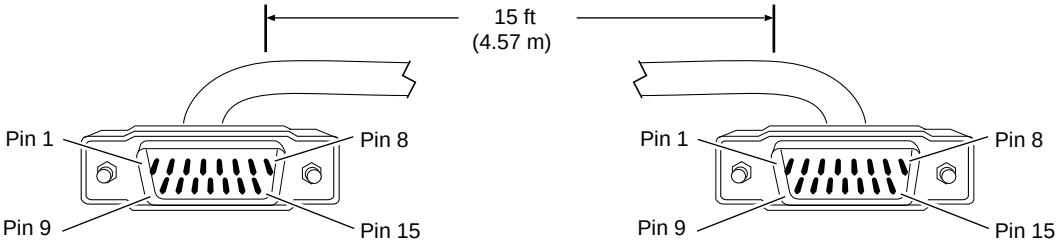

15-position D-sub plug with locking posts
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0027A

Industry Interface Type: T1/DS1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	3	Receive Tip
Receive Tip	3	1	Transmit Tip
Transmit Ring	9	11	Receive Ring
Receive Ring	11	9	Transmit Ring

MCT1 Straight-through Cable (Order No. 7156)

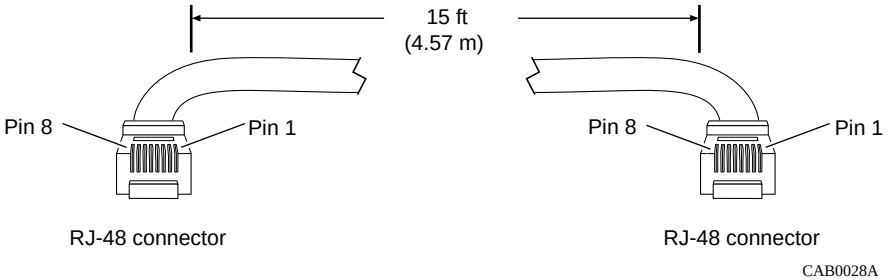

Industry Interface Type: T1/DS1

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Receive Tip	1	1	Receive Tip
Receive Ring	2	2	Receive Ring
Transmit Tip	4	4	Transmit Tip
Transmit Ring	5	5	Transmit Ring

MCT1 Straight-through Cable (Order No. 7157)

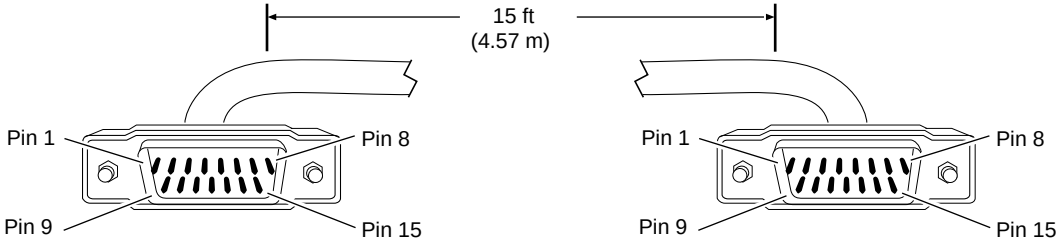

15-position D-sub plug with locking posts
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0105A

Industry Interface Type: T1/DS1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Tip	1	1	Transmit Tip
Transmit Ring	9	9	Transmit Ring
Receive Tip	3	3	Receive Tip
Receive Ring	11	11	Receive Ring

MCE1 Crossover Cable (Order No. 7160)

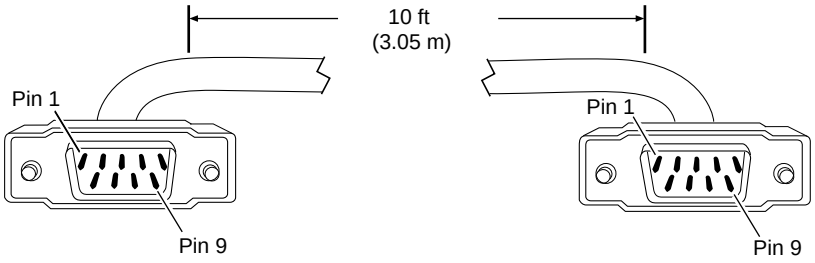

9-position D-sub plug with screw locks
(ground shield connected to backshell)

9-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0033A

Industry Interface Type: E1/G.703

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Receive A (RXA)	1	5	Transmit A (TXA)
Receive B (RXB)	6	9	Transmit B (TXB)
Transmit A (TXA)	5	1	Receive A (RXA)
Transmit B (TXB)	9	6	Receive B (RXB)
Internal Wire Connections			
Pin 3 (Shield)		Pin 3 (Shield grounded to backshell)	

MCE1 Straight-through Cable (Order No. 7161)

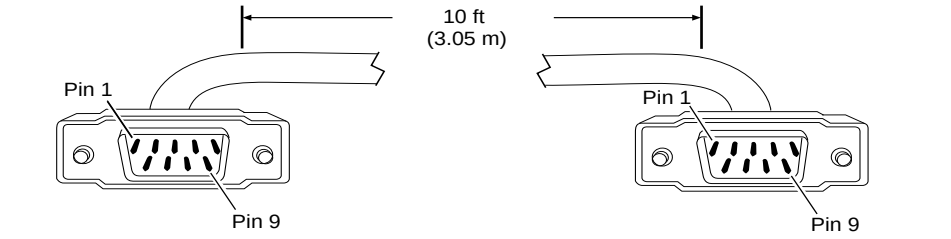

9-position D-sub plug with screw locks
(ground shield connected to backshell)

9-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0033A

Industry Interface Type: E1/G.703

Bay Networks Termination		**Remote Termination**
Signal	**Pin # to Pin #**	**Signal**
Receive A (RXA)	1	1 Receive A (RXA)
Receive B (RXB)	6	6 Receive B (RXB)
Transmit A (TXA)	5	5 Transmit A (TXA)
Transmit B (TXB)	9	9 Transmit B (TXB)
Internal Wire Connections		
Pin 3 (Shield)		Pin 3 (Shield grounded to backshell)

MCE1 Coaxial Cable (Order No. 7162)

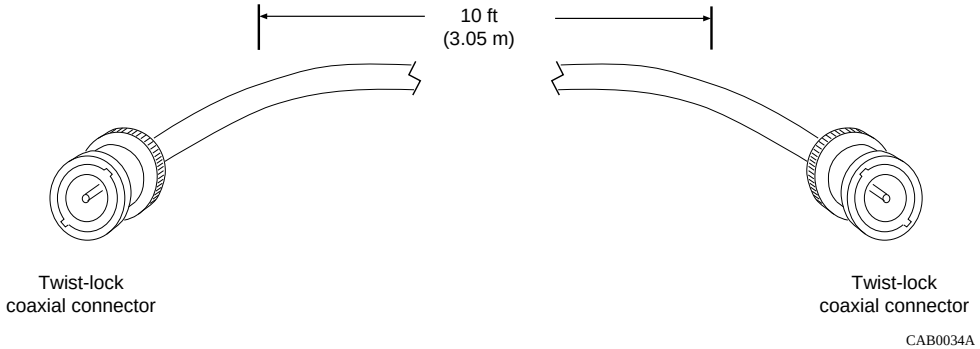

Industry Interface Type: E1/G.703

MCE1 DB9 to DB15 Straight-through Cable (Order No. 7167)

Note: This cable provides a direct connection to a 15-pin D-sub port.

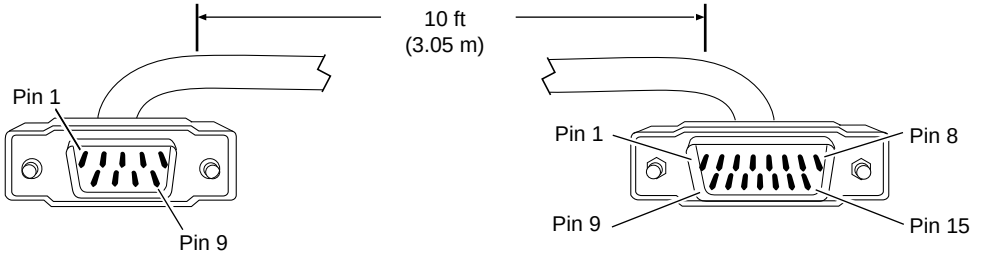

9-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0095B

Industry Interface Type: E1/G.703

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Receive A	1	3	Receive A
Receive B	6	11	Receive B
Transmit A	5	1	Transmit A
Transmit B	9	9	Transmit B
Internal Wire Connections			
Pin 3 > Shield			

MCE1 DB9 to DB15 Crossover Cable (Order No. 7168)

Note: This cable provides a crossover connection to a 15-pin D-sub port.

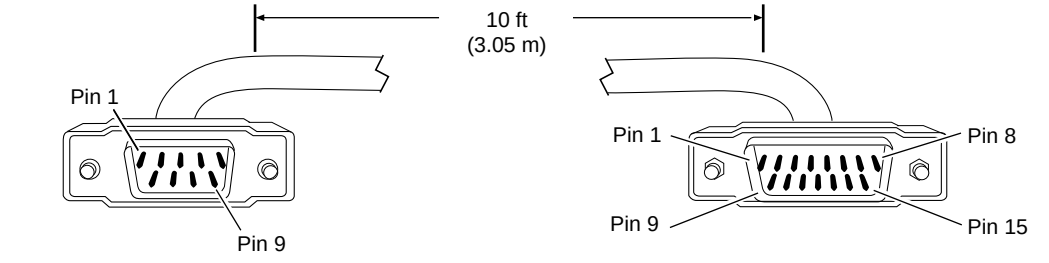

9-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0096B

Industry Interface Type: E1/G.703

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Receive A	1	1	Transmit A
Receive B	6	9	Transmit B
Transmit A	5	3	Receive A
Transmit B	9	11	Receive B
Internal Wire Connections			
Pin 3 > Shield			

T1 to CSU DTE (Order No. 7401)

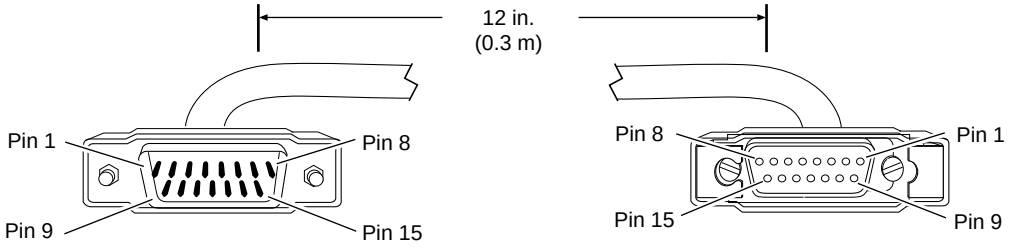

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub receptacle with slide latch connected to backshell

CAB0052A

Industry Interface Type: T1/DS1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send +	1	1	Send +
Send -	9	9	Send -
Receive +	3	3	Receive +
Receive -	11	11	Receive -

T1 to Customer Premise Equipment (Order No. 7415)

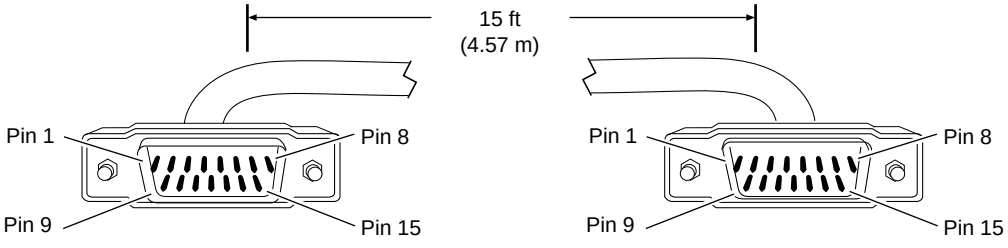

Industry Interface Type: T1/DS1

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Send +	1	1	Send +
Send -	9	9	Send -
Receive +	3	3	Receive +
Receive -	11	11	Receive -

CSU Network Receptacle to RJ-45 (Order No. 7650)

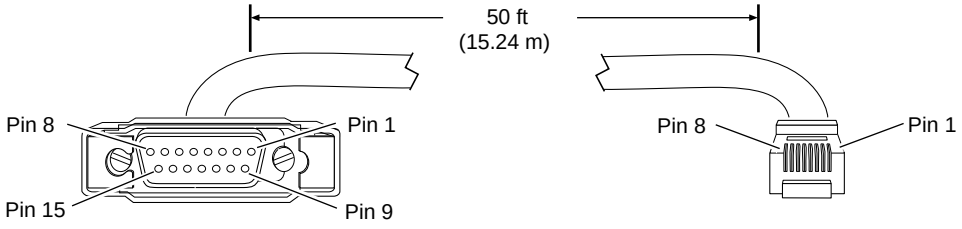

15-position D-sub receptacle with slide latch connected to backshell

RJ-45 connector

CAB0057A

Industry Interface Type: T1/DS1

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send +	1	5	Send +
Send -	9	4	Send -
Receive +	3	2	Receive +
Receive -	11	1	Receive -

CSU Network Receptacle to Spade Terminals (Order No. 7750)

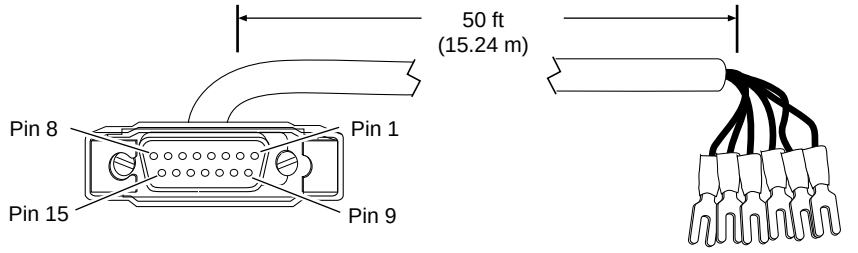

15-position D-sub receptacle with slide latch connected to backshell

Spade terminals

CAB0058A

Industry Interface Type: T1/DS1

Bay Networks Termination			Remote Termination
Signal	**Pin # to Signal Wire**		**Signal**
Send +	1	wire	XMIT+
Send -	9	wire	XMIT-
Receive +	3	wire	Receive +
Receive -	11	wire	Receive -
Ground	Chassis	wire	Shield
Ground	Chassis	wire	Shield

Chapter 6
Standard Synchronous Cables

This chapter identifies the standard synchronous cables that link Bay Networks router software platforms to WAN devices.

Table 6-1 summarizes the cables. Detailed cable illustrations and pinout specifications follow.

Table 6-1. Standard Synchronous Cables

Order No.	Length	Physical Cable Description	Page
AA0018003	15 ft (4.57 m)	X.21 synchronous pass-through (15-pin D-sub plug to X.21 receptacle)	6-4
AA0018004	15 ft (4.57 m)	X.21 synchronous pass-through (44-pin D-sub plug to X.21 receptacle)	6-6
AA0018005	15 ft (4.57 m)	X.21 synchronous pass-through (50-pin D-sub plug to X.21 receptacle)	6-8
AA0018011	15 ft (4.57 m)	RS-530 straight-through cable (15-pin to RS-530 plug)	6-10
AA0018012	15 ft (4.57 m)	RS-530 straight-through cable (44-pin to RS-530 plug)	6-12
AA0018013	15 ft (4.57 m)	RS-530 straight-through cable (50-pin to RS-530 plug)	6-14
AA0018023	15 ft (4.57 m)	50-pin to V.28 cable	6-16
7158	10 ft (3.05 m)	15-pin to male V.35 plug	6-17
7159	10 ft (3.05 m)	44-pin to male V.35 plug	6-18
7215	15 ft (4.57 m)	15-pin D-sub plug to V.35 plug (no DTR; for WAN connection)	6-20
7216	15 ft (4.57 m)	15-pin D-sub plug to V.35 plug (with DTR)	6-22
7218	15 ft (4.57 m)	RS-232 synchronous pass-through (15-pin D-sub plug to RS-232 plug)	6-23

(continued)

Table 6-1. Standard Synchronous Cables *(continued)*

Order No.	Length	Physical Cable Description	Page
7219	15 ft (4.57 m)	V.35 synchronous pass-through (15-pin D-sub plug to V.35 plug)	6-24
7220	15 ft (4.57 m)	44-pin D-sub plug to V.35 plug (leased line or V.25bis; for WAN connection)	6-26
7221	15 ft (4.57 m)	15-pin D-sub plug to X.21 plug (for WAN connection)	6-28
7224	15 ft (4.57 m)	44-pin D-sub plug to X.21 plug (for WAN connection)	6-29
7255	15 ft (4.57 m)	15-pin D-sub plug to RS-232 plug (for WAN connection)	6-30
7256	15 ft (4.57 m)	15-pin D-sub plug to V.28 plug (for WAN connection)	6-31
7260	15 ft (4.57 m)	15-pin to 15-pin synchronous crossover (for back-to-back node operation)	6-32
7315	15 ft (4.57 m)	15-pin D-sub plug to RS-422 plug (for WAN connection)	6-34
7318	15 ft (4.57 m)	44-pin D-sub plug to RS-422 plug (leased line or V.25bis; for WAN connection)	6-36
7826	15 ft (4.57 m)	44-pin D-sub plug to RS-232 plug (leased line or V.25bis; for WAN connection)	6-38
7833	15 ft (4.57 m)	RS-232 synchronous pass-through (44-pin D-sub plug to RS-232 plug)	6-39
7834	15 ft (4.57 m)	V.35 synchronous pass-through (44-pin D-sub plug to V.35 plug)	6-40
7835	15 ft (4.57 m)	Bay Networks V.35 crossover (44-pin D-sub plug to 44-pin D-sub plug)	6-42
7836	15 ft (4.57 m)	V.35 crossover (44-pin D-sub plug to 15-pin D-sub plug)	6-44
7837	15 ft (4.57 m)	44-pin D-sub plug to V.28 plug (for WAN connection)	6-46
7932	15 ft (4.57 m)	50-pin to V.35 plug	6-48
7934	15 ft (4.57 m)	50-pin to RS-232	6-50
7936	15 ft (4.57 m)	50-pin to X.21	6-51
7937	15 ft (4.57 m)	50-pin to RS-422	6-52
7938	15 ft (4.57 m)	50-pin to 50-pin crossover	6-54
7939	15 ft (4.57 m)	50-pin to 15-pin crossover	6-56
7940	15 ft (4.57 m)	50-pin to 44-pin crossover	6-58
7941	15 ft (4.57 m)	15-pin to female RS-232 synchronous pass-through	6-60
7942	15 ft (4.57 m)	15-pin to female V.35 synchronous pass-through	6-61

(continued)

Table 6-1. Standard Synchronous Cables *(continued)*

Order No.	Length	Physical Cable Description	Page
7943	15 ft (4.57 m)	44-pin to female RS-232 synchronous pass-through	6-62
7944	15 ft (4.57 m)	44-pin to female V.35 synchronous pass-through	6-63
7945	15 ft (4.57 m)	50-pin to female RS-232 synchronous pass-through	6-65
7946	15 ft (4.57 m)	50-pin to female V.35 synchronous pass-through	6-66

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for each of your interconnection requirements, you should

  -- Identify in this chapter a cable that satisfies your wiring requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)
- Pinouts for each connector and all associated signals
- Wire jumper identification for each connector (when applicable)

  For example, the Sync to V.35 cable (Order No. 7215) lists internal wire connections (Pin 1 > 7) in the Bay Networks Termination column. This indicates that you must connect pin 1 to pin 7 inside the Bay Networks connector.
- Grounding arrangements that isolate the chassis from the DC ground within the cable

15-Pin to F X.21 Synchronous Pass-through (Order No. AA0018003)

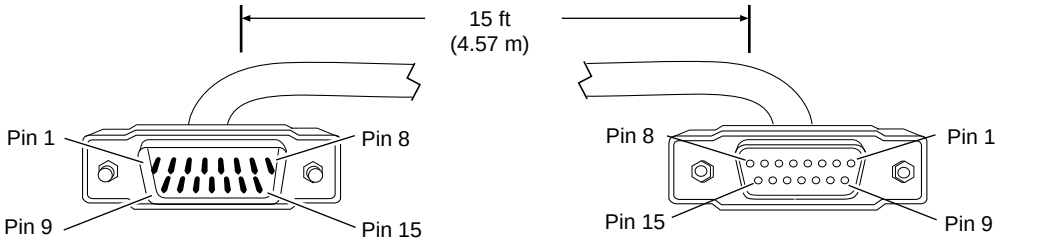

15-position D-sub plug with locking posts
(ground shield connected to backshell)

15-position D-sub receptacle with M-3 screw posts
(ground shield connected to backshell)

CAB0089A

Industry Interface Type: X.21

Bay Networks Termination			**Remote Termination**
Signal	**Pin # to Pin #**		**Signal**
Transmit Data +	2	4	Receive Data A
Transmit Data -	3	11	Receive Data B
Timing +	4	6	Timing A
Timing -	5	13	Timing B
Request to Send +	6	5	Indication A
Data Carrier Detect -	9	10	Control B
Data Carrier Detect +	10	3	Control A
Receive Data -	13	9	Transmitted Data B
Receive Data +	14	2	Transmitted Data A
Request to Send -	15	12	Indication B
Frame Ground	1	1	Frame Ground
Internal Wire Connections			
		Pin 6 > 7 (X A)	
		Pin 13 > 14 (X B)	

Note: You must move Jumpers A-E to the X.21 (2-3) position to support this interface.

44-Pin F X.21 Synchronous Pass-through (Order No. AA0018004)

Note: This cable provides you with a female termination as a DCE device.

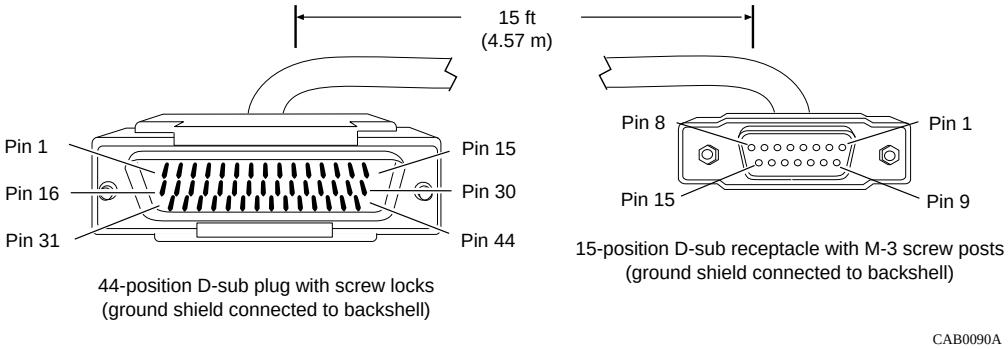

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub receptacle with M-3 screw posts
(ground shield connected to backshell)

CAB0090A

Industry Interface Type: X.21

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	4	Receive Data A
Send Data -	16	11	Receive Data B
Receive Data +	3	2	Transmitted Data A
Receive Data -	17	9	Transmitted Data B
Request to Send +	4	5	Indication A
Request to Send -	18	12	Indication B
Data Carrier Detect +	9	3	Control A
Data Carrier Detect -	23	10	Control B
Transmitter Timing +	12	6	Timing A
Transmitter Timing -	26	13	Timing B
Frame Ground	1	1	Frame Ground
Signal Ground	7	8	Signal Ground
Internal Wire Connections			
Pin 12 > 10 (ST+)		Pin 6 > 7 (X A)	
Pin 26 > 24 (ST-)		Pin 13 > 14 (X B)	
Pin 14 > 15			
Pin 28 > 30			
Pin 41 > 43			

50-Pin to F X.21 Synchronous Pass-through (Order No. AA0018005)

Note: This cable provides you with a female termination as a DCE device.

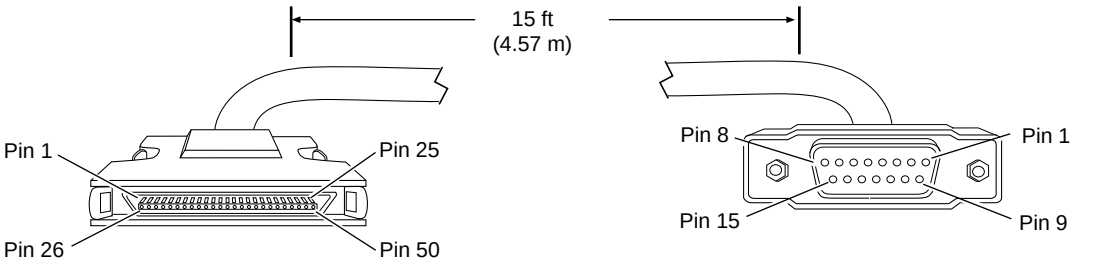

50-position 0.8-mm plug
(ground shield connected to internal shell)

15-position D-sub receptacle with M-3 screw posts
(ground shield connected to backshell)

CAB0091A

Industry Interface Type: X.21

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	4	Receive Data A
Send Data -	27	11	Receive Data B
Receive Data +	3	2	Transmitted Data A
Receive Data -	28	9	Transmitted Data B
Request to Send +	4	5	Indication A
Request to Send -	29	12	Indication B
Data Carrier Detect +	9	3	Control A
Data Carrier Detect -	34	10	Control B
Transmitter Timing +	12	6	Timing A
Transmitter Timing -	37	13	Timing B
Frame Ground	1	1	Frame Ground
Signal Ground	7	8	Signal Ground
Internal Wire Connections			
Pin 12 > 10 (ST+)		Pin 6 > 7 (X A)	
Pin 37 > 35 (ST-)		Pin 13 > 14 (X B)	
Pin 14 > 15			
Pin 38 > 40			
Pin 46 > 48			

15-Pin to RS-530 Straight-through (Order No. AA0018011)

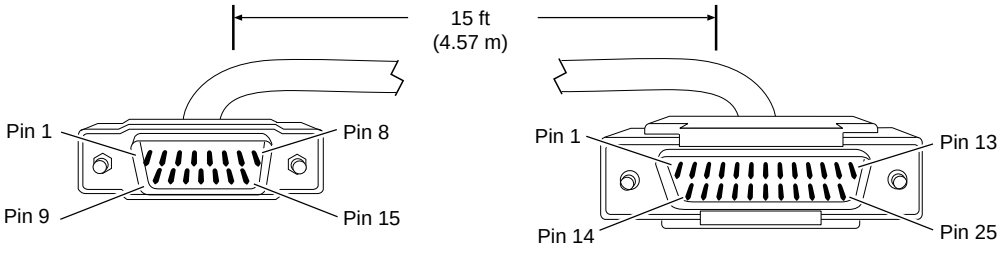

15-position D-sub plug with locking posts
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0093A

Industry Interface Type: RS-530

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Transmitted Data A
Send Data -	3	14	Transmitted Data B
Receive Data +	14	3	Receive Data A
Receive Data -	13	16	Receive Data B
Request to Send +	6	4	Request to Send A
Request to Send -	15	19	Request to Send B
Clear to Send +	8	5	Clear to Send A
Clear to Send -	7	13	Clear to Send B
Data Carrier Detect +	10	8	Receive Line Signal Detect A
Data Carrier Detect -	9	10	Receive Line Signal Detect B
Send Timing +	4	15	Transmitter Signal Element Timing (DCE) A
Send Timing -	5	12	Transmitter Signal Element Timing (DCE) B
Receive Timing +	12	17	Receiver Signal Element Timing (DCE) A
Receive Timing -	11	9	Receiver Signal Element Timing (DCE) B
Signal Ground	1	7	Signal Ground

Note: You must move Jumpers B and C to the X.21 (2-3) position to support this interface.

44-Pin to RS-530 Straight-through (Order No. AA0018012)

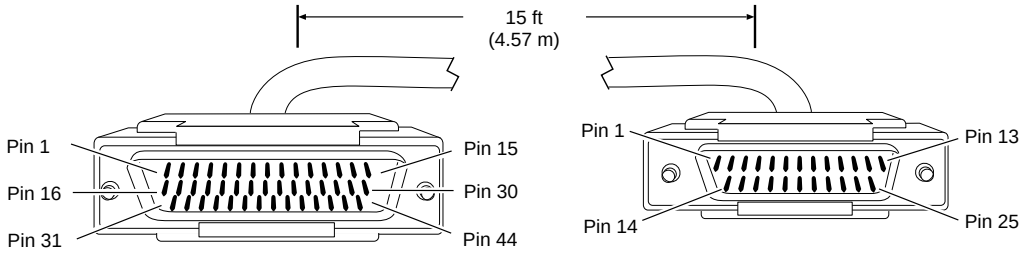

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0094A

Industry Interface Type: RS-530

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Transmitted Data A
Send Data -	16	14	Transmitted Data B
Receive Data +	3	3	Receive Data A
Receive Data -	17	16	Receive Data B
Request to Send +	4	4	Request to Send A
Request to Send -	18	19	Request to Send B
Clear to Send +	5	5	Clear to Send A
Clear to Send -	19	13	Clear to Send B
Data Set Ready +	6	6	DCE Ready A
Data Set Ready -	20	22	DCE Ready B
Data Terminal Ready +	8	20	DTE Ready A
Data Terminal Ready -	22	23	DTE Ready B
Data Carrier Detect +	9	8	Receive Line Signal Detect A
Data Carrier Detect -	23	10	Receive Line Signal Detect B
Send Timing +	10	15	Transmitter Signal Element Timing (DCE) A
Send Timing -	24	12	Transmitter Signal Element Timing (DCE) B

Bay Networks Termination			Remote Termination
Signal	**Pin # to Pin #**		**Signal**
Receive Timing +	11	17	Receiver Signal Element Timing (DCE) A
Receive Timing -	25	9	Receiver Signal Element Timing (DCE) B
Transmitter Timing +	12	24	Transmitter Signal Element Timing (DTE) A
Transmitter Timing -	26	11	Transmitter Signal Element Timing (DTE) B
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 13 > 28			
Pin 14 > 29			
Pin 41 > 43			

50-Pin to RS-530 Straight-through (Order No. AA0018013)

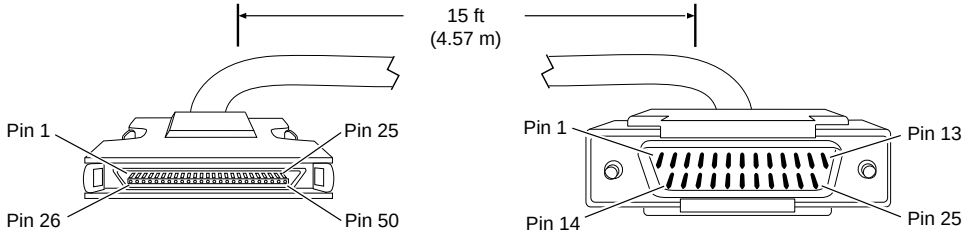

Industry Interface Type: RS-530

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Transmitted Data A
Send Data -	27	14	Transmitted Data B
Receive Data +	3	3	Receive Data A
Receive Data -	28	16	Receive Data B
Request to Send +	4	4	Request to Send A
Request to Send -	29	19	Request to Send B
Clear to Send +	5	5	Clear to Send A
Clear to Send -	30	13	Clear to Send B
Data Set Ready +	6	6	DCE Ready A
Data Set Ready -	31	22	DCE Ready B
Data Terminal Ready +	8	20	DTE Ready A
Data Terminal Ready -	33	23	DTE Ready B
Data Carrier Detect +	9	8	Receive Line Signal Detect A
Data Carrier Detect -	34	10	Receive Line Signal Detect B
Send Timing +	10	15	Transmitter Signal Element Timing (DCE) A
Send Timing -	35	12	Transmitter Signal Element Timing (DCE) B

Bay Networks Termination			Remote Termination
Signal	**Pin # to Pin #**		**Signal**
Receive Timing +	11	17	Receiver Signal Element Timing (DCE) A
Receive Timing -	36	9	Receiver Signal Element Timing (DCE) B
Transmitter Timing +	12	24	Transmitter Signal Element Timing (DTE) A
Transmitter Timing -	37	11	Transmitter Signal Element Timing (DTE) B
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 13 > 38			
Pin 14 > 39			
Pin 46 > 48			

50-Pin to V.28 Cable (Order No. AA0018023)

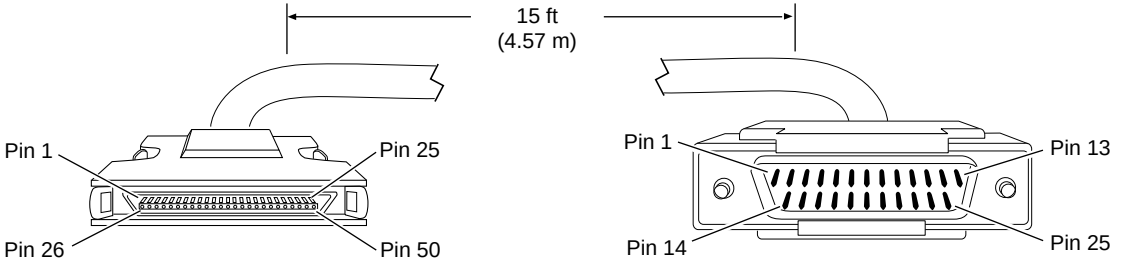

50-position 0.8-mm plug
(ground shield connected to internal shell)

25-position D-sub plug with M-3 jack screws
(ground shield connected to backshell)

CAB0103A

Industry Interface Type: V.28 (V.10)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send +	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Signal Ground	7	7	Signal Ground
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	8	Data Carrier Detect
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Terminal Timing +	12	24	Terminal Timing
Internal Wire Connections			
Pin 7 > 30 > 31 > 34			
Pin 13 > 38			
Pin 14 > 39			

15-Pin to V.35M (Order No. 7158)

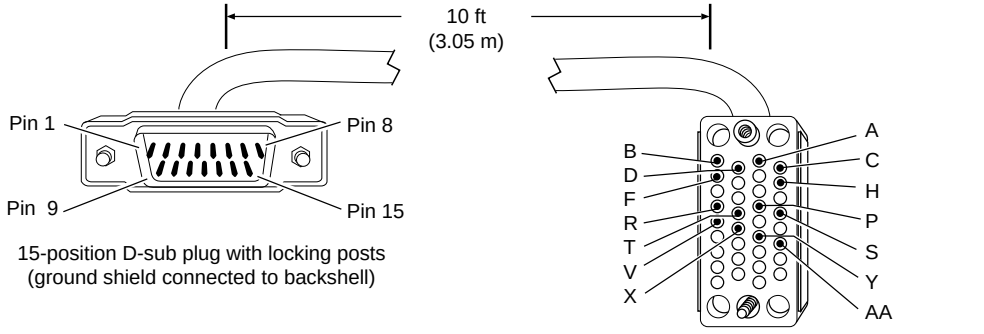

15-position D-sub plug with locking posts
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0030A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Send Data +	2	P	Send Data (Signal A)
Send Data -	3	S	Send Data (Signal B)
Serial Clock Transmit +	4	Y	Serial Clock Transmit (Signal A)
Serial Clock Transmit -	5	AA	Serial Clock Transmit (Signal B)
Request to Send +	6	C	Request to Send
Clear to Send +	8	D	Clear to Send
Data Carrier Detect +	10	F	Data Carrier Detect
Serial Clock Receive -	11	X	Serial Clock Receive (Signal B)
Serial Clock Receive +	12	V	Serial Clock Receive (Signal A)
Receive Data -	13	T	Receive Data (Signal B)
Receive Data +	14	R	Receive Data (Signal A)
Internal Wire Connections			
Pin 1 > 7		Pin C > H	

44-Pin to V.35M (Order No. 7159)

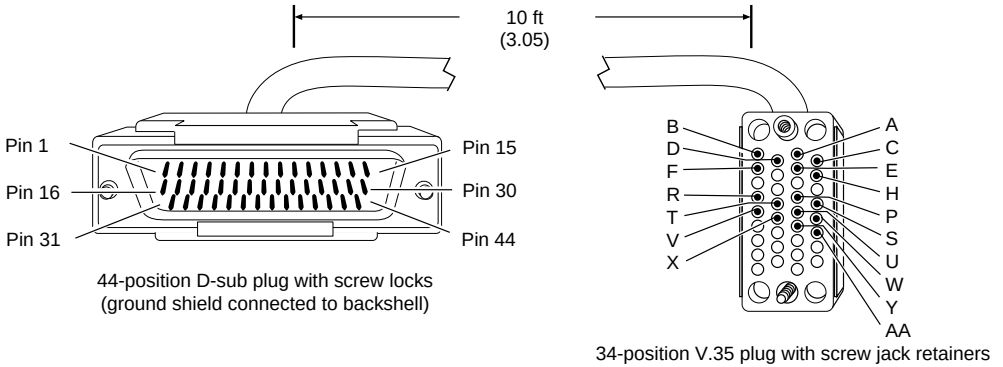

44-position D-sub plug with screw locks
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0031B

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	A	Frame Ground
Request to Send +	4	C	Request to Send
Clear to Send +	5	D	Clear to Send
Data Set Ready +	6	E	Data Set Ready
Data Terminal Ready +	8	H	Data Terminal Ready
Data Carrier Detect +	9	F	Data Carrier Detect
VTT +	40	U	Terminal Timing A
VTT -	39	W	Terminal Timing B
Signal Ground	19	B	Signal Ground
VST +	32	Y	Send Timing A
VST -	31	AA	Send Timing B
VRT +	34	V	Receive Timing A
VRT -	33	X	Receive Timing B
VRD +	37	R	Receive Data A
VRD -	35	T	Receive Data B
VSD +	38	P	Send Data A
VSD -	36	S	Send Data B
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 41 > 42 > 43			
Pin 13 > 28			
Pin 14 > 29			

15-Pin D-Sub to V.35: No DTR, for WAN (Order No. 7215)

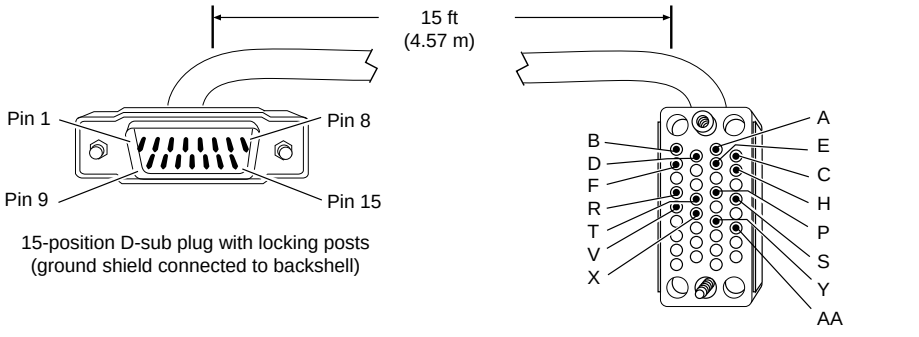

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Send Data +	2	P	Send Data A
Send Data -	3	S	Send Data B
Serial Clock Transmit +	4	Y	Serial Clock Transmit A
Serial Clock Transmit -	5	AA	Serial Clock Transmit B
Request to Send +	6	C	Request to Send
Clear to Send +	8	D	Clear to Send
Data Carrier Detect +	10	F	Data Carrier Detect
Serial Clock Receive -	11	X	Serial Clock Receive B
Serial Clock Receive +	12	V	Serial Clock Receive A
Receive Data -	13	T	Receive Data B
Receive Data +	14	R	Receive Data A
Data Set Ready +	15	E	Data Set Ready
Internal Wire Connections			
Pin 1 > 7			

15-Pin D-Sub to V.35 with DTR (Order No. 7216)

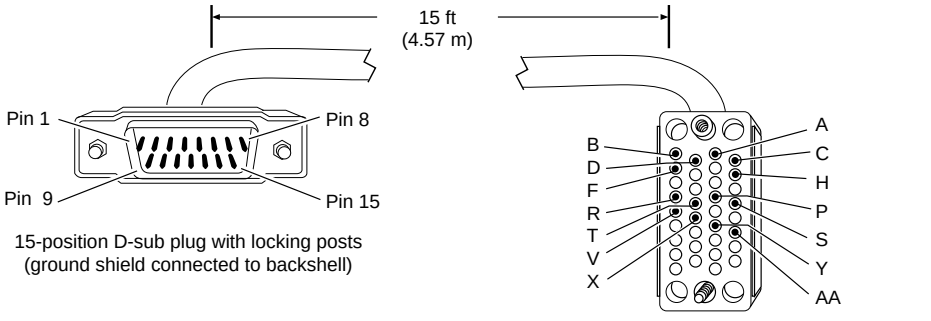

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Send Data +	2	P	Send Data A
Send Data -	3	S	Send Data B
Serial Clock Transmit +	4	Y	Serial Clock Transmit A
Serial Clock Transmit -	5	AA	Serial Clock Transmit B
Request to Send +	6	C	Request to Send
Clear to Send ++	8	D	Clear to Send
Data Carrier Detect +	10	F	Data Carrier Detect
Serial Clock Receive -	11	X	Serial Clock Receive B
Serial Clock Receive +	12	V	Serial Clock Receive A
Receive Data -	13	T	Receive Data B
Receive Data +	14	R	Receive Data A
Internal Wire Connections			
Pin 1 > 7		Pin C > H	

RS-232 Pass-through: 15-Pin to RS-232 (Order No. 7218)

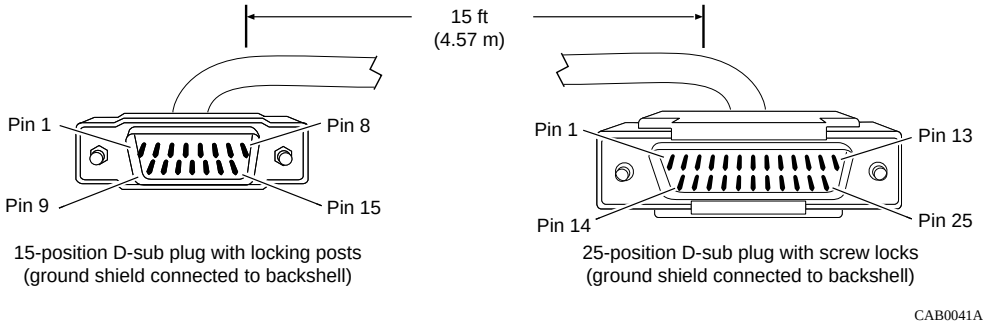

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	7	Signal Ground
Transmitted Data	2	3	Received Data
Transmit Clock	4	15	Transmit Clock
Data Set Ready	6	8	Data Carrier Detect
Data Carrier Detect	10	4	Clear to Send
Receive Clock	12	17	Receive Clock
Received Data	14	2	Transmitted Data
Internal Wire Connections			
Pin 1 > 7 > 9		Pin 4 > 5	
Pin 6 > 8		Pin 6 > 20	
Pin 3 > 4 >12			

V.35 Pass-through: 15-Pin to V.35 (Order No. 7219)

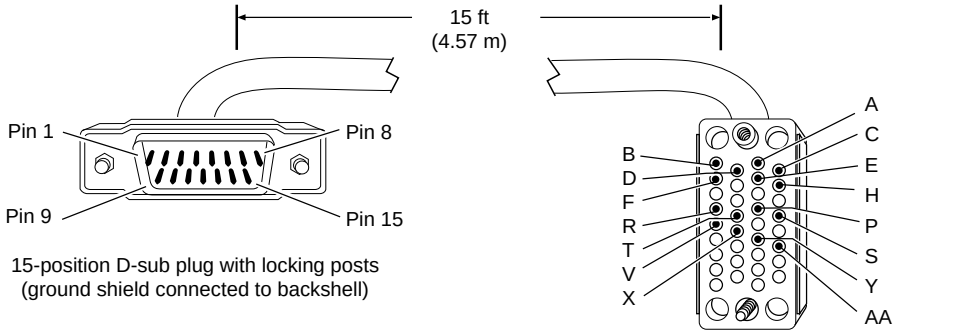

15-position D-sub plug with locking posts
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0042A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Transmit Data +	2	R	Receive Data A
Transmit Data -	3	T	Receive Data B
Serial Clock Transmit +	4	Y	Serial Clock Transmit A
Serial Clock Transmit -	5	AA	Serial Clock Transmit B
Request to Send	6	F	Data Carrier Detect
Data Carrier Detect	10	D	Clear to Send
Serial Clock Receive -	11	X	Serial Clock Receive B
Serial Clock Receive +	12	V	Serial Clock Receive A
Receive Data -	13	S	Transmit Data B
Receive Data +	14	P	Transmit Data A
Internal Wire Connections			
Pin 6 > 8		Pin C > D	
Pin 4 > 12		Pin E > H	
Pin 5 > 11			
Pin 1 > 7			

44-Pin D-Sub to V.35: Leased Line or V.25bis (Order No. 7220)

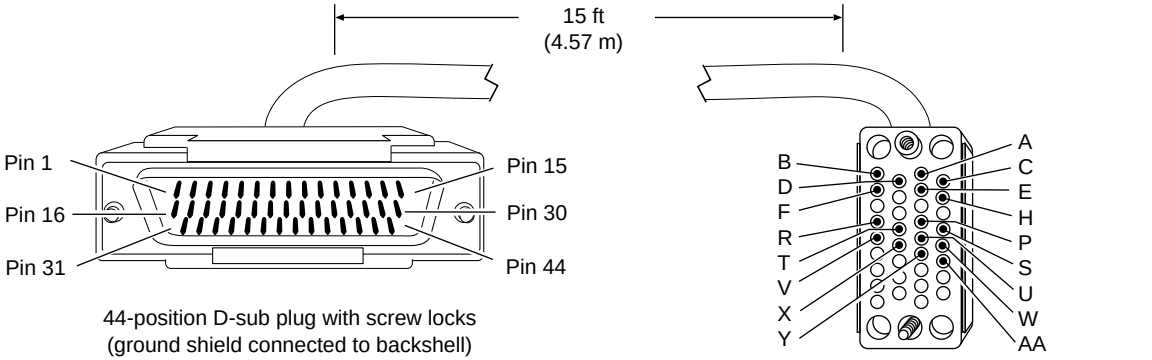

44-position D-sub plug with screw locks
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0106A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	38	P	Send Data A
VSD -	36	S	Send Data B
VRT +	34	V	Receive Timing A
VRT -	33	X	Receive Timing B
VST +	32	Y	Send Timing A
VST -	31	AA	Send Timing B
VRD +	37	R	Receive Data A
VRD -	35	T	Receive Data B
Data Set Ready +	6	E	Data Set Ready
Data Terminal Ready +	8	H	Data Terminal Ready
Request to Send +	4	C	Request to Send
Clear to Send +	5	D	Clear to Send
VTT +	40	U	Terminal Timing A
VTT -	39	W	Terminal Timing B
Frame Ground	1	A	Frame Ground
Data Carrier Detect +	9	F	Data Carrier Detect
Signal Ground	19	B	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 41 > 42 > 43			
Pin 13 > 28			
Pin 14 > 29			

15-Pin D-Sub to X.21 (Order No. 7221)

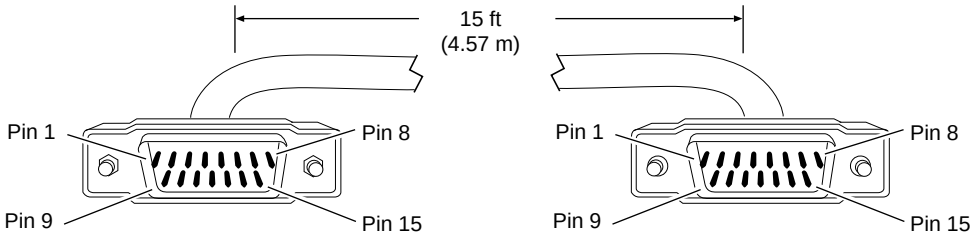

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub plug with M-3 jack screws (ground shield connected to backshell)

CAB0044A

Industry Interface Type: X.21 (V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Ground	1	1	Ground
Send Data +	2	2	Transmitted Data A
Send Data -	3	9	Transmitted Data B
Request to Send +	6	3	Control A
Request to Send -	15	10	Control B
Receive Data +	14	4	Receive Data A
Receive Data -	13	11	Receive Data B
Data Carrier Detect +	10	5	Indication A
Data Carrier Detect -	9	12	Indication B
Send Timing +	4	6	Timing A
Send Timing -	5	13	Timing B

Note: You must move Jumpers A-E to the X.21 (2-3) position to support this interface.

44-Pin D-Sub to X.21 (Order No. 7224)

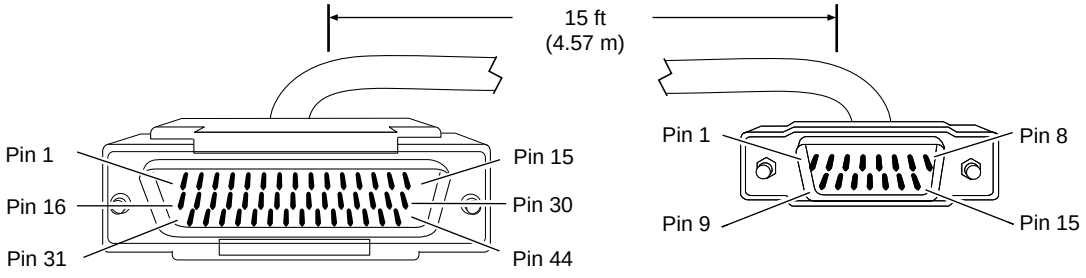

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub plug with M-3 jack screws
(ground shield connected to backshell)

CAB0104A

Industry Interface Type: X.21 (V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Transmitted Data A
Send Data -	16	9	Transmitted Data B
Request to Send +	4	3	Control A
Request to Send -	18	10	Control B
Receive Data +	3	4	Receive Data A
Receive Data -	17	11	Receive Data B
Data Carrier Detect +	9	5	Indication A
Data Carrier Detect -	23	12	Indication B
Send Timing +	10	6	Timing A
Send Timing -	24	13	Timing B
Signal Ground	7	8	Signal Ground
Frame Ground	1	1	Frame Ground
Internal Wire Connections			
Pin 14 > 15			
Pin 28 > 30			
Pin 41 > 43			

15-Pin D-Sub to RS-232 (Order No. 7255)

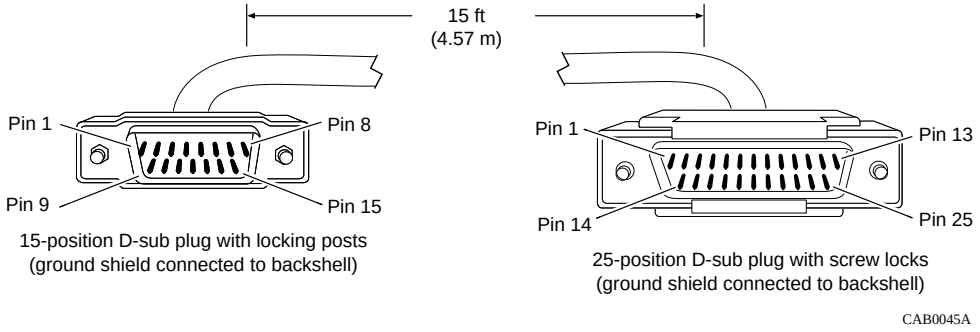

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	7	Signal Ground
Transmitted Data	2	2	Transmitted Data
Transmitter Signal Element Timing (DTE Source)	3	24	Transmitter Signal Element Timing (DTE Source)
Transmitter Signal Element Timing (DCE Source)	4	15	Transmitter Signal Element Timing (DCE Source)
Request to Send	6	4	Request to Send
Clear to Send	8	5	Clear to Send
Carrier Detect	10	8	Carrier Detect
Receiver Signal Element Timing (DCE Source)	12	17	Receiver Signal Element Timing (DCE Source)
Received Data	14	3	Received Data
Data Set Ready	15	6	Data Set Ready
Internal Wire Connections			
Pin 1 > 7 > 9		Pin 4 > 20	

15-Pin D-Sub to V.28 (Order No. 7256)

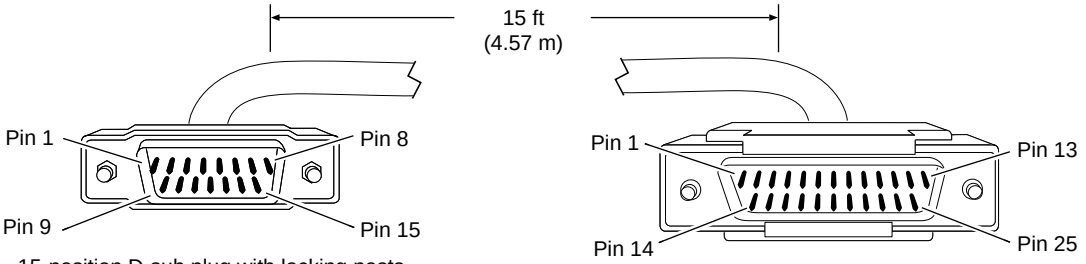

15-position D-sub plug with locking posts
(ground shield connected to backshell)

25-position D-sub plug with M-3 jack screws
(ground shield connected to backshell)

CAB0045B

Industry Interface Type: V.28 (V.10)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	7	Signal Ground
Transmitted Data	2	2	Transmitted Data
Transmitter Timing (DTE Source)	3	24	Transmitter Signal Element Timing (DTE Source)
Transmitter Signal Element Timing (DCE Source)	4	15	Transmitter Signal Element Timing (DCE Source)
Request to Send	6	4	Request to Send
Clear to Send	8	5	Clear to Send
Carrier Detect	10	8	Carrier Detect
Receiver Signal Element Timing (DCE Source)	12	17	Receiver Signal Element Timing (DCE Source)
Received Data	14	3	Received Data
Data Set Ready	15	6	Data Set Ready
Internal Wire Connections			
Pin 1 > 7 > 9		Pin 4 > 20	

15-Pin Crossover (Order No. 7260)

Note: This crossover cable interconnects two Bay Networks router software platforms.

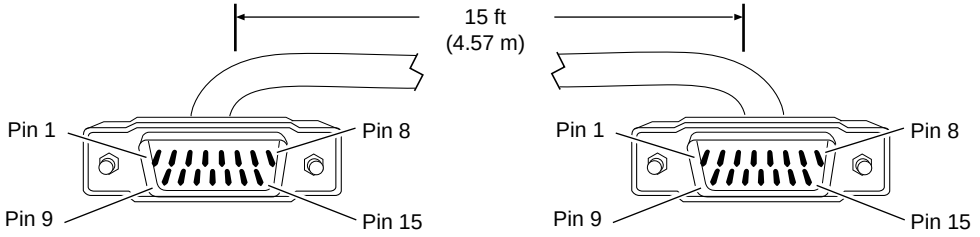

15-position D-sub plug with locking posts (ground shield connected to backshell)

15-position D-sub plug with locking posts (ground shield connected to backshell)

CAB0049A

Industry Interface Type: V.35

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	15	Return Common
Send Data +	2	14	Receive Data +
Send Data -	3	13	Receive Data -
Serial Clock Transmit +	4	12	Serial Clock Receive +
Serial Clock Transmit -	5	11	Serial Clock Receive -
Request to Send +	6	10	Data Carrier Detect +
Data Carrier Detect +	10	6	Request to Send +
Serial Clock Receive -	11	5	Serial Clock Transmit-
Serial Clock Receive +	12	4	Serial Clock Transmit +
Receive Data -	13	3	Send Data -
Receive Data +	14	2	Send Data +
Return Common	15	1	Signal Ground
Internal Wire Connections			
Pin 6 > 8		Pin 6 > 8	
Pin 7 > 9 > 15		Pin 7 > 9 > 15	

15-Pin D-Sub to RS-422 (Order No. 7315)

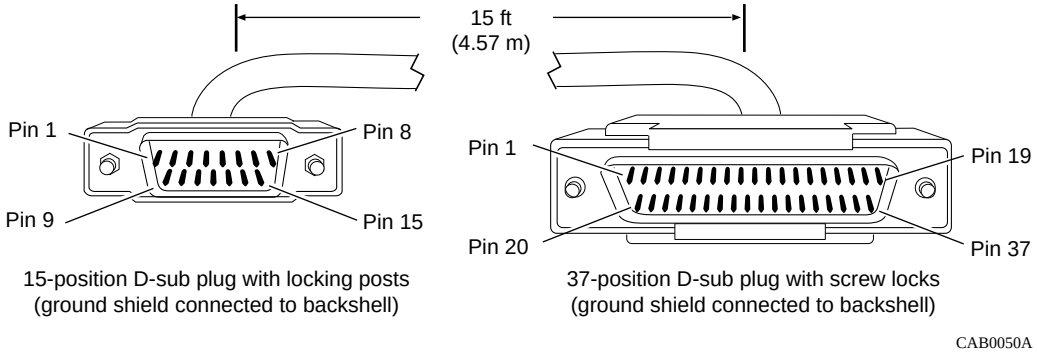

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	25	Send Common
Send Data +	2	4	Send Data A
Send Data -	3	22	Send Data B
Serial Clock Transmit +	4	5	Send Timing A
Serial Clock Transmit -	5	23	Send Timing B
Request to Send	6	12	Terminal Ready A
Clear to Send -	7	27	Clear to Send B
Clear to Send +	8	9	Clear to Send A
Data Carrier Detect -	9	31	Data Carrier Detect B
Data Carrier Detect +	10	13	Data Carrier Detect A
Serial Clock Receive -	11	26	Receive Timing B
Serial Clock Receive +	12	8	Receive Timing A
Receive Data -	13	24	Receive Data B
Receive Data +	14	6	Receive Data A
Internal Wire Connections			
		Pin 7 > 12	
		Pin 25 > 30 > 37	

Note: You must move Jumpers B and C to the X.21 (2-3) position to support this interface.

44-Pin D-Sub to RS-422: Leased Line or V.25bis (Order No. 7318)

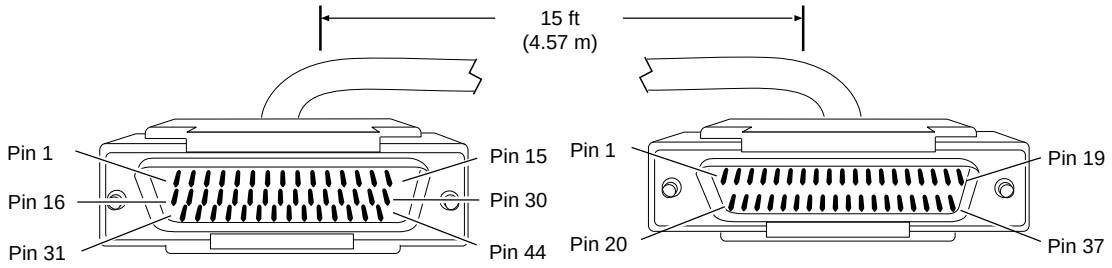

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Data Carrier Detect -	23	31	Receiver Ready B
Data Carrier Detect +	9	13	Receiver Ready A
Send Data +	2	4	Send Data A
Send Data -	16	22	Send Data B
Receive Timing +	11	8	Receive Timing A
Receive Timing -	25	26	Receive Timing B
Send Timing +	10	5	Send Timing A
Send Timing -	24	23	Send Timing B
Receive Data +	3	6	Receive Data A
Receive Data -	17	24	Receive Data B
Clear to Send -	19	27	Clear to Send B
Clear to Send +	5	9	Clear to Send A
Request to Send +	4	7	Request to Send A
Request to Send -	18	25	Request to Send B
Data Set Ready +	6	11	DM A
Data Set Ready -	20	29	DM B
Terminal Ready +	8	12	Terminal Ready A
Terminal Ready -	22	30	Terminal Ready B
Terminal Timing +	12	17	Terminal Timing A
Terminal Timing -	26	35	Terminal Timing B
Send Common	44	37	Send Common
Signal Ground	41	19	Signal Ground
Internal Wire Connections			
Pin 41 > 43		Pin 20 > 37	
Pin 13 > 28			
Pin 14 > 29			

44-Pin D-Sub to RS-232: Leased Line or V.25bis (Order No. 7826)

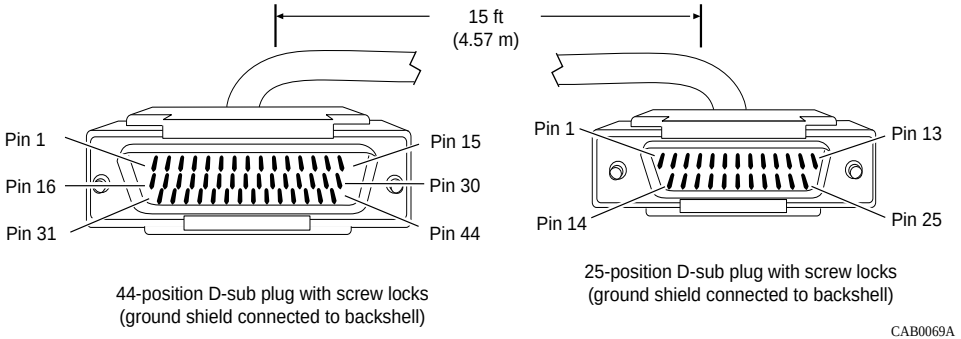

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0069A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send+	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	8	Data Carrier Detect
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Transmitter Signal Element Timing +	12	24	Transmitter Signal Element Timing
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 13 > 28			
Pin 14 > 29			

RS-232 Pass-through: 44-Pin to RS-232 (Order No. 7833)

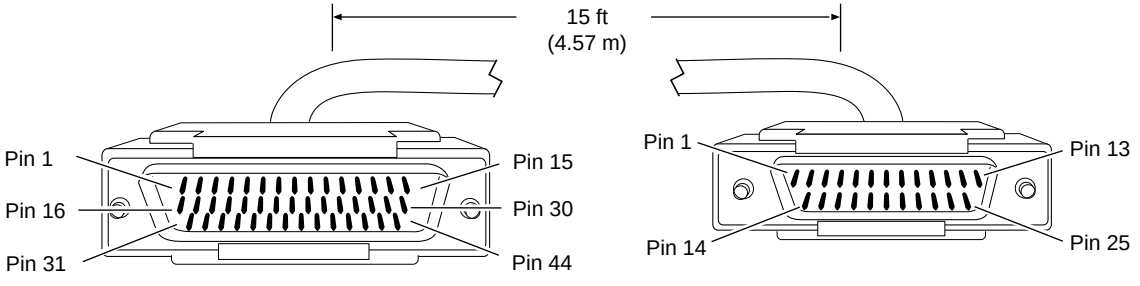

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0065A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**
Signal	**Pin # to Pin #**	**Signal**
Receive Data +	3 2	Send Data
Send Data +	2 3	Receive Data
Data Carrier Detect +	9 5	Clear to Send
RTS +	4 8	Data Carrier Detect
Send Timing +	10 17	Receive Timing
Frame Ground	1 1	Frame Ground
Signal Ground	7 7	Signal Ground
Internal Wire Connections		
Pin 4 > 5		Pin 4 > 5
Pin 10 > 11 > 12		Pin 15 > 17
Pin 7 > 19 > 20 > 23		Pin 6 > 20
Pin 13 > 28		
Pin 14 > 29		

V.35 Pass-through: 44-Pin to V.35 (Order No. 7834)

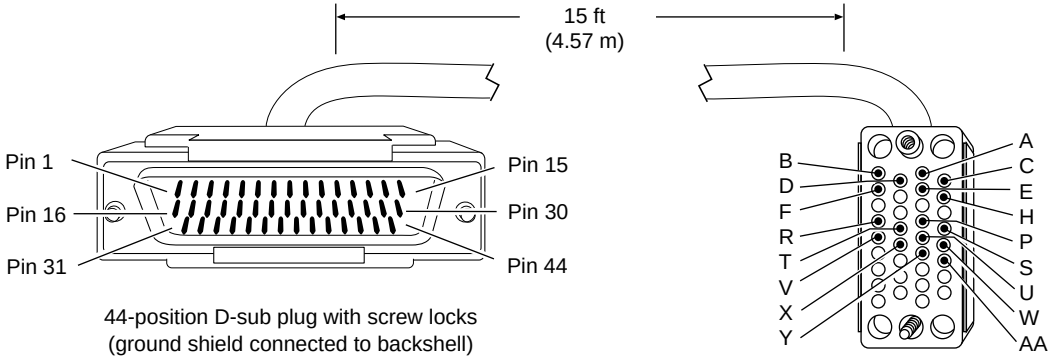

44-position D-sub plug with screw locks
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0106A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	38	R	Receive Data A
VSD -	36	T	Receive Data B
VRD +	37	P	Send Data A
VRD -	35	S	Send Data B
Request to Send +	4	F	Data Carrier Detect
Data Carrier Detect +	9	D	Clear to Send
VTT +	40	V	Receive Timing A
VTT -	39	X	Receive Timing B
Frame Ground	1	A	Frame Ground
Signal Ground	7	B	Signal Ground
Internal Wire Connections			
Pin 4 > 5		Pin C > D	
Pin 32 > 34 > 40		Pin V > Y	
Pin 31 > 33 > 39		Pin X > AA	
Pin 7 > 19 > 20 > 23 > 41 > 42		Pin E > H	
Pin 13 > 28			
Pin 14 > 29			

V.35 Crossover: 44-Pin to 44-Pin (Order No. 7835)

Note: This crossover cable interconnects two Bay Networks router software platforms.

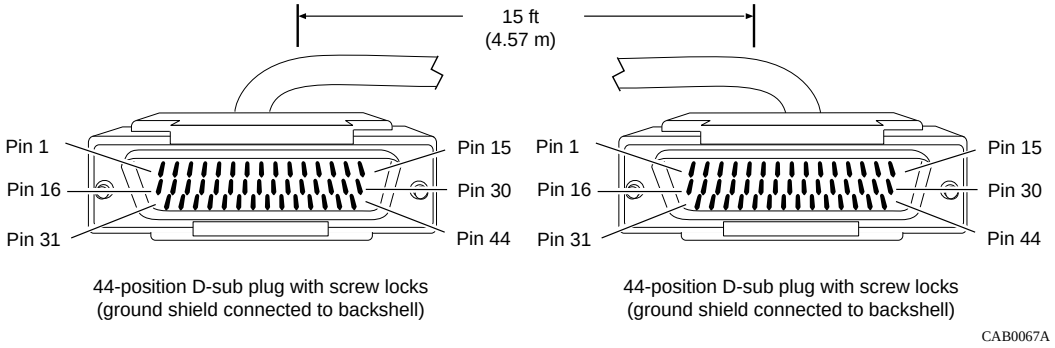

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	38	37	VRD +
VSD -	36	35	VRD -
VRD +	37	38	VSD +
VRD -	35	36	VSD -
RTS +	4	9	DCD +
DCD +	9	4	RTS +
VRT +	34	40	VTT +
VTT +	40	34	VRT +
VRT -	33	39	VTT -
VTT -	39	33	VRT -
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 4 > 5 (CTS +)		Pin 4 > 5 (CTS +)	
Pin 32 (VST +) > 40 (VTT +)		Pin 32 (VST +) > 40 (VTT +)	
Pin 31 (VST -) > 39 (VTT -)		Pin 31 (VST -) > 39 (VTT -)	
Pin 7 > 19 > 20 > 23		Pin 7 > 19 > 20 > 23	
Pin 13 > 28		Pin 13 > 28	
Pin 14 > 29		Pin 14 > 29	
Pin 41 > 42 > 43		Pin 41 > 42 > 43	

V.35 Crossover: 44-Pin to 15-Pin (Order No. 7836)

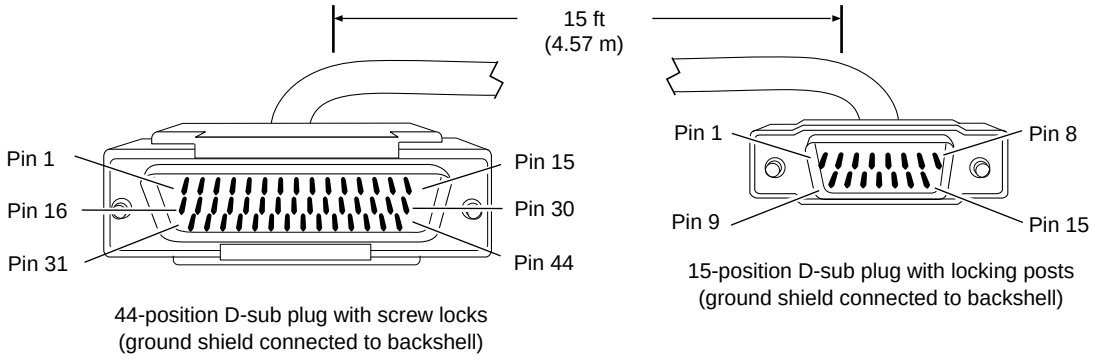

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub plug with locking posts
(ground shield connected to backshell)

CAB0068A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	38	14	Receive Data A
VSD -	36	13	Receive Data B
VRT +	34	4	SCT A
VRT -	33	5	SCT B
VTT +	40	12	SCR A
VTT -	39	11	SCR B
VRD +	37	2	Send Data A
VRD -	35	3	Send Data B
Request to Send +	4	10	Data Carrier Detect A
Data Carrier Detect +	9	8	Clear to Send A
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 32 > 40		Pin 6 > 8	
Pin 31 > 39		Pin 1 > 7 > 9 > 15	
Pin 4 > 5			
Pin 7 > 19 > 20 > 23			
Pin 13 > 28			
Pin 14 > 29			
Pin 41 > 42 > 43			

44-Pin D-Sub to V.28 (Order No. 7837)

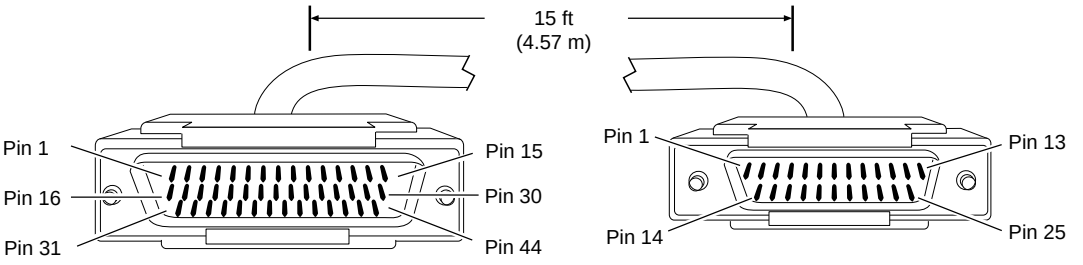

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with M-3 jack screws
(ground shield connected to backshell)

CAB0069B

Industry Interface Type: V.28 (V.10)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send +	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	8	Data Carrier Detect
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Transmitter Signal Element Timing +	12	24	Transmitter Signal Element Timing
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 13 > 28			
Pin 14 > 29			

50-Pin to V.35 (Order No. 7932)

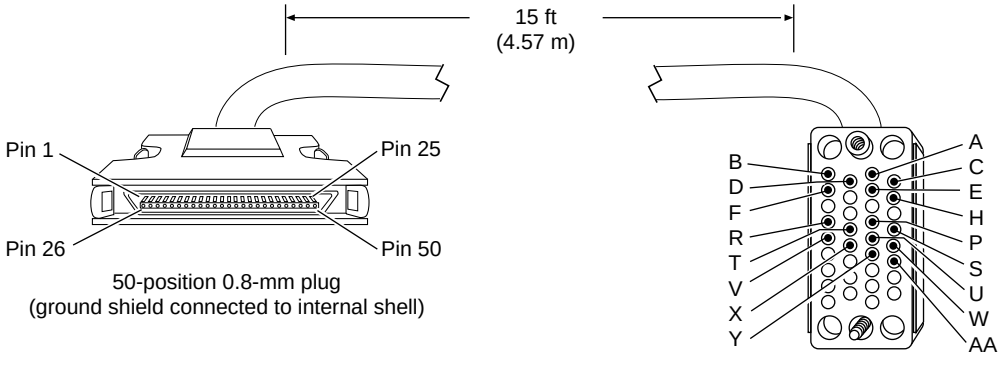

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	P	Send Data A
VSD -	19	S	Send Data B
VRT +	42	V	Receive Timing A
VRT -	17	X	Receive Timing B
VST +	41	Y	Send Timing A
VST -	16	AA	Send Timing B
VRD +	43	R	Receive Data A
VRD -	18	T	Receive Data B
Data Set Ready +	6	E	Data Set Ready
Data Terminal Ready +	8	H	Data Terminal Ready
Request to Send +	4	C	Request to Send
Clear to Send +	5	D	Clear to Send
VTT +	45	U	Terminal Timing A
VTT -	20	W	Terminal Timing B
Frame Ground	1	A	Frame Ground
Data Carrier Detect	9	F	Data Carrier Detect
Signal Ground	30	B	Signal Ground
Internal Wire Connections			
Pin 7 > 30 > 31 > 34			
Pin 46 > 47 > 48			
Pin 13 > 38			
Pin 14 > 39			

50-Pin to RS-232 (Order No. 7934)

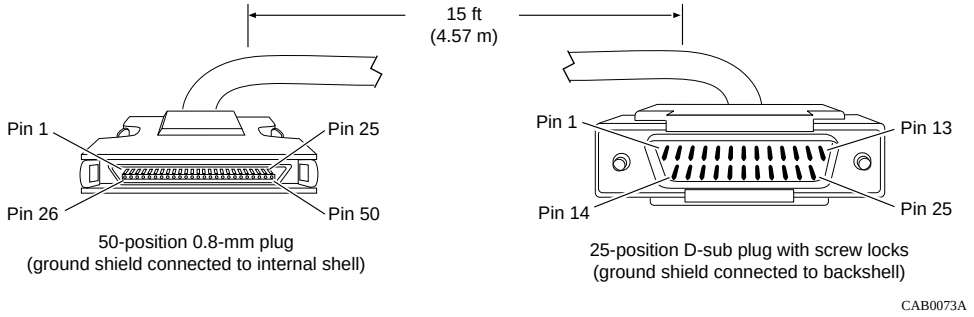

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send +	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Signal Ground	7	7	Signal Ground
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	8	Data Carrier Detect
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Terminal Timing +	12	24	Terminal Timing
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 7 > 30 > 31 > 34			
Pin 13 > 38			
Pin 14 > 39			

50-Pin to X.21 (Order No. 7936)

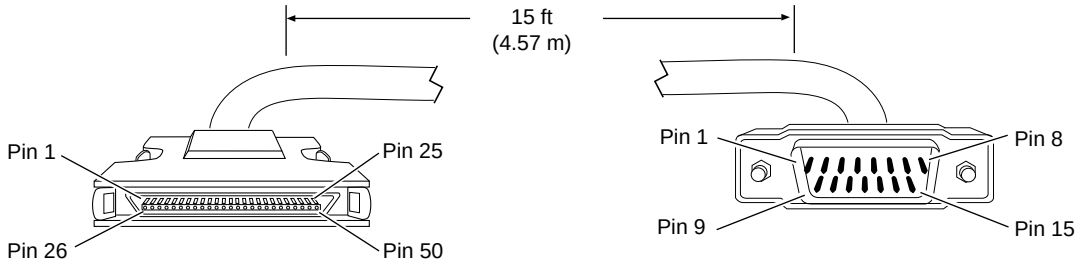

50-position 0.8-mm plug
(ground shield connected to internal shell)

15-position D-sub plug with M-3 jack screws
(ground shield connected to backshell)

CAB0074A

Industry Interface Type: X.21 (V.11)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Transmitted Data A
Send Data -	27	9	Transmitted Data B
Request to Send +	4	3	Control A
Request to Send -	29	10	Control B
Receive Data +	3	4	Receive Data A
Receive Data -	28	11	Receive Data B
Data Carrier Detect +	9	5	Indication A
Data Carrier Detect -	34	12	Indication B
Timing +	10	6	Timing A
Timing -	35	13	Timing B
Frame Ground	1	1	Frame Ground
Signal Ground	7	8	Signal Ground
Internal Wire Connections			
Pin 46 > 48 (GRD)			
Pin 38 > 40			
Pin 14 > 15			

50-Pin to RS-422 (Order No. 7937)

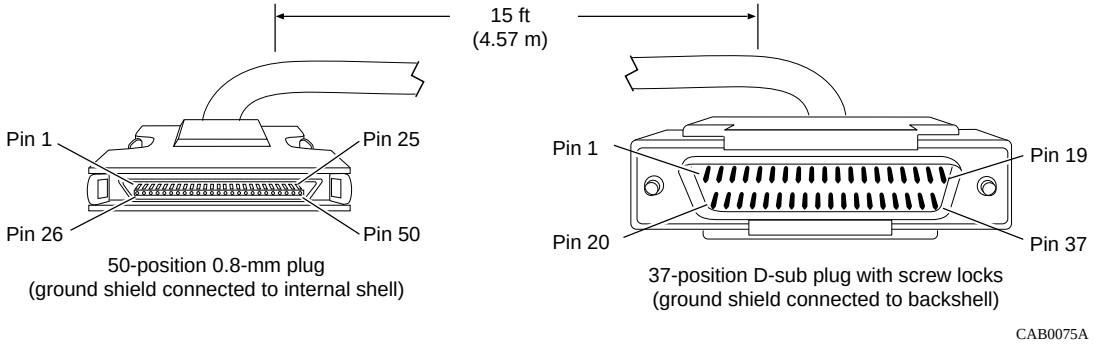

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Data Carrier Detect -	34	31	Receiver Ready B
Data Carrier Detect +	9	13	Receiver Ready A
Send Data +	2	4	Send Data A
Send Data -	27	22	Send Data B
Receive Timing +	11	8	Receive Timing A
Receive Timing -	36	26	Receive Timing B
Send Timing +	10	5	Send Timing A
Send Timing -	35	23	Send Timing B
Receive Data +	3	6	Receive Data A
Receive Data -	28	24	Receive Data B
Clear to Send -	30	27	Clear to Send B
Clear to Send +	5	9	Clear to Send A
Request to Send +	4	7	Request to Send A
Request to Send -	29	25	Request to Send B
Data Set Ready +	6	11	Data Mode A
Data Set Ready -	31	29	Data Mode B
Terminal Ready +	8	12	Terminal Ready A
Terminal Ready -	33	30	Terminal Ready B
Terminal Timing +	12	17	Terminal Timing A
Terminal Timing -	37	35	Terminal Timing B
Send Common	49	37	Send Common
Signal Ground	48	19	Signal Ground
Internal Wire Connections			
Pin 46 (UNBE) > 48 (SGRD)		Pin 20 > 37	
Pin 13 > 38			
Pin 14 > 39			

50-Pin to 50-Pin Crossover (Order No. 7938)

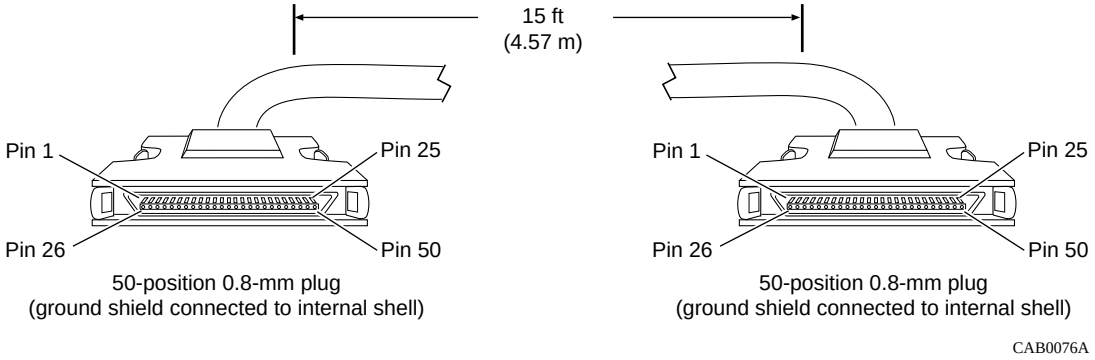

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	43	VRD +
VSD -	19	18	VRD -
VRD +	43	44	VSD +
VRD -	18	19	VSD -
Request to Send +	4	9	Data Carrier Detect +
Data Carrier Detect +	9	4	Request to Send +
VRT +	42	45	VTT +
VTT +	45	42	VRT +
VRT -	17	20	VTT -
VTT -	20	17	VRT -
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 4 > 5 (CTS +)		Pin 4 > 5 (CTS +)	
Pin 41 (VST +) > 45 (VTT +)		Pin 41 (VST +) > 45 (VTT +)	
Pin 16 (VST -) > 20 (VTT -)		Pin 16 (VST -) > 20 (VTT -)	
Pin 7 > 30 > 31 > 34		Pin 7 > 30 > 31 > 34	
Pin 13 > 38		Pin 13 > 38	
Pin 14 > 39		Pin 14 > 39	
Pin 46 > 47 > 48		Pin 46 > 47 > 48	

50-Pin to 15-Pin Crossover (Order No. 7939)

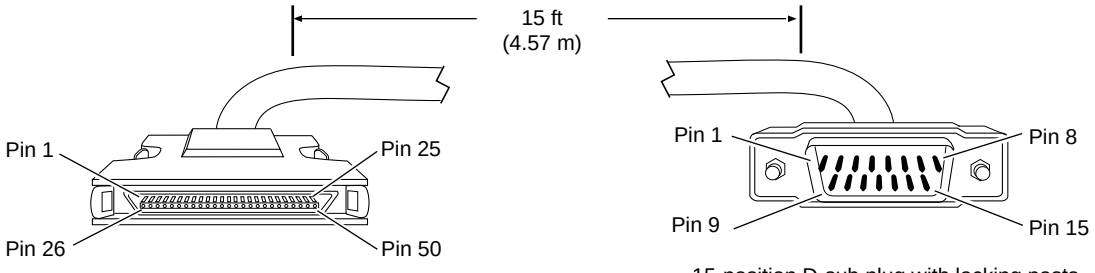

Industry Interface Type: V.35 (V10 and V.11)

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	14	Receive Data +
VSD -	19	13	Receive Data -
VRD +	43	2	Send Data +
VRD -	18	3	Send Data -
Request to Send +	4	10	Data Carrier Detect +
Data Carrier Detect +	9	6	Request to Send +
VRT +	42	4	SCT +
VTT +	45	12	SCR +
VRT -	17	5	SCT -
VTT -	20	11	SCR -
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 4 > 5 (CTS +)		Pin 6 > 8 (CTS +)	
Pin 41 (VST +) > 45 (VTT +)		Pin 1 > 7 > 9 >15	
Pin 16 (VST -) > 20 (VTT -)			
Pin 7 > 30 > 31 > 34			
Pin 13 > 38			
Pin 14 > 39			
Pin 46 > 47 > 48			

50-Pin to 44-Pin Crossover (Order No. 7940)

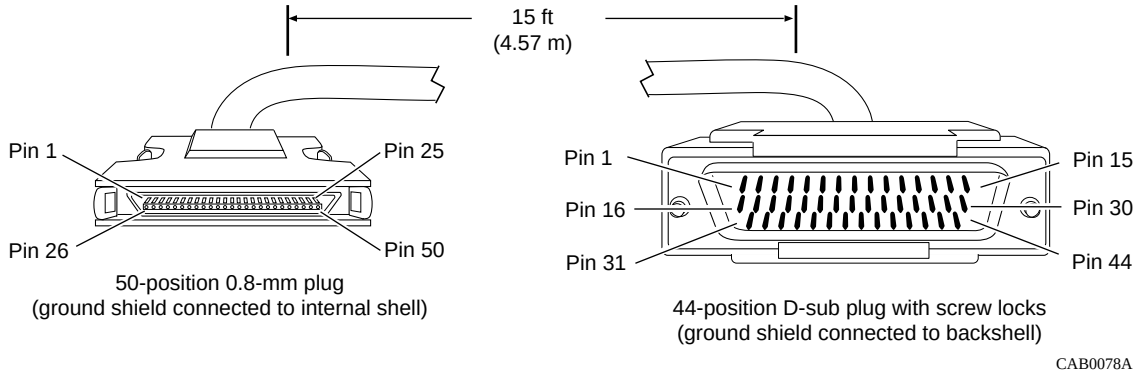

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination A		**Bay Networks Termination B**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	37	VRD +
VSD -	19	35	VRD -
VRD +	43	38	VSD +
VRD -	18	36	VSD -
Request to Send +	4	9	Data Carrier Detect +
Data Carrier Detect +	9	4	Request to Send +
VRT +	42	40	VTT +
VTT +	45	34	VRT +
VRT -	17	39	VTT -
VTT -	20	33	VRT -
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 4 > 5 (CTS +)		Pin 4 > 5 (CTS +)	
Pin 41 (VST +) > 45 (VTT +)		Pin 32 (VST +) > 40 (VTT +)	
Pin 16 (VST -) > 20 (VTT -)		Pin 31 (VST -) > 39 (VTT -)	
Pin 7 > 30 > 31 > 34		Pin 7 > 19 > 20 > 23	
Pin 13 > 38		Pin 13 > 28	
Pin 14 > 39		Pin 14 > 29	
Pin 46 > 47 > 48		Pin 41 > 42 > 43	

15-Pin to F RS-232 Synchronous Pass-through (Order No. 7941)

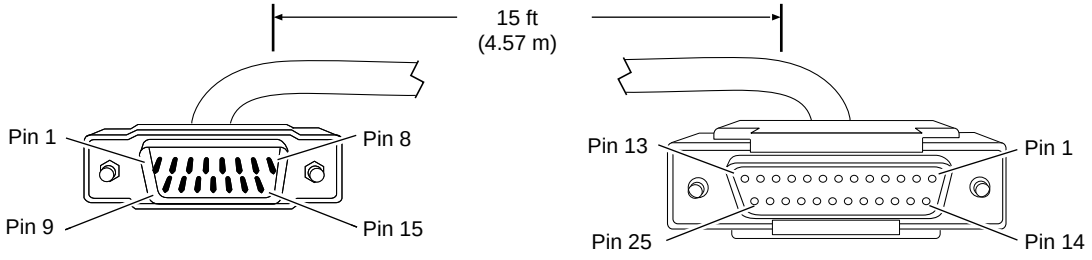

15-position D-sub plug with locking posts (ground shield connected to backshell)

25-position D-sub receptacle with screw locks (ground shield connected to backshell)

CAB0079A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Data	2	3	Receive Data
Receive Data	14	2	Transmit Data
Request to Send	6	8	Data Carrier Detect
Data Carrier Detect	10	4	Request to Send
Transmit Clock	4	15	Transmit Clock
Signal Ground	1	7	Signal Ground
Internal Wire Connections			
Pin 6 > 8		Pin 4 > 5	
Pin 3 > 4 > 12		Pin 15 > 17	
Pin 1 > 7 > 9		Pin 6 > 20	

15-Pin to F V.35 Synchronous Pass-through (Order No. 7942)

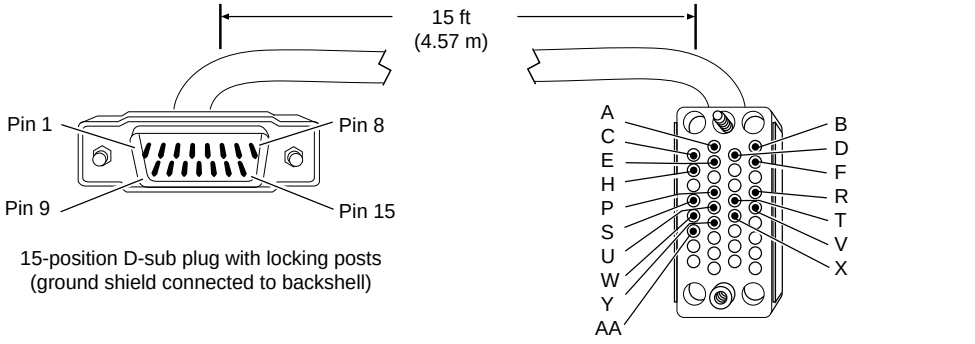

15-position D-sub plug with locking posts
(ground shield connected to backshell)

34-position V.35 receptacle with screw jack retainers
(ground shield connected to backshell)

CAB0080A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Transmit Data +	2	R	Receive Data A
Transmit Data -	3	T	Receive Data B
Receive Data +	14	P	Transmit Data A
Receive Data -	13	S	Transmit Data B
Request to Send+	6	F	Data Carrier Detect
Data Carrier Detect +	10	D	Clear to Send
SCT +	4	Y	SCT A
SCT -	5	AA	SCT B
Signal Ground	1	B	Signal Ground
Internal Wire Connections			
Pin 1 > 7		Pin C > D	
Pin 6 > 8		Pin Y > V	
Pin 4 > 12		Pin AA > X	
Pin 5 > 11		Pin E > H	

44-Pin to F RS-232 Synchronous Pass-through (Order No. 7943)

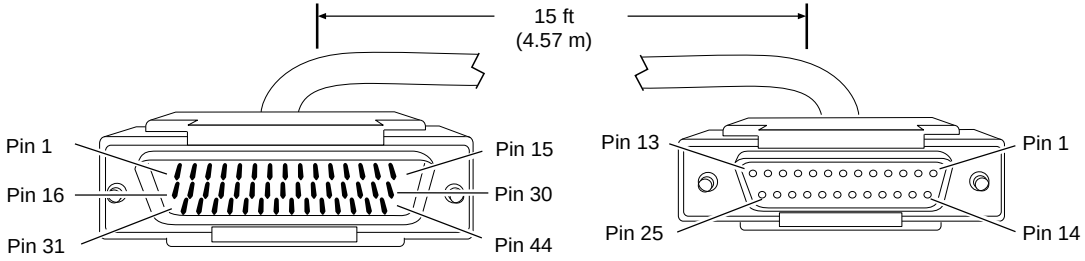

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub receptacle with screw locks
(ground shield connected to backshell)

CAB0081A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	3	Receive Data
Receive Data +	3	2	Send Data
Request to Send +	4	8	Data Carrier Detect
Data Carrier Detect +	9	4	Request to Send
Send Timing +	10	15	Send Timing
Frame Ground	1	1	Frame Ground
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 4 > 5		Pin 4 > 5	
Pin 10 > 11 > 12		Pin 15 > 17	
Pin 13 > 28		Pin 6 > 20	
Pin 14 > 29			
Pin 7 > 19 > 20 > 23			

44-Pin to F V.35 Synchronous Pass-through (Order No. 7944)

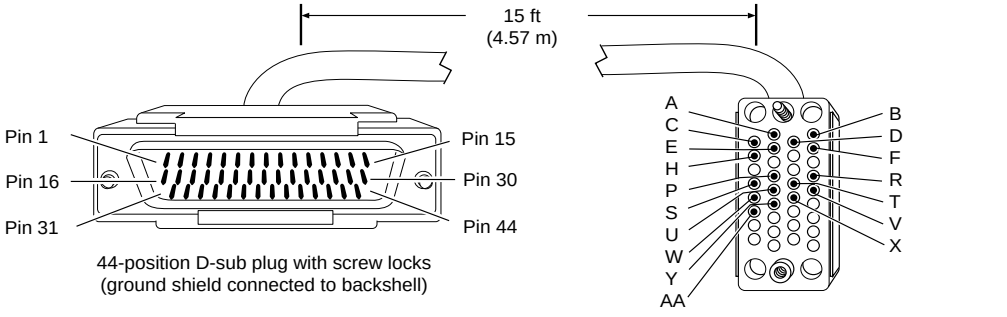

44-position D-sub plug with screw locks
(ground shield connected to backshell)

34-position V.35 receptacle with screw jack retainers
(ground shield connected to backshell)

CAB0082A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	38	R	Receive Data A
VSD -	36	T	Receive Data B
VRD +	37	P	Send Data A
VRD -	35	S	Send Data B
Request to Send +	4	F	Data Carrier Detect
Data Carrier Detect +	9	C	Request to Send
VTT +	40	Y	Send Timing A
VTT -	39	AA	Send Timing B
Frame Ground	1	A	Frame Ground
Signal Ground	7	B	Signal Ground
Internal Wire Connections			
Pin 4 > 5		Pin C > D	
Pin 32 > 34 > 40		Pin V > Y	
Pin 31 > 33 > 39		Pin X > AA	
Pin 13 > 28		Pin E > F	
Pin 14 > 29			
Pin 7 > 19 > 20 > 23 > 41 > 42			

50-Pin to F RS-232 Synchronous Pass-through (Order No. 7945)

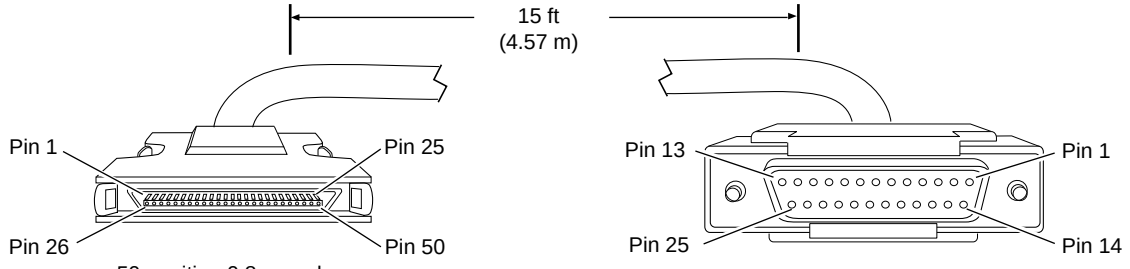

50-position 0.8-mm plug
(ground shield connected to internal shell)

25-position D-sub receptacle with screw locks
(ground shield connected to backshell)

CAB0083A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	3	Receive Data
Receive Data +	3	2	Send Data
Request to Send +	4	8	Data Carrier Detect
Data Carrier Detect +	9	4	Request to Send
Send Timing +	10	15	Send Timing
Frame Ground	1	1	Frame Ground
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 4 > 5		Pin 4 > 5	
Pin 10 > 11 > 12		Pin 15 > 17	
Pin 13 > 38		Pin 6 > 20	
Pin 14 > 39			
Pin 7 > 30 > 31 > 34			

50-Pin to F V.35 Synchronous Pass-through (Order No. 7946)

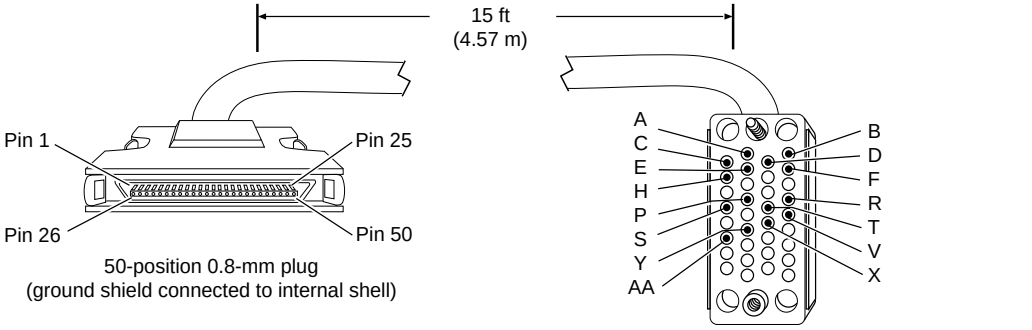

50-position 0.8-mm plug
(ground shield connected to internal shell)

34-position V.35 receptacle with screw jack retainers
(ground shield connected to backshell)

CAB0084A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	R	Receive Data A
VSD -	19	T	Receive Data B
VRD +	43	P	Send Data A
VRD -	18	S	Send Data B
Request to Send +	4	F	Data Carrier Detect
Data Carrier Detect +	9	D	Clear to Send
VTT +	45	Y	Send Timing A
VTT -	20	AA	Send Timing B
Frame Ground	1	A	Frame Ground
Signal Ground	7	B	Signal Ground
Internal Wire Connections			
Pin 4 > 5		Pin C > D	
Pin 41 > 42 > 45		Pin V > Y	
Pin 16 > 17 > 20		Pin X > AA	
Pin 13 > 38		Pin E > F	
Pin 14 > 39			
Pin 7 > 30 > 31 > 34 > 46 > 47			

Chapter 7
Dialup Services Cables

This chapter identifies dialup services cables necessary for linking Bay Networks router hardware platforms to WAN dial-on-demand and dial backup devices.

Table 7-1 summarizes the cables. Detailed cable illustrations and pinout specifications follow.

Table 7-1. Dialup Services Cables

Order No.	Length	Physical Cable Description	Raise DTR	V.25bis	Page
7116	15 ft (4.57 m)	15-pin D-sub plug to RS-422 plug		√	7-3
7117	15 ft (4.57 m)	15-pin D-sub plug to RS-422 plug	√		7-5
7118	15 ft (4.57 m)	15-pin D-sub plug to RS-232 plug	√		7-7
7119	15 ft (4.57 m)	15-pin D-sub plug to RS-232 plug		√	7-8
7120	15 ft (4.57 m)	15-pin D-sub plug to V.35 plug		√	7-9
7121	15 ft (4.57 m)	15-pin D-sub plug to V.35 plug	√		7-10
7137	15 ft (4.57 m)	44-pin D-sub plug to V.35 plug	√		7-11
7138	15 ft (4.57 m)	44-pin D-sub plug to RS-232 plug	√		7-13
7139	15 ft (4.57 m)	44-pin D-sub plug to RS-422 plug	√		7-15
7933	15 ft (4.57 m)	50-pin to V.35 with raise DTR	√		7-17
7935	15 ft (4.57 m)	50-pin to RS-232 with raise DTR	√		7-19

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Illustrations for each cable with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for each of your interconnection requirements, you should

  -- Identify in this chapter a cable that satisfies your wiring requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)
- Pinouts for each connector and all associated signals
- Wire jumper identification for either connector (when applicable)

  For example, the 15-pin D-sub to RS-422 cable (Order No. 7116) lists internal wire connections (Pin 7 > 12; Pin 25 > 30) in the Remote Termination column. This indicates that you must connect pin 7 to pin 12 and pin 25 to pin 30 inside the remote connector.
- Grounding arrangements that isolate the chassis from the DC ground within the cable

15-Pin D-Sub to RS-422: V.25bis (Order No. 7116)

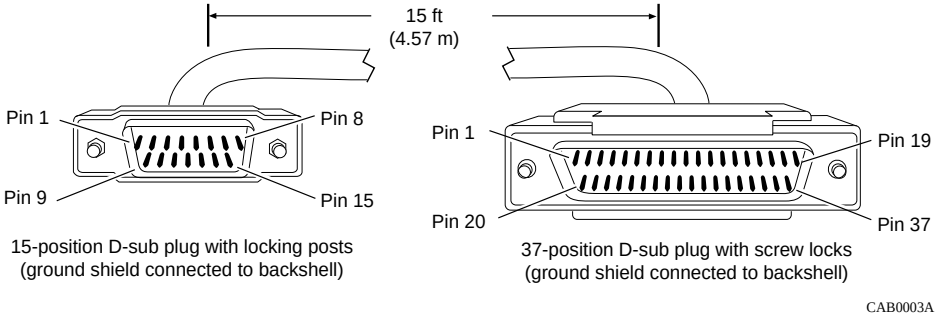

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	37	Send Ground
Send Data +	2	4	Send Data A
Send Data -	3	22	Send Data B
Serial Clock Transmit +	4	5	Send Timing A
Serial Clock Transmit -	5	23	Send Timing B
Request to Send +	6	7	Request to Send A
Clear to Send -	7	27	Clear to Send B
Clear to Send +	8	9	Clear to Send A
Data Carrier Detect -	9	29	Data Mode B
Data Carrier Detect +	10	11	Data Mode A
Serial Clock Receive -	11	26	Receive Timing B
Serial Clock Receive +	12	8	Receive Timing A
Receive Data -	13	24	Receive Data B
Receive Data +	14	6	Receive Data A
Request to Send -	15	25	Request to Send B
Internal Wire Connections			
		Pin 7 > 12 (Terminal Ready A)	
		Pin 25 > 30 (Terminal Ready B)	

Note: You must move Jumpers B and C to the X.21 (2-3) position to support this interface.

15-Pin D-Sub to RS-422: Raise DTR (Order No. 7117)

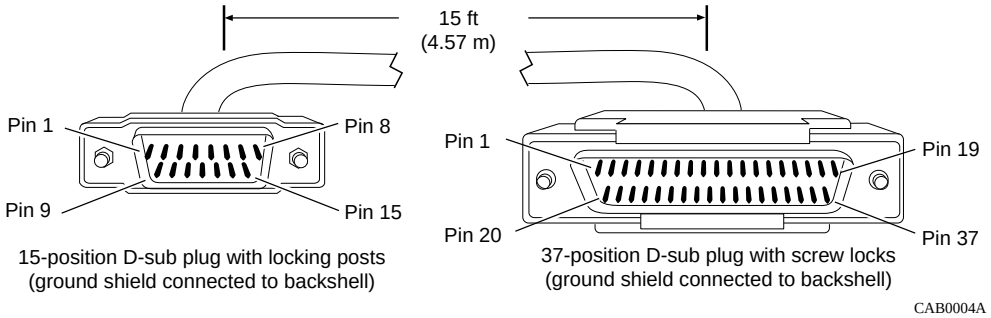

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		**Remote Termination**
Signal	**Pin # to Pin #**	**Signal**
Signal Ground	1	37	Send Ground
Send Data +	2	4	Send Data A
Send Data -	3	22	Send Data B
Serial Clock Transmit +	4	5	Send Timing A
Serial Clock Transmit -	5	23	Send Timing B
Request to Send +	6	7	Request to Send A
Clear to Send -	7	29	Data Mode B
Clear to Send +	8	11	Data Mode A
Data Carrier Detect +	10	15	Incoming Call
Serial Clock Receive -	11	26	Receive Timing B
Serial Clock Receive +	12	8	Receive Timing A
Receive Data -	13	24	Receive Data B
Receive Data +	14	6	Receive Data A
Request to Send -	15	25	Request to Send B
Internal Wire Connections		
Pin 1 > 9		Pin 7 > 12 (Terminal Ready A)
		Pin 25 > 30 > 37

Note: You must move Jumpers B and C to the X.21 (2-3) position to support this interface.

15-Pin D-Sub to RS-232: Raise DTR (Order No. 7118)

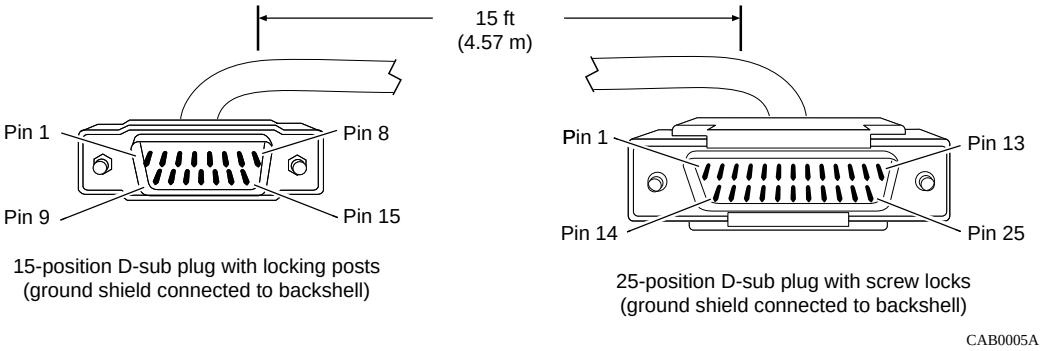

15-position D-sub plug with locking posts
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0005A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	7	Signal Ground
Transmitted Data	2	2	Transmitted Data
Transmitter Signal Element Timing (DTE Source)	3	24	Transmitter Signal Element Timing (DTE Source)
Transmitter Signal Element Timing (DCE Source)	4	15	Transmitter Signal Element Timing (DCE Source)
Request to Send	6	4	Request to Send
Clear to Send	8	6	Data Set Ready
Data Carrier Detect	10	22	Ring Indicator
Receiver Signal Element Timing (DCE Source)	12	17	Receiver Signal Element Timing (DCE Source)
Received Data	14	3	Received Data
Internal Wire Connections			
Pin 1 > 7 > 9		Pin 4 > 20 (Data Terminal Ready)	

15-Pin D-Sub to RS-232: V.25bis (Order No. 7119)

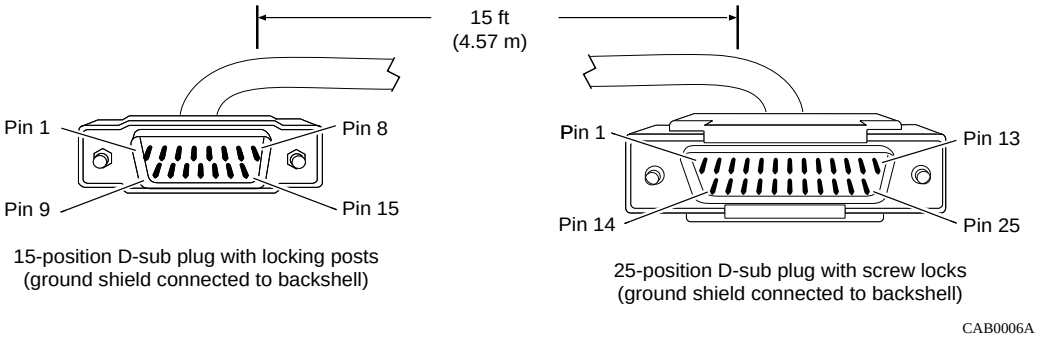

15-position D-sub plug with locking posts
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0006A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	7	Signal Ground
Transmitted Data	2	2	Transmitted Data
Transmitter Signal Element Timing (DTE Source)	3	24	Transmitter Signal Element Timing (DTE Source)
Transmitter Signal Element Timing (DCE Source)	4	15	Transmitter Signal Element Timing (DCE Source)
Request to Send	6	4	Request to Send
Clear to Send	8	5	Clear to Send
Data Carrier Detect	10	6	Data Set Ready
Receiver Signal Element Timing (DCE Source)	12	17	Receiver Signal Element Timing (DCE Source)
Received Data	14	3	Received Data
Internal Wire Connections			
Pin 1 > 7 > 9		Pin 4 > 20 (Data Terminal Ready)	

15-Pin D-Sub to V.35: V.25bis (Order No. 7120)

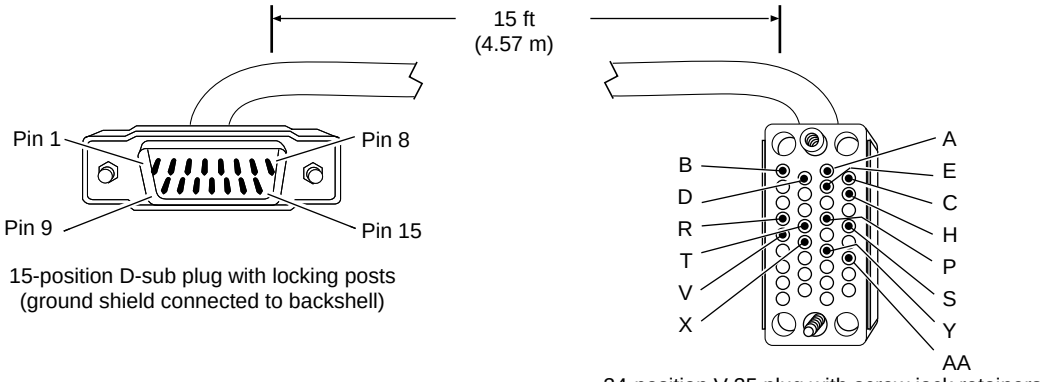

15-position D-sub plug with locking posts
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0007A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Send Data +	2	P	Send Data A
Send Data -	3	S	Send Data B
Serial Clock Transmit +	4	Y	Send Timing A
Serial Clock Transmit -	5	AA	Send Timing B
Request to Send +	6	C	Request to Send
Clear to Send +	8	D	Clear to Send
Data Carrier Detect +	10	E	Data Set Ready
Serial Clock Receive -	11	X	Receive Timing B
Serial Clock Receive +	12	V	Receive Timing A
Receive Data -	13	T	Receive Data B
Receive Data +	14	R	Receive Data A
Internal Wire Connections			
Pin 1 > 7 > 9		Pin C > H (Data Terminal Ready)	

15-Pin D-Sub to V.35: Raise DTR (Order No. 7121)

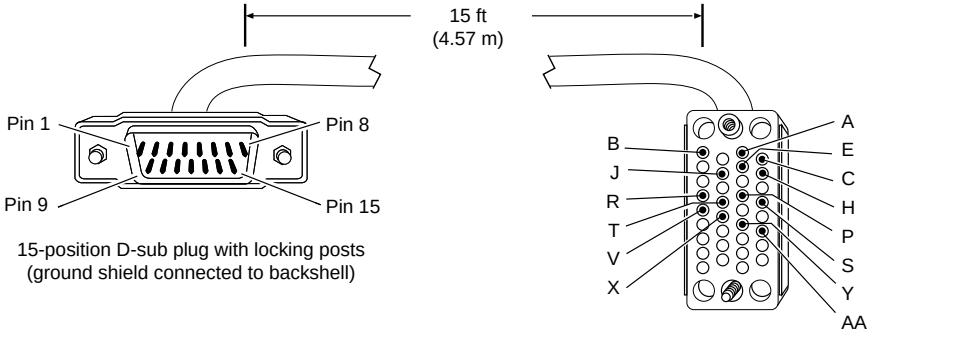

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Signal Ground	1	B	Signal Ground
Send Data +	2	P	Send Data A
Send Data -	3	S	Send Data B
Serial Clock Transmit +	4	Y	Send Timing A
Serial Clock Transmit -	5	AA	Send Timing B
Request to Send +	6	C	Request to Send
Clear to Send +	8	E	Data Set Ready
Data Carrier Detect +	10	J	Ring Indicator
Serial Clock Receive -	11	X	Receive Timing B
Serial Clock Receive +	12	V	Receive Timing A
Receive Data -	13	T	Receive Data B
Receive Data +	14	R	Receive Data A
Internal Wire Connections			
Pin 1 > 7 > 9		Pin C > H (Data Terminal Ready)	

44-Pin D-Sub to V.35: Raise DTR (Order No. 7137)

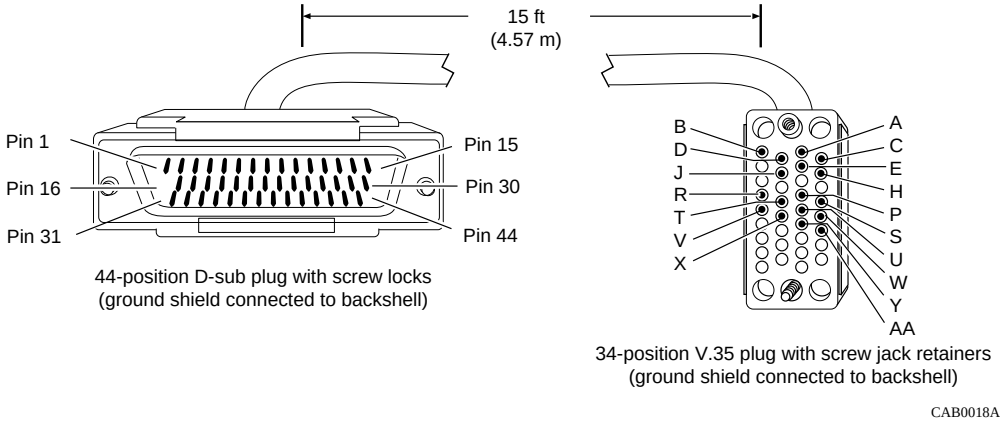

44-position D-sub plug with screw locks
(ground shield connected to backshell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0018A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	A	Frame Ground
Request to Send +	4	C	Request to Send
Clear to Send +	5	D	Clear to Send
Data Set Ready +	6	E	Data Set Ready
Data Terminal Ready +	8	H	Data Terminal Ready
Data Carrier Detect +	9	J	Ring Indicator
VTT +	40	U	Terminal Timing A
VTT -	39	W	Terminal Timing B
Signal Ground	19	B	Signal Ground
VST +	32	Y	Send Timing A
VST -	31	AA	Send Timing B
VRT +	34	V	Receive Timing A
VRT -	33	X	Receive Timing B
VRD +	37	R	Receive Data A
VRD -	35	T	Receive Data B
VSD +	38	P	Send Data A
VSD -	36	S	Send Data B
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 41 > 42 > 43			
Pin 13 > 28			
Pin 14 > 29			

44-Pin D-Sub to RS-232: Raise DTR (Order No. 7138)

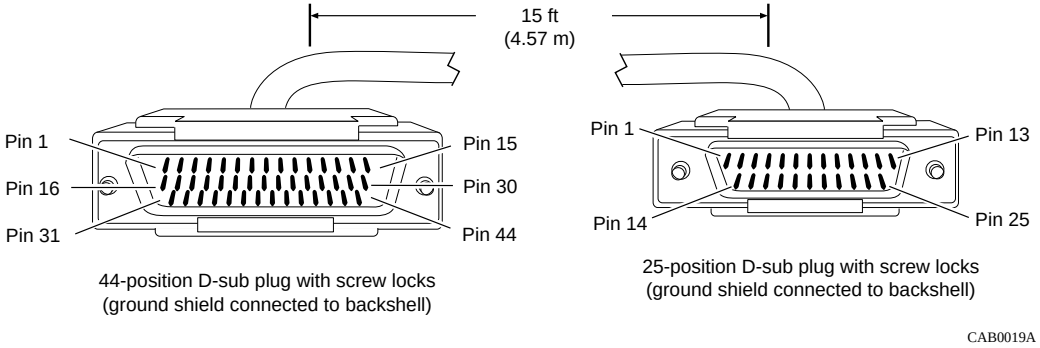

44-position D-sub plug with screw locks
(ground shield connected to backshell)

25-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0019A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send +	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Signal Ground	7	7	Signal Ground
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	22	Ring Indicator
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Transmitter Signal Element Timing +	12	24	Transmitter Signal Element Timing
Internal Wire Connections			
Pin 7 > 19 > 20 > 23			
Pin 13 > 28			
Pin 14 > 29			

44-Pin D-Sub to RS-422: Raise DTR (Order No. 7139)

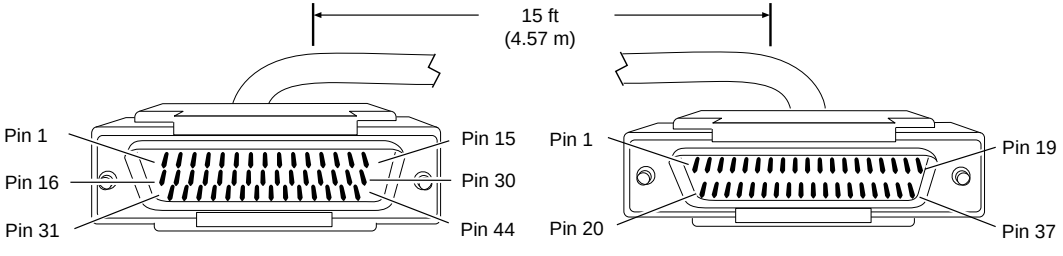

44-position D-sub plug with screw locks
(ground shield connected to backshell)

37-position D-sub plug with screw locks
(ground shield connected to backshell)

CAB0020A

Industry Interface Type: RS-449/RS-422

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	4	Send Data A
Send Data -	16	22	Send Data B
Receive Data +	3	6	Receive Data A
Receive Data -	17	24	Receive Data B
Request to Send +	4	7	Request to Send A
Request to Send -	18	25	Request to Send B
Clear to Send +	5	9	Clear to Send A
Clear to Send -	19	27	Clear to Send B
Data Set Ready +	6	11	Data Mode A
Data Set Ready -	20	29	Data Mode B
Terminal Ready +	8	12	Data Terminal Ready A
Terminal Ready -	22	30	Data Terminal Ready B
Data Carrier Detect +	9	15	Ring Indicator
Send Timing +	10	5	Send Timing A
Send Timing -	24	23	Send Timing B
Receive Timing +	11	8	Receive Timing A
Receive Timing -	25	26	Receive Timing B
Terminal Timing +	12	17	Terminal Timing A
Terminal Timing -	26	35	Terminal Timing B
Send Common	44	37	Send Common
Signal Ground	41	19	Signal Ground
Internal Wire Connections			
Pin 13 > 28			
Pin 14 > 29			
Pin 23 > 41 > 43			

50-Pin to V.35 with Raise DTR (Order No. 7933)

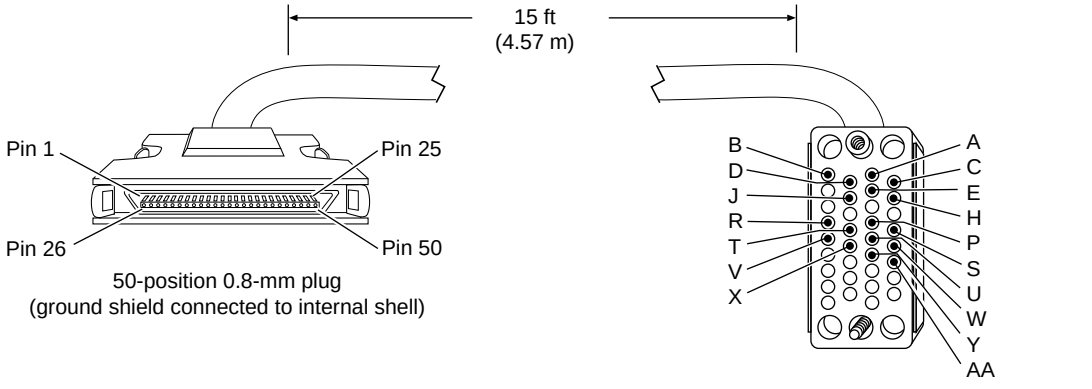

50-position 0.8-mm plug
(ground shield connected to internal shell)

34-position V.35 plug with screw jack retainers
(ground shield connected to backshell)

CAB0071A

Industry Interface Type: V.35 (V.10 and V.11)

Bay Networks Termination		Remote Termination	
Signal	**Pin # to Pin #**		**Signal**
VSD +	44	P	Send Data A
VSD -	19	S	Send Data B
VRT +	42	V	Receive Timing A
VRT -	17	X	Receive Timing B
VST +	41	Y	Send Timing A
VST -	16	AA	Send Timing B
VRD +	43	R	Receive Data A
VRD -	18	T	Receive Data B
Data Set Ready +	6	E	Data Set Ready
Data Terminal Ready +	8	H	Data Terminal Ready
Request to Send +	4	C	Request to Send
Clear to Send +	5	D	Clear to Send
VTT +	45	U	Terminal Timing A
VTT -	20	W	Terminal Timing B
Frame Ground	1	A	Frame Ground
Data Carrier Detect +	9	J	Ring Indicator
Signal Ground	30	B	Signal Ground
Internal Wire Connections			
Pin 7 > 30 > 31 > 34			
Pin 46 > 47 > 48			
Pin 13 > 38			
Pin 14 > 39			

50-Pin to RS-232 with Raise DTR (Order No. 7935)

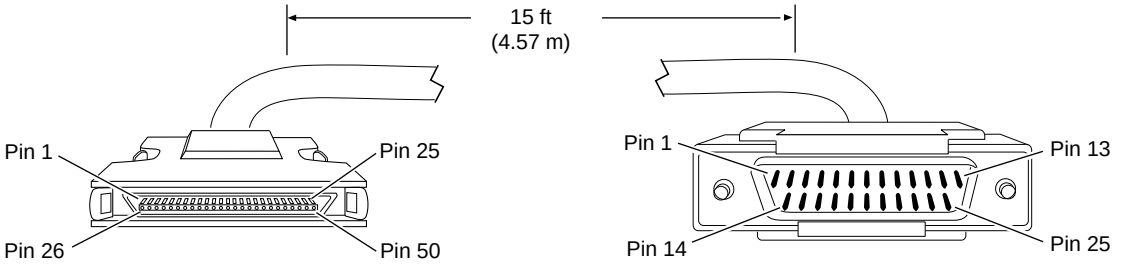

CAB0072A

Industry Interface Type: RS-232-C

Bay Networks Termination		**Remote Termination**	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data
Receive Data +	3	3	Receive Data
Request to Send +	4	4	Request to Send
Clear to Send +	5	5	Clear to Send
Data Set Ready +	6	6	Data Set Ready
Data Terminal Ready +	8	20	Data Terminal Ready
Data Carrier Detect +	9	22	Ring Indicator
Send Timing +	10	15	Send Timing
Receive Timing +	11	17	Receive Timing
Terminal Timing +	12	24	Terminal Timing
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 7 > 30 > 31 > 34			
Pin 13 > 38			
Pin 14 > 39			

Chapter 8
Cable Adapters

This chapter identifies the cable adapters that enable existing cables to connect to different ports. These cable assemblies automatically select the appropriate interface type.

Table 8-1 summarizes the cable adapters. Detailed cable illustrations and pinouts follow.

Table 8-1. Console/Modem Cables

Order No.	Length	Physical Cable Description	Page
7122	12 in. (0.3 m)	44-pin to 15-pin RS-232 cable adapter	8-3
7123	12 in. (0.3 m)	44-pin to 15-pin X.21 cable adapter	8-5
7124	12 in. (0.3 m)	44-pin to 15-pin V.35 cable adapter	8-7
7131	12 in. (0.3 m)	44-pin to 15-pin RS-422 cable adapter	8-9
7947	12 in. (0.3 m)	50-pin to 44-pin cable adapter	8-11
7948	12 in. (0.3 m)	50-pin to 15-pin V.35 cable adapter	8-14
AA0018024	12 in. (0.3 m)	50-pin to 15-pin RS-422 cable adapter	8-16

If you need to order additional cables, contact the Bay Networks Technical Response Center in your area. (See “How to Get Help” in the front matter.)

The following sections include

- Cable illustrations with the Bay Networks connector on the left and the remote connector on the right
- Cable length information

  If you want to build a cable, and you want to determine the maximum cable length appropriate for that interconnection requirement, you should

  -- Identify in this chapter a cable that satisfies your interconnection requirement (with the exception of total cable length)

  -- Consult the networking industry specification, standard, or recommendation designated in the “Industry Interface Type” entry for that cable (located immediately following the cable pinout diagram)
- Pinouts for each connector and all associated signals
- Internal wire connections for each termination (when applicable)

  For example, the 44-pin to 15-pin RS-232 cable adapter (Order No. 7122) lists internal wire connections such as “Pin 13 > 28” in the Bay Networks Termination column. This indicates that you must connect pin 13 to pin 28 inside the Bay Networks termination.
- Grounding arrangements that isolate the chassis from the DC ground within the cable (when applicable)

44-Pin to 15-Pin RS-232 Cable Adapter (Order No. 7122)

Note: This adapter enables you to connect an existing 15-pin RS-232 cable (Order No. 7255 or 7256) to a 44-pin port. This cable assembly automatically selects the RS-232 interface.

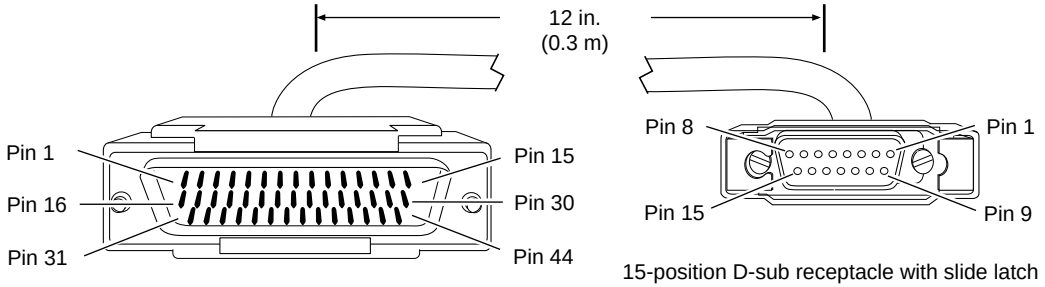

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub receptacle with slide latch
connected to backshell

CAB0010A

Industry Interface Type: RS-232-C

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination		**Termination to Existing Cable**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Send Data
Receive Data +	3	14	Receive Data
Request to Send +	4	6	Request to Send
Clear to Send +	5	8	Clear to Send
Data Set Ready +	6	15	Data Set Ready
Data Carrier Detect +	9	10	Data Carrier Detect
Send Timing +	10	4	Send Timing
Receive Timing +	11	12	Receive Timing
Transmitter Timing +	12	3	Transmitter Timing
Signal Ground	7	7	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23		Pin 1 > 7 > 9	
Pin 13 > 28			
Pin 14 > 29			

44-Pin to 15-Pin X.21 Cable Adapter (Order No. 7123)

Note: This adapter enables you to connect an existing 15-pin X.21 cable (Order No. 7221) to a 44-pin port. This cable assembly automatically selects the X.21 interface.

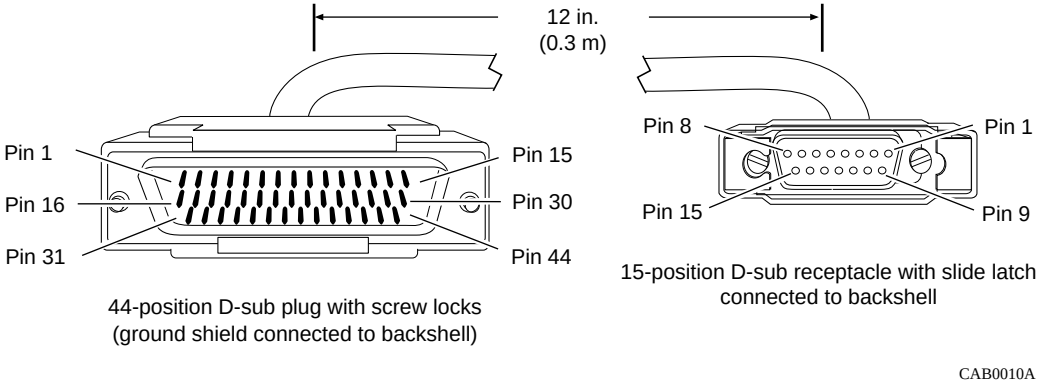

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub receptacle with slide latch
connected to backshell

CAB0010A

Industry Interface Type: X.21

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination			**Termination to Existing Cable**
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Send Data +
Send Data -	16	3	Send Data -
Receive Data +	3	14	Receive Data +
Receive Data -	17	13	Receive Data -
Data Carrier Detect +	9	10	Data Carrier Detect +
Data Carrier Detect -	23	9	Data Carrier Detect -
Request to Send +	4	6	Request to Send +
Request to Send -	18	15	Request to Send -
Send Timing +	10	4	Timing +
Send Timing -	24	5	Timing -
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23		Pin 1 > 7 > 9	
Pin 28 > 30		Pin 4 > 12	
Pin 14 > 15		Pin 5 > 11	
Pin 41 > 43			

44-Pin to 15-Pin V.35 Cable Adapter (Order No. 7124)

Note: This adapter enables you to connect an existing 15-pin V.35 cable (Order No. 7215 or 7216) to a 44-pin port. This cable assembly automatically selects the V.35 interface.

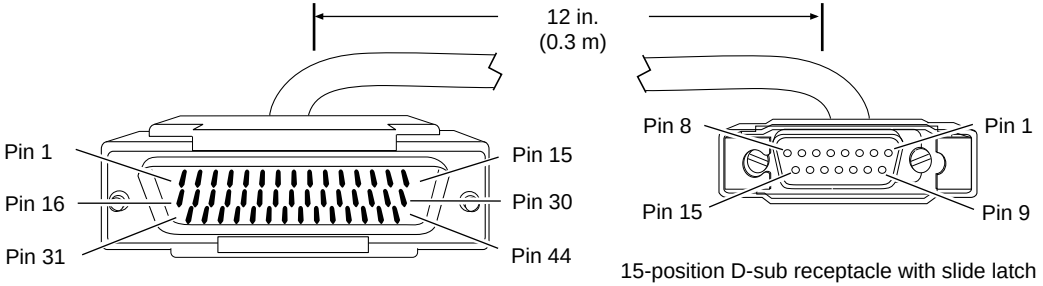

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub receptacle with slide latch
connected to backshell

CAB0010A

Industry Interface Type: V.35

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination		**Termination to Existing Cable**	
Signal	**Pin # to Pin #**		**Signal**
VRD +	37	14	Receive Data +
VRD -	35	13	Receive Data -
VSD +	38	2	Send Data +
VSD -	36	3	Send Data -
Data Carrier Detect +	9	10	Data Carrier Detect +
Request to Send +	4	6	Request to Send +
Clear to Send +	5	8	Clear to Send +
Data Set Ready +	6	15	Data Set Ready +
VRT +	34	12	Receive Timing +
VRT -	33	11	Receive Timing -
VST +	32	4	Send Timing +
VST -	31	5	Send Timing -
Signal Ground	19	1	Signal Ground
Internal Wire Connections			
Pin 7 > 19 > 20 > 23		Pin 1 > 7 > 9	
Pin 13 > 28			
Pin 14 > 29			
Pin 41 > 42 > 43			

44-Pin to 15-Pin RS-422 Cable Adapter (Order No. 7131)

Note: This adapter enables you to connect an existing 15-pin RS-422 cable (Order No. 7315 or AA0018011) to a 44-pin port. This cable assembly automatically selects the RS-422 interface.

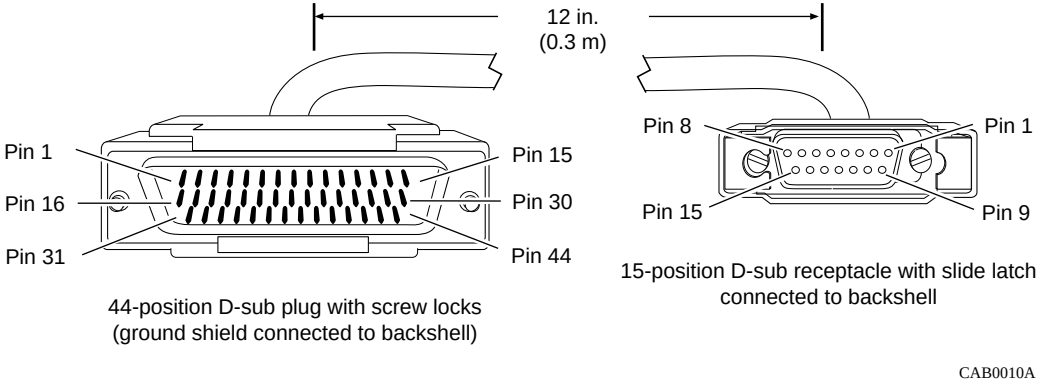

44-position D-sub plug with screw locks
(ground shield connected to backshell)

15-position D-sub receptacle with slide latch
connected to backshell

CAB0010A

Industry Interface Type: RS-422

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination		**Termination to Existing Cable**	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Send Data +
Send Data -	16	3	Send Data -
Receive Data +	3	14	Receive Data +
Receive Data -	17	13	Receive Data -
Data Carrier Detect +	9	10	Data Carrier Detect +
Data Carrier Detect -	23	9	Data Carrier Detect -
Request to Send +	4	6	Request to Send +
Request to Send -	18	15	Request to Send -
Clear to Send +	5	8	Clear to Send +
Clear to Send -	19	7	Clear to Send -
Send Timing +	10	4	Serial Clock Transmit +
Send Timing -	24	5	Serial Clock Transmit -
Receive Timing +	11	12	Serial Clock Receive +
Receive TIming -	25	11	Serial Clock Receive -
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 13 > 28			
Pin 14 > 29			
Pin 41 > 43			

50-Pin to 44-Pin Cable Adapter (Order No. 7947)

Note: This adapter cable allows you to connect an existing 44-pin cable to a 50-pin port. The interface is automatically selected.

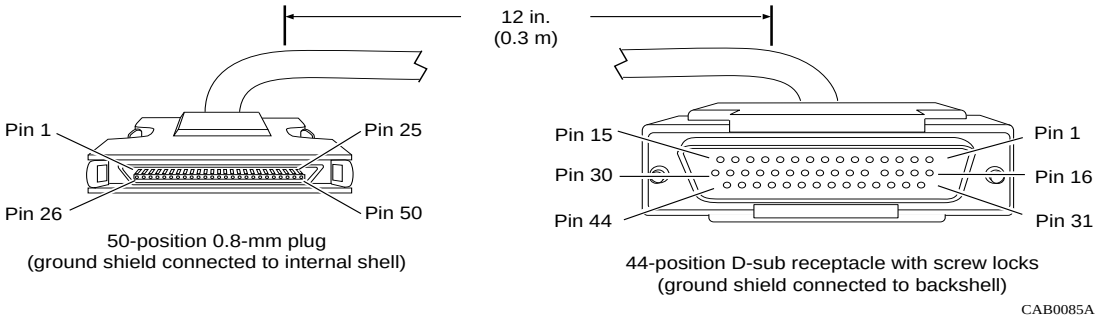

Industry Interface Type: Cable-dependent

Bay Networks 50-Pin Termination		Bay Networks 44-Pin Termination	
Signal	**Pin # to Pin #**		**Signal**
Frame Ground	1	1	Frame Ground
Send Data +	2	2	Send Data +
Send Data -	27	16	Send Data -
Receive Data +	3	3	Receive Data +
Receive Data -	28	17	Receive Data -
Request to Send +	4	4	Request to Send +
Request to Send -	29	18	Request to Send -
Clear to Send +	5	5	Clear to Send +
Clear to Send -	30	19	Clear to Send -
Data Set Ready +	6	6	Data Set Ready +
Data Set Ready -	31	20	Data Set Ready -
Signal Ground	7	7	Signal Ground
Data Terminal Ready +	8	8	Data Terminal Ready +
Data Terminal Ready -	33	22	Data Terminal Ready -
Data Carrier Detect +	9	9	Data Carrier Detect +
Data Carrier Detect -	34	23	Data Carrier Detect -
Send Timing +	10	10	Send Timing +
Send Timing -	35	24	Send Timing -
Receive Timing+	11	11	Receive Timing +
Receive Timing-	36	25	Receive Timing -
Transmitter Timing+	12	12	Transmitter Timing +
Transmitter Timing-	37	26	Transmitter Timing -
RTIN#	13	13	RTIN#
RTINB#	38	28	RTINB#
Clear to Send#	14	14	Clear to Send#
CTSIN#	39	29	CTSIN#
RTS#	15	15	RTS#
ST#	40	30	ST#
V.35 Send Timing-	16	31	V.35 Send Timing-

Bay Networks 50-Pin Termination		Bay Networks 44-Pin Termination	
Signal	**Pin # to Pin #**		**Signal**
V.35 Send Timing +	41	32	V.35 Send Timing +
V.35 Receive Timing -	17	33	V.35 Receive Timing -
V.35 Receive Timing +	42	34	V.35 Receive Timing +
V.35 Receive Data -	18	35	V.35 Receive Data -
V.35 Receive Data +	43	37	V.35 Receive Data +
V.35 Send Data -	19	36	V.35 Send Data -
V.35 Send Data +	44	38	V.35 Send Data +
V.35 Transmitter Timing -	20	39	V.35 Transmitter Timing -
V.35 Transmitter Timing +	45	40	V.35 Transmitter Timing +
UNBE	46	41	UNBE
V35D	47	42	V35D
Ground	48	43	Ground
Send Common	49	44	Send Common

50-Pin to 15-Pin V.35 Cable Adapter (Order No. 7948)

Note: This adapter cable allows you to connect an existing 15-pin V.35 cable (Order No. 7215 or 7216) to a 50-pin port. The V.35 interface is automatically selected.

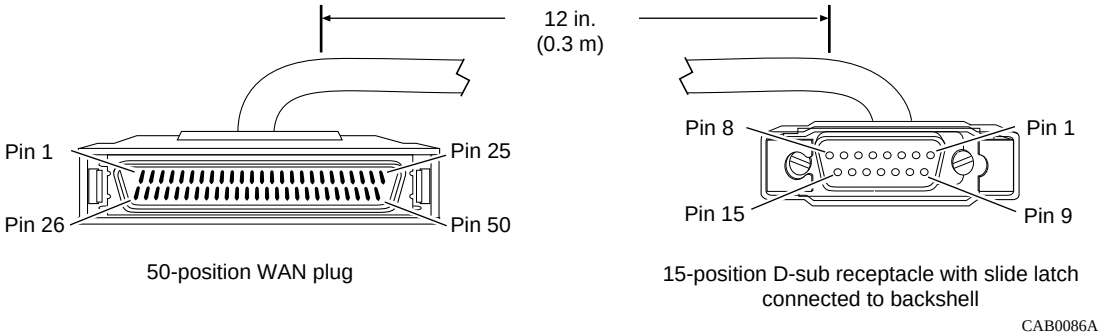

50-position WAN plug

15-position D-sub receptacle with slide latch connected to backshell

CAB0086A

Industry Interface Type: V.35

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination		Termination to Existing Cable	
Signal	**Pin # to Pin #**		**Signal**
V.35 Receive Data +	43	14	Receive Data +
V.35 Receive Data -	18	13	Receive Data -
V.35 Send Data +	44	2	Send Data +
V.35 Send Data -	19	3	Send Data -
Data Carrier Detect +	9	10	Data Carrier Detect +
Request to Send +	4	6	Request to Send +
Clear to Send +	5	8	Clear to Send +
Data Set Ready +	6	15	Data Set Ready +
V.RT +	42	12	Receive Timing +
VRT -	17	11	Receive Timing -
VRT +	14	4	Send Timing +
VRT -	16	5	Send Timing -
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 7 > 30 > 31 > 34		Pin 1 > 7 > 9	
Pin 13 > 38			
Pin 14 > 39			
Pin 46 > 47 > 48			

50-Pin to 15-Pin RS-422 Cable Adapter (Order No. AA0018024)

Note: This adapter cable allows you to connect an existing 15-pin RS-422 cable (Order No. 7315) to a 50-pin port. The RS-422 interface is automatically selected.

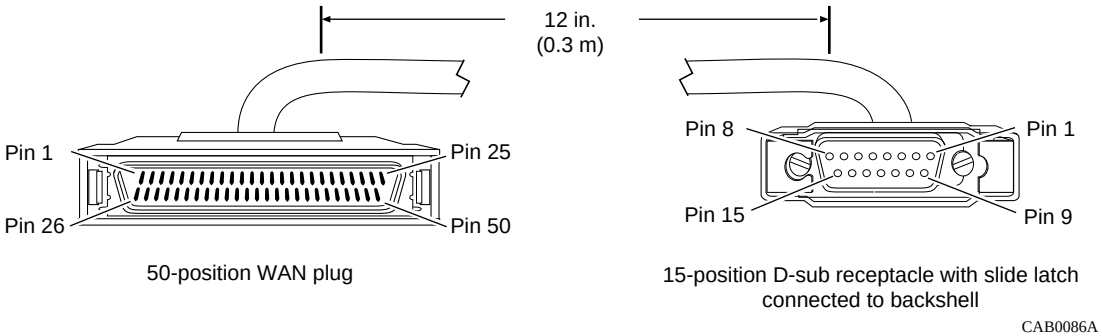

Industry Interface Type: RS-422

Caution: You cannot use this cable adapter to provide a clock (master) to an attached service. This is a passive straight-through cable.

Bay Networks Termination		Termination to Existing Cable	
Signal	**Pin # to Pin #**		**Signal**
Send Data +	2	2	Send Data +
Send Data -	27	3	Send Data -
Receive Data +	3	14	Receive Data +
Receive Data -	28	13	Receive Data -
Request to Send +	4	6	Request to Send +
Request to Send -	29	15	Request to Send -
Clear to Send +	5	8	Clear to Send +
Clear to Send -	30	7	Clear to Send -
Data Carrier Detect +	9	10	Data Carrier Detect +
Data Carrier Detect -	34	9	Data Carrier Detect -
Send Timing +	10	4	Serial Clock Transmit +
Send Timing -	35	5	Serial Clock Transmit -
Receive Timing +	11	12	Serial Clock Receive +
Receive Timing -	36	11	Serial Clock Receive -
Signal Ground	7	1	Signal Ground
Internal Wire Connections			
Pin 13 > 38			
Pin 14 > 39			
Pin 46 > 48			

Index

Symbols

7115, Ethernet cable, 3-3
7116, 15-pin to RS-422 (V.25bis) cable, 7-3
7117, 15-pin to RS-422 (raise DTR) cable, 7-5
7118, 15-pin to RS-232 (raise DTR) cable, 7-7
7119, 15-pin to RS-232 (V.25bis) cable, 7-8
7120, 15-pin to V.35 (V.25bis) cable, 7-9
7121, 15-pin to V.35 (raise DTR) cable, 7-10
7122, 44-pin to 15-pin RS-232 cable adapter, 8-3
7123, 44-pin to 15-pin X.21 cable adapter, 8-5
7124, 44-pin to 15-pin V.35 cable adapter, 8-7
7125, Token Ring MAU cable, 3-4
7126, Token Ring MAU cable (with ferrite bead), 3-5
7128, Token Ring to RJ-11 cable, 3-6
7131, 44-pin to 15-pin RS-422 cable adapter, 8-9
7135, FDDI FSD to FSD cable, 3-7
7136, FDDI FSD to straight-tip cable, 3-7
7137, 44-pin to V.35 (raise DTR) cable, 7-11
7138, 44-pin to RS-232 (raise DTR) cable, 7-13
7139, 44-pin to RS-422 (raise DTR) cable, 7-15
7150, MCT1 clock cable, 5-11
7151, MCT1 15-pin loopback connector, 5-12
7152, MCT1 RJ-48 loopback connector, 5-13
7153, MCT1 crossover cable, 5-14
7154, MCT1 RJ-48 loopback cable, 5-15
7155, MCT1 15-pin loopback cable, 5-16
7156, MCT1 RJ-48 straight-through cable, 5-17
7157, MCT1 15-pin straight-through cable, 5-18
7158, 15-pin to male V.35 cable, 6-17
7159, 44-pin to male V.35 cable, 6-18
7160, MCE1 crossover cable, 5-19
7161, MCE1 straight-through cable, 5-20
7162, MCE1 coaxial cable, 5-21
7163, FDDI SC duplex to SC duplex, MM fiber cable, 3-9
7164, FDDI SC duplex to straight-tip, SM fiber cable, 3-8
7165, FDDI SC duplex to SC duplex, SM fiber cable, 3-9
7167, MCE1 DB9 to DB15 straight-through cable, 5-22
7168, MCE1 DB9 to DB15 crossover cable, 5-23
7169, ATM cable, 3-10
7215, 15-pin to synchronous V.35 cable, 6-20
7216, 15-pin synchronous to V.35 with DTR cable, 6-22
7218, RS-232 synchronous pass-through cable, 6-23
7219, 15-pin synchronous to V.35 pass-through cable, 6-24
7220, 44-pin synchronous to V.35 cable, 6-26
7221, 15-pin synchronous to X.21 cable, 6-28
7224, 44-pin synchronous to X.21 cable, 6-29
7255, 15-pin synchronous to RS-232 cable, 6-30
7256, 15-pin synchronous to V.28 cable, 6-31
7260, 15-pin to 15-pin crossover cable, 6-32
7315, 15-pin synchronous to RS-422 cable, 6-34

7318, 44-pin synchronous to RS-422 cable, 6-36
7401, T1 to CSU DTE cable, 5-24
7415, T1 to Customer Premise Equipment cable, 5-25
7525, console cable, for all except AFN and AN, 2-3
7526, console cable, AFN/AN only, 2-4
7527, AT serial console cable, 2-5
7650, CSU network receptacle to RJ-45 cable, 5-26
7750, CSU network receptacle to spade terminals cable, 5-27
77850, modem cable for BLN, BLN-2, or BCN platforms only, 2-7
7825, modem cable for all except BLN, BLN-2, or BCN platform, 2-6
7826, 44-pin synchronous to RS-232 cable, 6-38
7830, HSSI DCE to DTE, 10-ft cable, 4-3
7831, HSSI DCE to DTE, 50-ft cable, 4-3
7832, HSSI crossover cable, 4-5
7833, RS-232 synchronous pass-through cable, 6-39
7834, 44-pin to V.35 pass-through cable, 6-40
7835, V.35 44-pin to 44-pin crossover cable, 6-42
7836, V.35 44-pin to 15-pin crossover cable, 6-44
7837, 44-pin synchronous to V.28 cable, 6-46
7932, 50-pin to V.35 cable, 6-48
7933, 50-pin to V.35 (raise DTR) cable, 7-17
7934, 50-pin to RS-232 cable, 6-50
7935, 50-pin to RS-232 (raise DTR) cable, 7-19
7936, 50-pin to X.21 cable, 6-51
7937, 50-pin to RS-422 cable, 6-52
7938, 50-pin to 50-pin crossover cable, 6-54
7939, 50-pin to 15-pin crossover cable, 6-56
7940, 50-pin to 44-pin crossover cable, 6-58
7941, 15-pin to F RS-232 synchronous pass-through cable, 6-60
7942, 15-pin to F V.35 synchronous pass-through cable, 6-61
7943, 44-pin to F RS-232 synchronous pass-through cable, 6-62
7944, 44-pin to F V.35 synchronous pass-through cable, 6-63
7945, 50-pin to F RS-232 synchronous pass-through cable, 6-65
7946, 50-pin to F V.35 synchronous pass-through cable, 6-66
7947, 50-pin to 44-pin V.35 cable adapter, 8-11
7948, 50-pin to 15-pin V.35 cable adapter, 8-14

A

AA0018001, MCE1 DB9 to mod jack cable, 5-4
AA0018002, MCE1 DB9 to unterminated cable, 5-5
AA0018003, 15-pin to F X.21 synchronous pass-through cable, 6-4
AA0018004, 44-pin to F X.21 synchronous pass-through cable, 6-6
AA0018005, 50-pin to F X.21 synchronous pass-through cable, 6-8
AA0018006, Quad MCT1 clock cable, 5-6
AA0018011, 15-pin to RS-530 straight-through cable, 6-10
AA0018012, 44-pin to RS-530 straight-through cable, 6-12
AA0018013, 50-pin to RS-530 straight-through cable, 6-14
AA0018014, MCE1 RJ-45 to RJ-45 cable, 5-7
AA0018015, MCE1 RJ-45 to unterminated cable, 5-8
AA0018021, Quad MCT1 crossover cable, 5-9
AA0018022, Quad MCT1 straight-through cable, 5-10
AA0018023, 50-pin to V.28 cable, 6-16

AA0018024, 50-pin to 15-pin RS-422 cable adapter, 8-16
AFN/AN console interface to ASCII terminal cable, 2-4
ATM cable, SC to straight-tip MMF, 3-10
Attachment Unit Interface (AUI), defined, 1-9

B

basics, connector, 1-8
Bay Networks
  publications, ordering, xx
BLN, BLN-2, or BCN to modem cable, 2-7
building cables, 1-11

C

cable adapters
  RS-232 44-pin to 15-pin, 8-3
  RS-422 44-pin to a 15-pin, 8-9
  RS-422 50-pin to 15-pin, 8-16
  V.35 44-pin to 15-pin, 8-7
  V.35 50-pin to 15-pin, 8-14
  V.35 50-pin to 44-pin, 8-11
  X.21 44-pin to 15-pin, 8-5
cables
  building your own, 1-11
  finding in this guide, 1-4
  listed by category, 1-3
  type, 1-1
CCITT series connectors, defined, 1-9
channel service unit (CSU), 5-1
coaxial cables, MCE1, 5-21
CompuServe, Bay Networks forum on, xxiv
connection categories, 1-3
connectors
  MCT1 loopback
    15-pin, 5-12
    RJ-48, 5-13
  terminology, 1-8
  types, 1-9
  examples (diagram), 1-10
console cables
  AFN and AN only, 2-4
  all devices except AFN and AN, 2-3
  AT serial connection, 2-5
  listed, 2-1
crossover cables
  15-pin to 15-pin, 6-32
  50-pin to 15-pin, 6-56
  50-pin to 44-pin, 6-58
  50-pin to 50-pin, 6-54
  HSSI, 4-5
  MCE1
    9-pin to 15-pin, 5-23
    9-pin to 9-pin, 5-19
  MCT1
    15-pin to 15-pin, multichannel, 5-9
    15-pin to RJ-48, 5-14
  V.35
    44-pin to 15-pin, 6-44
    44-pin to 44-pin, 6-42
custom cables, 1-11
Customer Service FTP, xxiii
customer support, xxi
customer support programs, xxii

D

dialup services cables
  15-pin to RS-232 (raise DTR), 7-7
  15-pin to RS-232 (V.25bis), 7-8
  15-pin to RS-422 (raise DTR), 7-5
  15-pin to RS-422 (V.25bis), 7-3
  15-pin to V.35 (raise DTR), 7-10
  15-pin to V.35 (V.25bis), 7-9
  44-pin to RS-232 (raise DTR), 7-13
  44-pin to RS-422 (raise DTR), 7-15
  44-pin to V.35 (raise DTR), 7-11
  50-pin to RS-232 (raise DTR), 7-19
  50-pin to V.35 (raise DTR), 7-17
  listed, 7-1
DSX, 5-1

DTE to DCE connector, defined, 1-9
dust covers, fiber optic connector, 1-9

E

E1 cables
  listed, 5-1
Ethernet cable, 3-3

F

FC connector, defined, 1-9
FDDI cables, 3-7 to 3-9
fiber optic connector, dust cover, 1-9
finding cables by
  category, 1-3
  industry interface type, 1-12
  order number, 1-4
fixed shroud duplex (FSD) connector, defined, 1-9

H

how to use this guide, 1-2
HSSI cables
  crossover, 4-5
  DCE to DTE, 10 ft and 50 ft, 4-3
  listed, 4-1

I

industry interface type
  defined, 1-12
  E1, 5-4, 5-5, 5-7, 5-8
  E1/G.703, 5-19 to 5-23
  Ethernet/802.3, 3-3
  High-Speed Serial Interface (HSSI), 4-3, 4-5
  RS-232-C, 2-3, 2-4, 2-5, 2-6, 2-7, 6-23, 6-30, 6-38, 6-39, 6-50, 6-60, 6-62, 6-65, 7-7, 7-8, 7-13, 7-19, 8-3
  RS-422, 8-9, 8-14, 8-16
  RS-449/RS-422, 6-34, 6-36, 6-52, 7-3, 7-5, 7-15
  RS-530, 6-10, 6-12, 6-14
  T1/DS1, 5-9, 5-10, 5-14 to 5-18, 5-24 to 5-27
    with external clock, 5-6, 5-11
  token ring/802.5, 3-4 to 3-6
  V.28 (V.10), 6-16, 6-31, 6-46
  V.35, 6-32, 8-7, 8-11
  V.35 (V.10 and V.11), 6-17 to 6-22, 6-24, 6-26, 6-40, 6-42, 6-44, 6-48, 6-54, 6-56, 6-58, 6-61, 6-63, 6-66, 7-9, 7-10, 7-11, 7-17
  X.21, 6-4, 6-6, 6-8, 8-5
  X.21 (V.11), 6-28, 6-29, 6-51
  X3T9.5 PMD/FDDI, 3-7 to 3-10
industry standards, specifications, and recommendations, 1-11
InfoFACTS service, xxv
interface, defined, 1-8

L

local area network (LAN) cables
  Ethernet, 3-3
  FDDI, 3-7 to 3-9
  listed, 3-1
  Token Ring, 3-4 to 3-6
loopback cables, MCT1
  15-pin, 5-16
  RJ-48, 5-15
loopback connectors, MCT1
  15-pin, 5-12
  RJ-48, 5-13

M

MCE1 cables
  coaxial, 5-21
  crossover
    9-pin to 9-pin, 5-19
    DB9 to DB15, 5-23
  DB9 to mod jack, 5-4
  DB9 to unterminated, 5-5
  RJ-45 to RJ-45, 5-7
  RJ-45 to unterminated, 5-8

straight-through
9-pin to 9-pin, 5-20
DB9 to DB15, 5-22
MCT1, 5-1
MCT1 cables
15-pin to 15-pin and 9-pin (Y-cable), 5-6
clock, 5-11
crossover
15-pin to 15-pin, 5-9
15-pin to RJ-48, 5-14
loopback
15-pin connectors, 5-16
RJ-48 connectors, 5-15
straight-through, 5-10
15-pin, 5-18
RJ-48, 5-17
MCT1 loopback connectors
15-pin, 5-12
RJ-48, 5-13
media access unit (MAU), defined, 1-9
modem cable
BLN, BLN-2, and BCN platforms only, 2-7
for all except BLN, BLN-2, and BCN platforms, 2-6
listed, 2-1
multistation access unit (MAU), defined, 1-9

P

pass-through cables
15-pin to female RS-232, 6-60
15-pin to female V.35, 6-61
15-pin to female X.21, 5-4
15-pin to RS-232, 6-23
15-pin to V.35, 6-24
15-pin to X.21, 6-4
44-pin to female RS-232, 6-62
44-pin to female V.35, 6-63
44-pin to RS-232, 6-39
44-pin to X.21, 6-6
50-pin to female RS-232, 6-65
50-pin to female V.35, 6-66
50-pin to X.21, 6-8
physical interface, 1-8
pins, defined, 1-8
plug, defined, 1-8

R

receptacle, defined, 1-8
recommended series (RS), defined, 1-9
registered jack (RJ), defined, 1-9
RS-422 cables
15-pin to, 6-34
44-pin to, 6-36
50-pin to, 6-52
RS-530 cable
15-pin to, 6-10
44-pin to, 6-12
50-pin to, 6-14

S

SC duplex connector, defined, 1-9
sockets
defined, 1-8
software considerations, choice of cable, 1-2
spade terminals, defined, 1-9
special requirements, 1-1
specifications, cable, 1-11
standard synchronous cables
15-pin to RS-232, 6-30
15-pin to RS-422, 6-34
15-pin to V.28, 6-31
15-pin to V.35, 6-20
15-pin to V.35 with DTR, 6-22
15-pin to X.21, 6-28
44-pin to RS-232, 6-38
44-pin to RS-422, 6-36
44-pin to V.28, 6-46
44-pin to V.35, 6-26
44-pin to X.21, 6-29
50-pin to V.28, 6-16
listed, 6-1 to 6-3

V.35 44-pin to 15-pin crossover, 6-44
V.35 44-pin to 44-pin crossover, 6-42
standards, industry, 1-11
straight-tip connector, defined, 1-9
Support Source CD, xxiv
synchronous pass-through cables.
See pass-through cables

T

T1 cables
CSU DTE connection, 5-24
CSU network receptacle to RJ-45, 5-26
CSU network receptacle to spade terminals, 5-27
customer premises connection, 5-25
Framer, 5-24 to 5-26
listed, 5-1
multichannel clock, 5-11
multichannel crossover, 5-14
multichannel loopback, 5-15, 5-16
multichannel straight-through, 5-17, 5-18
quad multichannel, 5-6
quad multichannel crossover, 5-9
quad multichannel straight-through, 5-10
Technical Response Centers, xxv
technical support, xxi
termination, defined, 1-8
terminology, 1-8
Token Ring cables, 3-4 to 3-6

U

using this guide, 1-2

V

V.28 cables
15-pin to, 6-31
44-pin synchronous to, 6-46
50-pin synchronous to, 6-16
V.28 interface, defined, 1-9
V.35 cables
15-pin synchronous with DTR, 6-22
15-pin to, 6-20, 6-24
15-pin to male, 6-17
44-pin to, 6-26
44-pin to male, 6-18
50-pin to, 6-48
V.35 interface, defined, 1-9

W

World Wide Web, Bay Networks home page on, xxiii

X

X.21 (V.11) cables
15-pin to, 6-28
44-pin to, 6-29
50-pin to, 6-51
X.21 cables
15-pin to, 6-4
44-pin to, 6-6
44-pin to 15-pin cables adapter, 8-5
50-pin to, 6-8
X.21 interface, defined, 1-9
X3T9.5 PMD/FDDI cables
FDDI FSD to FSD, 3-7
SC duplex to SC duplex, 3-9
SC duplex to straight tip, 3-8
SC to straight tip MMF, 3-10